Introduction

Thank you very much for purchasing our product!

The heater description will provide you with detailed information about the heater's construction, technical specifications and operation. We recommend that you read this information carefully. This will help you avoid potential errors during your own installation and operation.

Detailed installation and operating conditions can be found in the General Operating Instructions (included in the delivery).

Notes in the text

EN



The most important are the notes marked WARNING. Notes marked WARNING alert you to a serious risk of damage to the heater or injury.



The note labeled Warning warns you of possible damage to your heater.



A note labeled Important alerts you to information important for the operation of your heater.



As such, the note draws your attention to information that is important for the operation of your heater in general.

Machine translation – not reviewed.
Unchanged original at the end.


Contents

1. Technical description 1
2. Spare parts list 2
2.1. Overall model breakdown 2
2.2. Detail A1..... 5
3. Easy control 6
4. Replacing the flue pipe 7
5. Air supply replacement 8
6. Locking the door in the open position..... 9

Machine translation – not reviewed.
Unchanged original at the end.

2. Spare parts list

2.1. Exploded view of the model

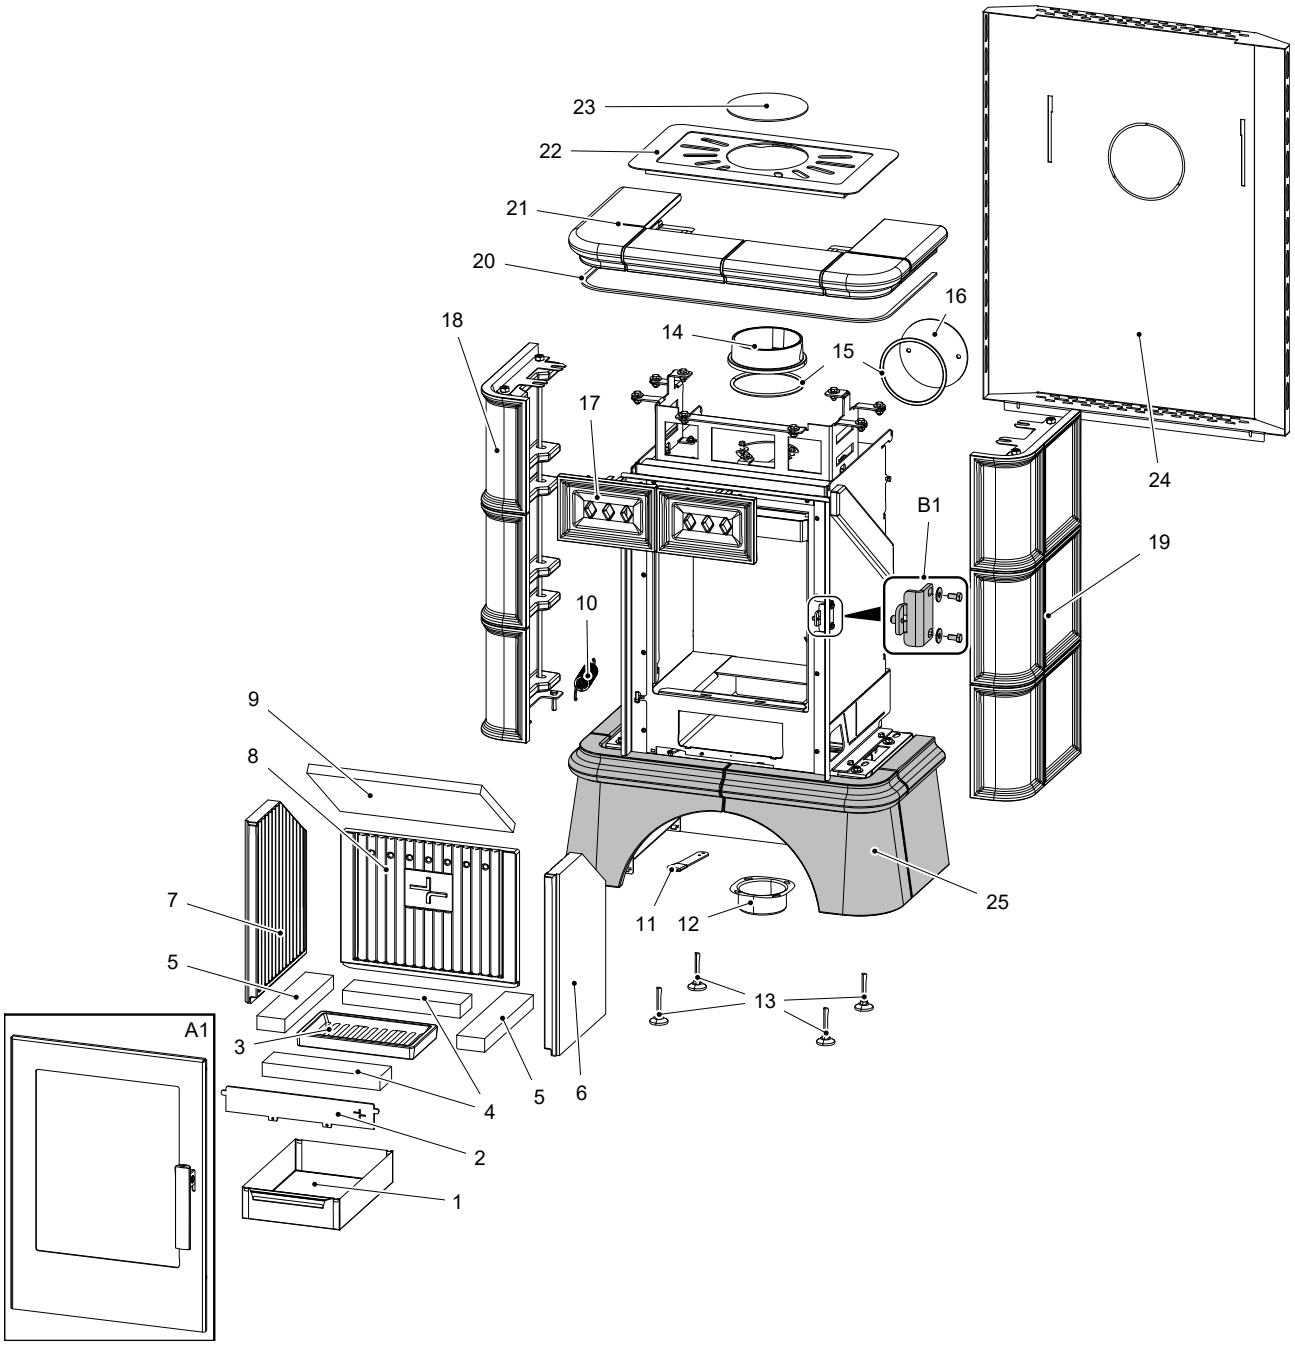


Position	Name	Amount	Item number
Exploded view of the model			
A1	Firebox door (set)/black	1 pc	0424637005300
B1	Closing pin (complete)	1 pc	0424637005001
1	Ash pan	1 pc	0424617405600

Machine translation – not reviewed.
Unchanged original at the end.

2	Barrier/black	1 pc	0424617405005
3	Grate/black	1 pc	0429415005005
4	Brick 30x70x261	2 pcs	0424617405506
5	Brick 30x62x292	2 pcs	0424617405505
6	Right side (30x300x415)	1 pc	0428315005502
7	Left side (30x300x415)	1 pc	0428315005503
8	Back (30x390x320)	1 pc	0428315005501
9	Aperture (vermiculite)	1 pc	0424617405504
10	Door spring	1 pc	0428612005002
11	Regulator rod/black	1 pc	0424637005015
12	External air supply (Ø100)	1 pc	0088500050008
13	Foot spreader	4 pcs	0089000020005
14	Flue/black	1 pc	0494015005020
15	Flue pipe cord seal 8x2 mm	470 mm	0040208020006
16	Flue pipe plug/black	1 pc	0424617405011
17	Tiled front/honeycomb	1 pc	0424637005100
17	Tiled front/green	1 pc	0424637015100
17	Tiled front/ivory	1 pc	0424637025100
17	Tiled front/brown	1 pc	0424637035100
18	Tiled side left/honeycomb	1 pc	0332015036100
18	Tiled side left/green	1 pc	0332015106100
18	Tiled side left/ivory	1 pc	0332015056100
18	Tiled side left/brown	1 pc	0332015026100
19	Tiled side right/honeycomb	1 pc	0332015036101
19	Tiled side right/green	1 pc	0332015006101
19	Tiled side right/ivory	1 pc	0332015056101
19	Tiled side right/brown	1 pc	0332015026101
20	Sealing cord 10x4 mm	1350 mm	0040210040005
21	Tiled cornice/honeycomb	1 pc	0424637005110
21	Tiled cornice/green	1 pc	0424637015110
21	Tiled cornice/ivory	1 pc	0424637025110
21	Tiled cornice/brown	1 pc	0424637035110
22	Lid/black	1 pc	0332015006155
23	Lid cover/black	1 pc	0331415005060
24	Back cover/black	1 pc	0424637005120
25	Tiled pedestal/honeycomb	1 pc	0433915036180
25	Tiled pedestal/green	1 pc	0433915006180

Machine translation – not reviewed.
Unchanged original at the end.

2.2. Detail A1

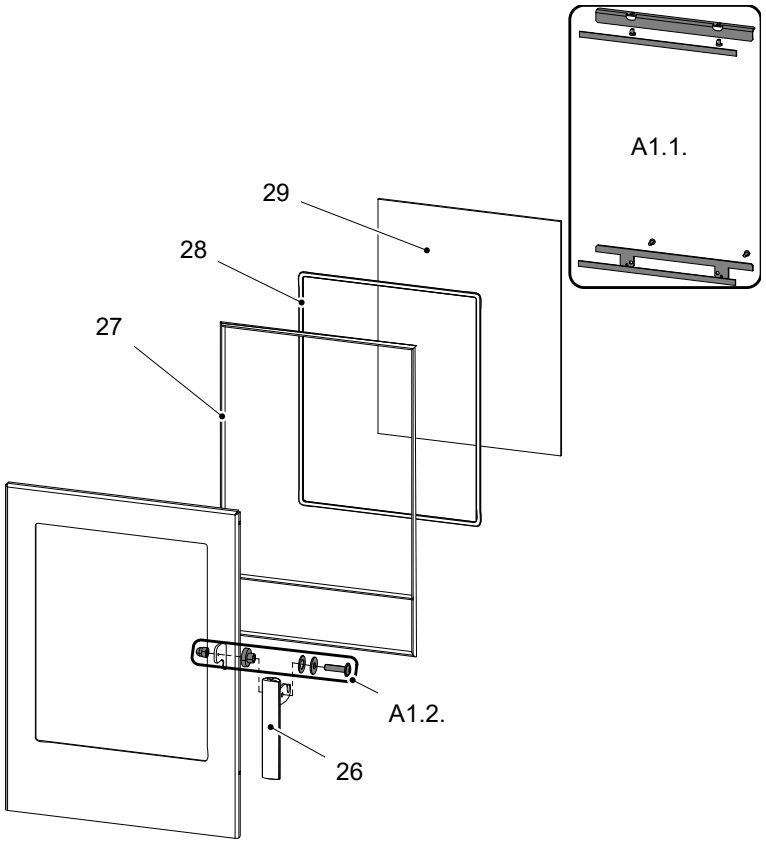

Position	Name	Amount	Item number
Detail A1			
A1.1.	Glass holder – set/black	1 pc	0424637005303
A1.2.	Handle fasteners – set	1 pc	0424637005315
26	Firebox door lever lock (complete set)	1 pc	0424618005310
27	Door sealing cord 12 mm	2200 mm	0041012120005
28	Glass sealing cord 8x2 mm	1500 mm	0040210040005
29	Heat-resistant glass (4x338x431)	1 pc	0424637005301

Machine translation – not reviewed.
Unchanged original at the end.


3. Easy control


Control of all three air inlets - primary, secondary, tertiary - using just one regulator.

1. The regulator is in the position designated for ignition (Fig. A). All three air inlets (primary, secondary, tertiary) are open.
2. Setting the Easy control regulator in heating mode (fig. B).
3. The regulator is in the position designated for closing the air inlets (fig. C). No inlet is open (primary, secondary, tertiary). This position is only used when the stove is out of operation, after the heating process has ended.

WARNING

During the heating process, the air inlets must not be closed (Fig. C)! In extreme cases, an explosion in the stove may occur, resulting in glass shattering, embers scattering around the room and a fire.

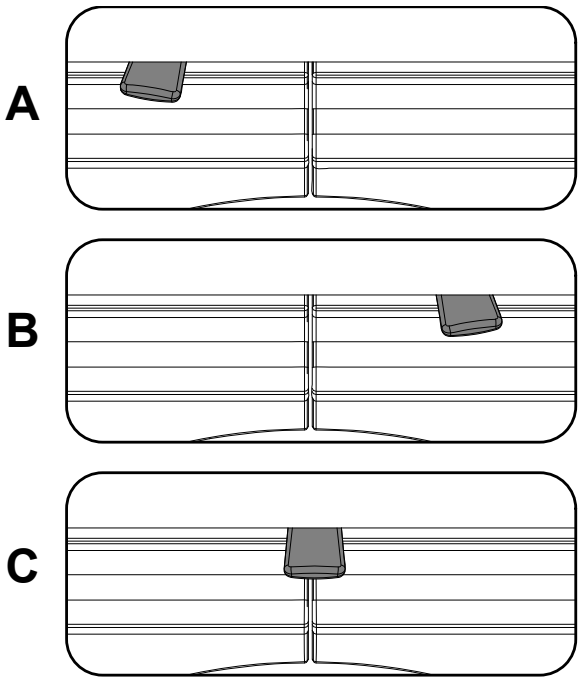

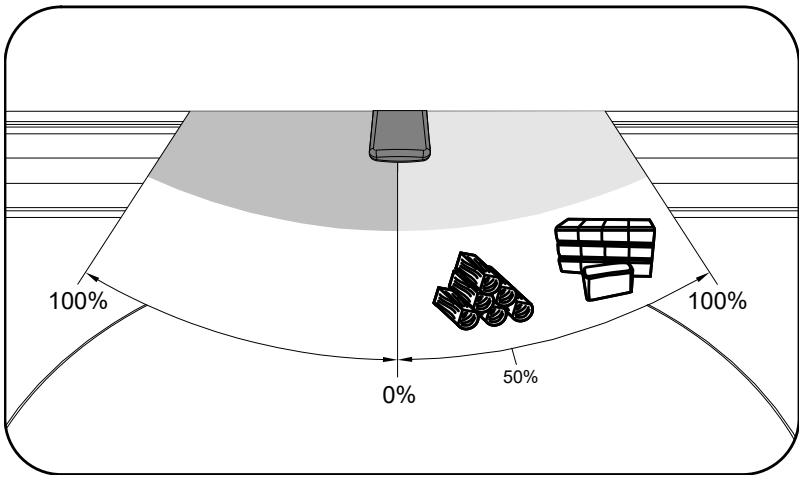


Machine translation – not reviewed.
Unchanged original at the end.

6. Locking the door in the open position

You can lock the firebox door in the open position to make cleaning more convenient. Use the latch to secure the door, see the image below.

WARNING

Never heat in a stove with the door open!

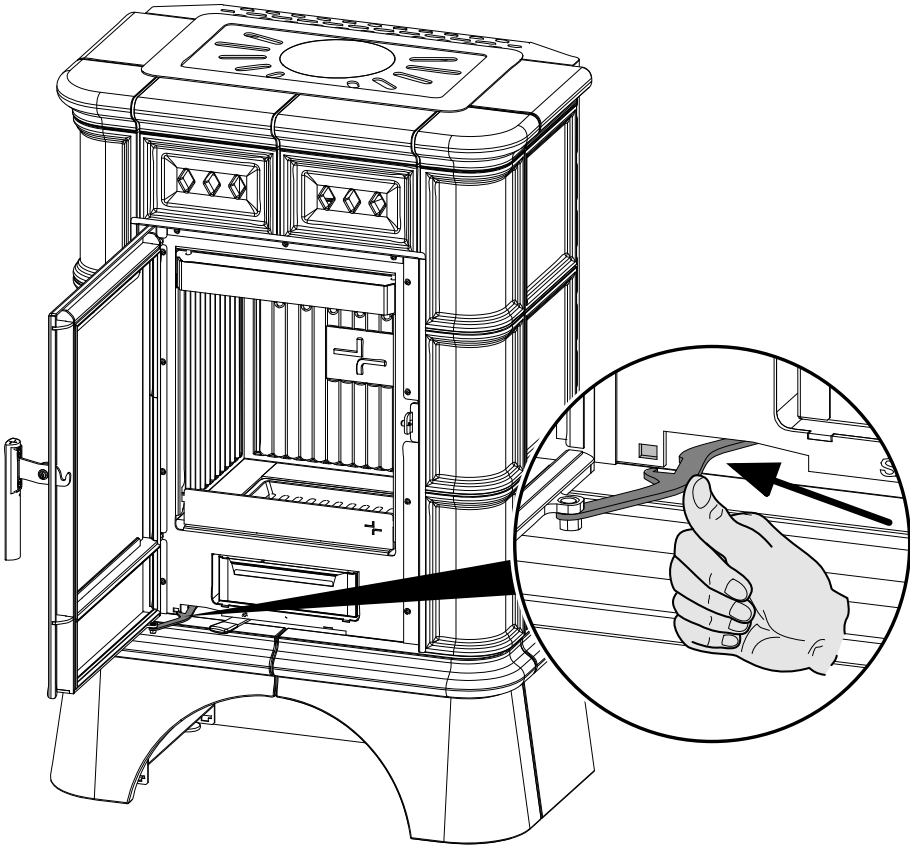

Machine translation – not reviewed.
Unchanged original at the end.

HAAS + SOHN

Faro

Technická dokumentace
Krbová kamna

CZ

0424637001400d

Úvod

Srdečně děkujeme za zakoupení našeho výrobku!

Popis topidla Vás podrobně seznámí s konstrukcí, technickou specifikací a obsluhou topidla. Doporučujeme seznámit se pozorně s těmito údaji. Vyvarujete se tak případných chyb při vlastní montáži a obsluze.

Podrobné podmínky instalace a obsluhy naleznete ve Všeobecném návodu k obsluze (součást dodávky).

Poznámky v textu



Nejdůležitější jsou poznámky nadepsané **VAROVÁNÍ**. Poznámky nadepsané **VAROVÁNÍ** Vás upozorňují na **vážné nebezpečí poškození topidla či poranění.**



Poznámka nadepsaná **Upozornění** Vás upozorňuje na možná poškození Vašeho topidla.



Poznámka nadepsaná **Důležité** Vás upozorňuje na informace důležité k provozu Vašeho topidla.




Poznámka jako taková Vás upozorňuje zcela obecně na informace důležité k provozu Vašeho topidla.

CZ

Obsah


1. Technický popis 1
2. Seznam náhradních dílů 2
2.1. Celkový rozstřel modelu 2
2.2. Detail A1 5
3. Easy control 6
4. Záměna kouřovodu 7
5. Záměna přívodu vzduchu 8
6. Zajištění dvířek v otevřené poloze 9

1. Technický popis

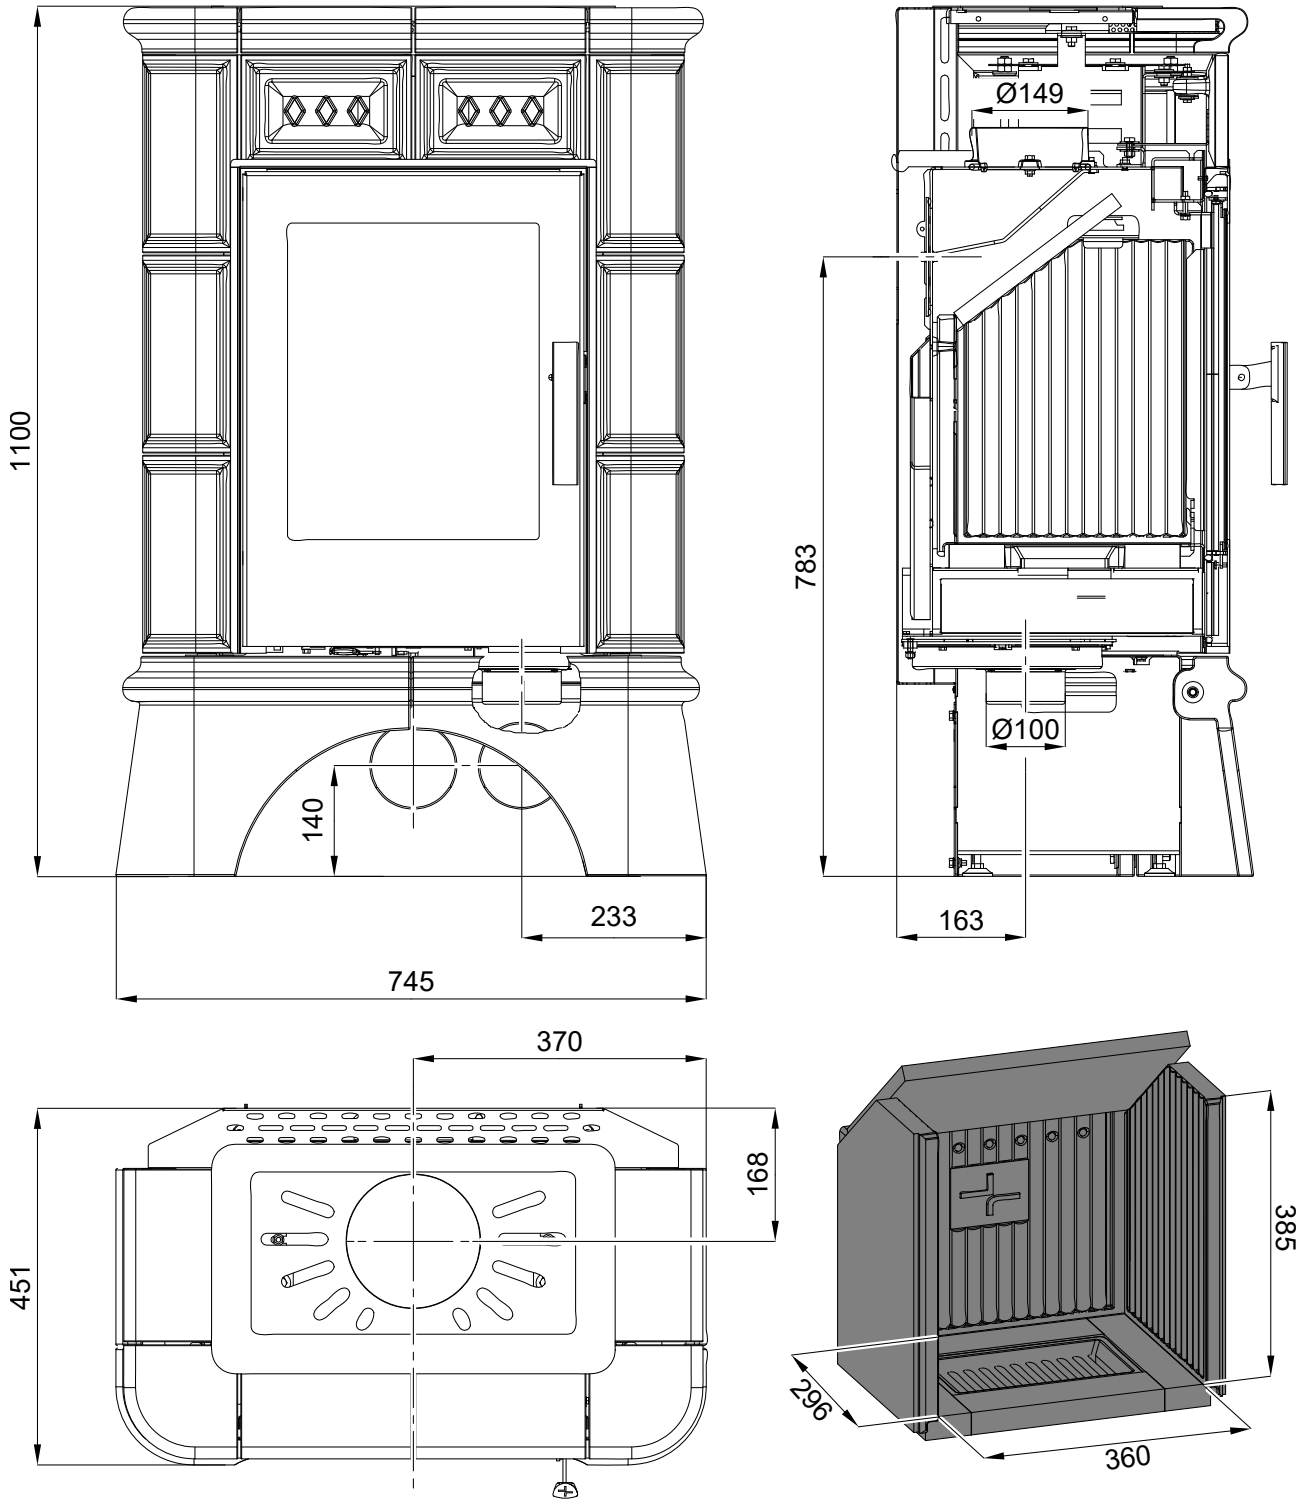

2. Seznam náhradních dílů

2.1. Celkový rozstřel modelu

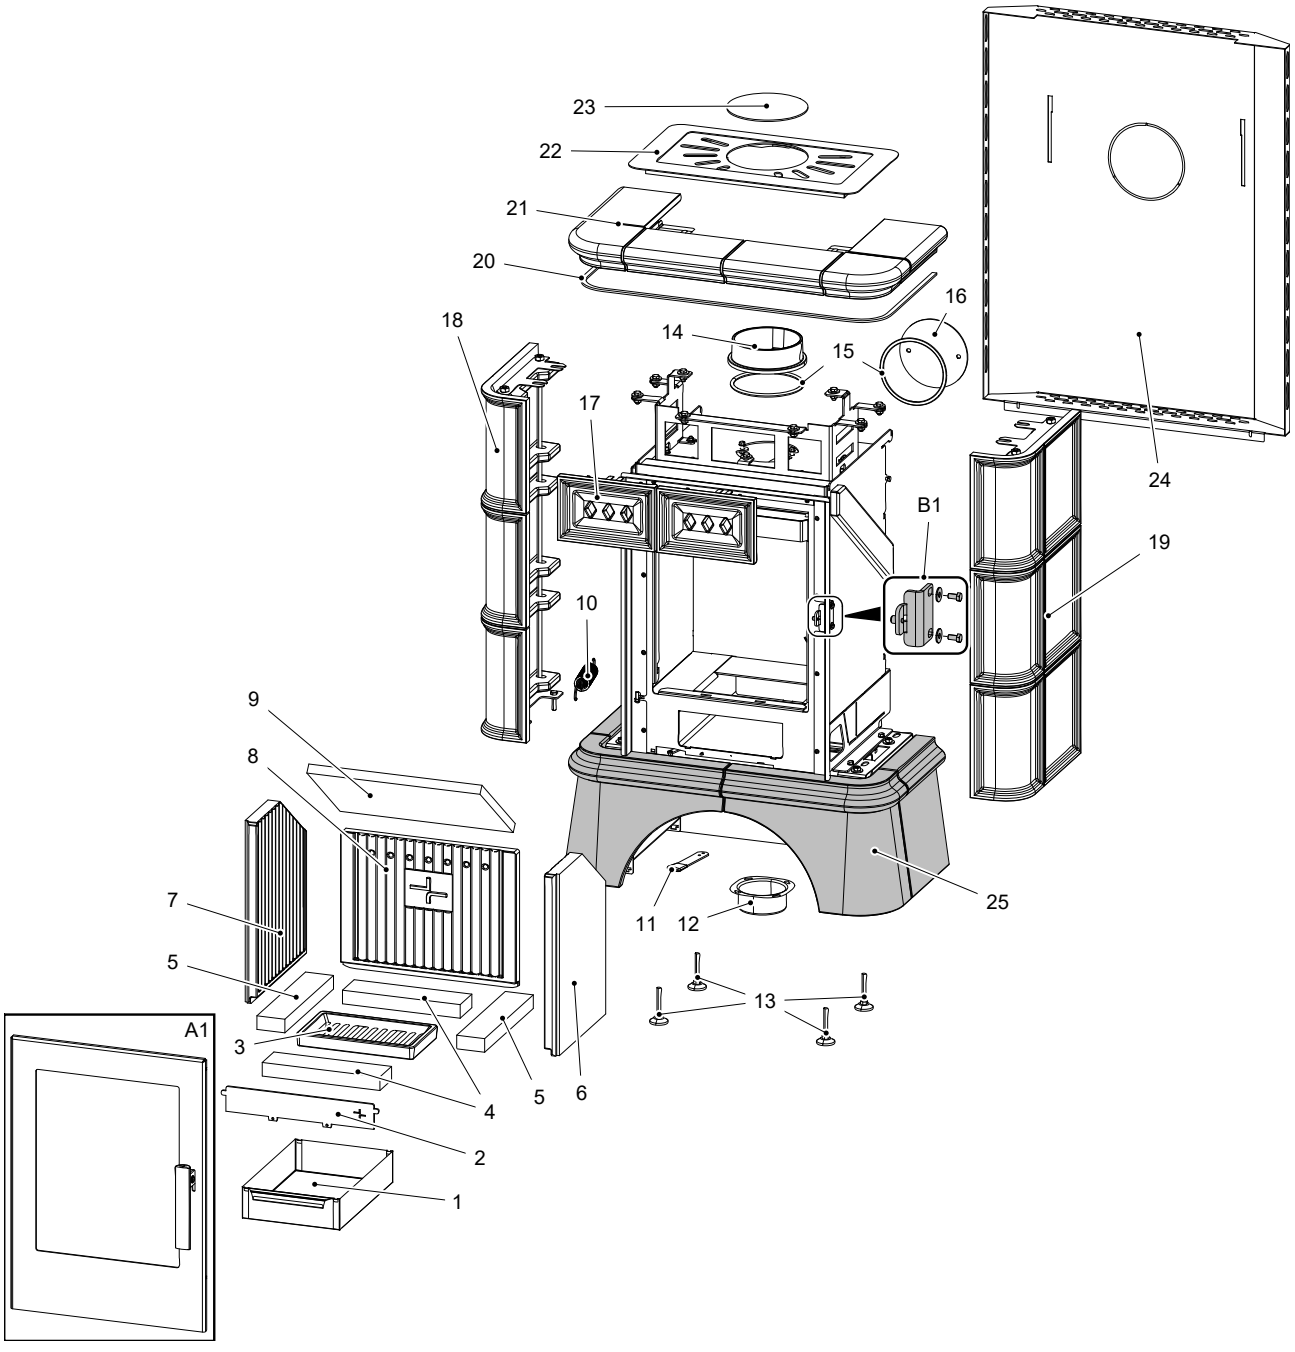


Pozice	Název	Množství	Číslo zboží
Celkový rozstřel modelu			
A1	Dvířka topeniště (komplet)/černá	1 ks	0424637005300
B1	Čep zavírání (komplet)	1 ks	0424637005001
1	Popelník	1 ks	0424617405600

2	Zábrana/černá	1 ks	0424617405005
3	Rošt/černá	1 ks	0429415005005
4	Cihla 30x70x261	2 ks	0424617405506
5	Cihla 30x62x292	2 ks	0424617405505
6	Bok pravý (30x300x415)	1 ks	0428315005502
7	Bok levý (30x300x415)	1 ks	0428315005503
8	Záda (30x390x320)	1 ks	0428315005501
9	Clona (vermiculite)	1 ks	0424617405504
10	Pružina dveří	1 ks	0428612005002
11	Táhlo regulátoru/černá	1 ks	0424637005015
12	Externí přívod vzduchu (Ø100)	1 ks	0088500050008
13	Noha štelovací	4 ks	0089000020005
14	Kouřovod/černá	1 ks	0494015005020
15	Těsnění šňůra kouřovodu 8x2 mm	470 mm	0040208020006
16	Záslepka kouřovodu/černá	1 ks	0424617405011
17	Kachlové čelo/medovník	1 ks	0424637005100
17	Kachlové čelo/zelená	1 ks	0424637015100
17	Kachlové čelo/slonová kost	1 ks	0424637025100
17	Kachlové čelo/hnědá	1 ks	0424637035100
18	Kachlový bok levý/medovník	1 ks	0332015036100
18	Kachlový bok levý/zelená	1 ks	0332015106100
18	Kachlový bok levý/slonová kost	1 ks	0332015056100
18	Kachlový bok levý/hnědá	1 ks	0332015026100
19	Kachlový bok pravý/medovník	1 ks	0332015036101
19	Kachlový bok pravý/zelená	1 ks	0332015006101
19	Kachlový bok pravý/slonová kost	1 ks	0332015056101
19	Kachlový bok pravý/hnědá	1 ks	0332015026101
20	Těsnící šňůra 10x4 mm	1350 mm	0040210040005
21	Kachlová římsa/medovník	1 ks	0424637005110
21	Kachlová římsa/zelená	1 ks	0424637015110
21	Kachlová římsa/slonová kost	1 ks	0424637025110
21	Kachlová římsa/hnědá	1 ks	0424637035110
22	Víko/černá	1 ks	0332015006155
23	Záslepka víka/černá	1 ks	0331415005060
24	Zadní kryt/černá	1 ks	0424637005120
25	Kachlový podstavec/medovník	1 ks	0433915036180
25	Kachlový podstavec/zelená	1 ks	0433915006180

25	Kachlový podstavec/slonová kost	1 ks	0433915055180
25	Kachlový podstavec/hnědá	1 ks	0433915026180

2.2. Detail A1

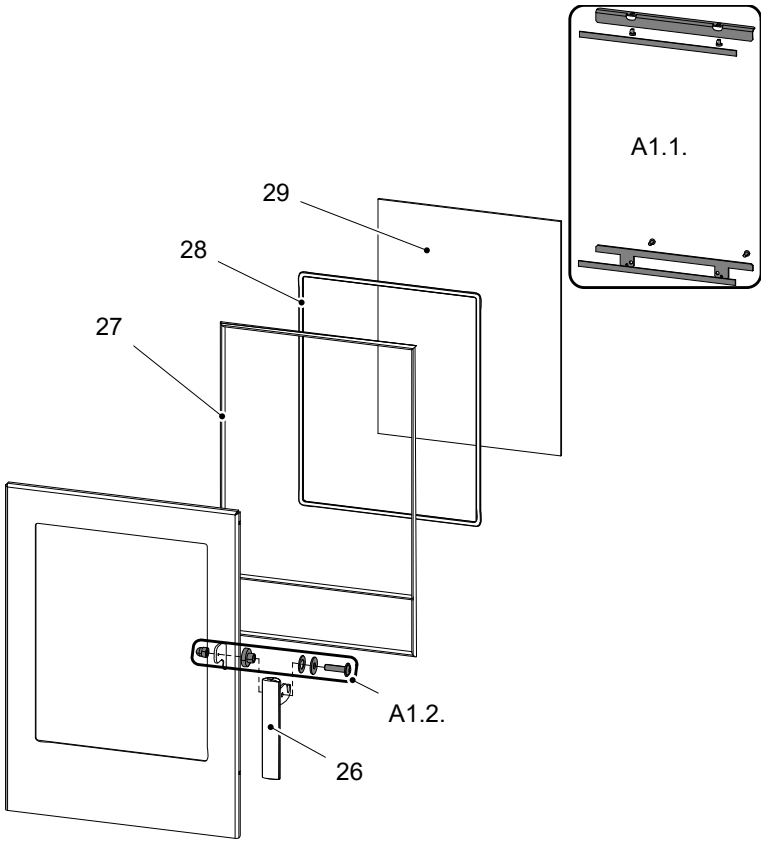

Pozice	Název	Množství	Číslo zboží
Detail A1			
A1.1.	Držák skla – set/černá	1 ks	0424637005303
A1.2.	Spojovací materiál kliky – set	1 ks	0424637005315
26	Pákový uzávěr dvířek topeniště (komplet)	1 ks	0424618005310
27	Těsnící šňůra dveří 12 mm	2200 mm	0041012120005
28	Těsnící šňůra skla 8x2 mm	1500 mm	0040210040005
29	Žáruvzdorné sklo (4x338x431)	1 ks	0424637005301


3. Easy control


Ovládání všech tří přívodů vzduchu-primárního, sekundárního, terciálního-pouze pomocí jednoho regulátoru.

1. Regulátor je v pozici určené pro zátop (obr. A). Jsou otevřeny všechny tři přívody vzduchu (primární, sekundární, terciální).
2. Nastavení regulátoru Easy control v režimu topení (obr. B).
3. Regulátor je v pozici určené pro uzavření přívodů vzduchu (obr. C). Žádný přívod není otevřen (primární, sekundární, terciální). Tato pozice se používá pouze v případě, kdy jsou kamna mimo provoz, po ukončení procesu topení.


VAROVÁNÍ


Během procesu topení nesmí dojít k uzavření přívodů vzduchu (obr. C)! V krajním případě může dojít i k explozi v kamnech a následnému roztříštění skla, rozmetání uhlíků po místnosti a ke vzniku požáru.

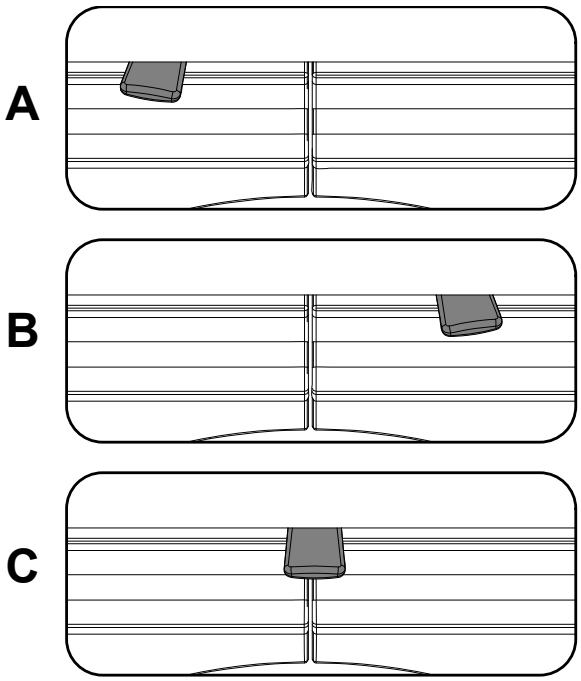

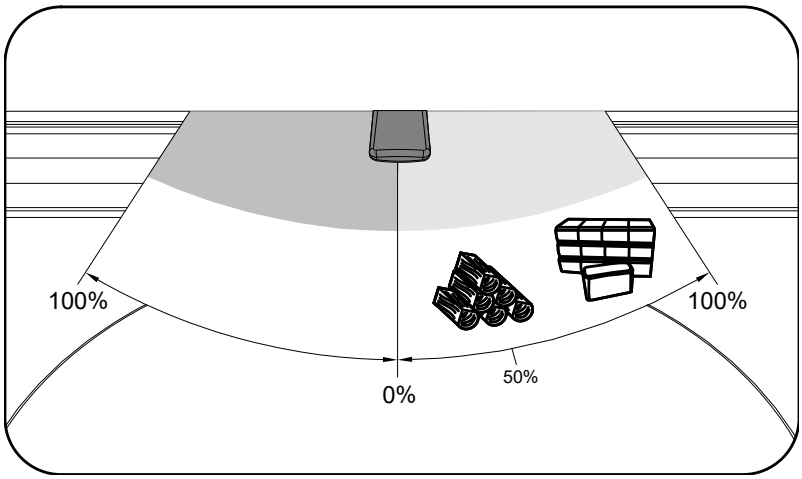


4. Záměna kouřovodu

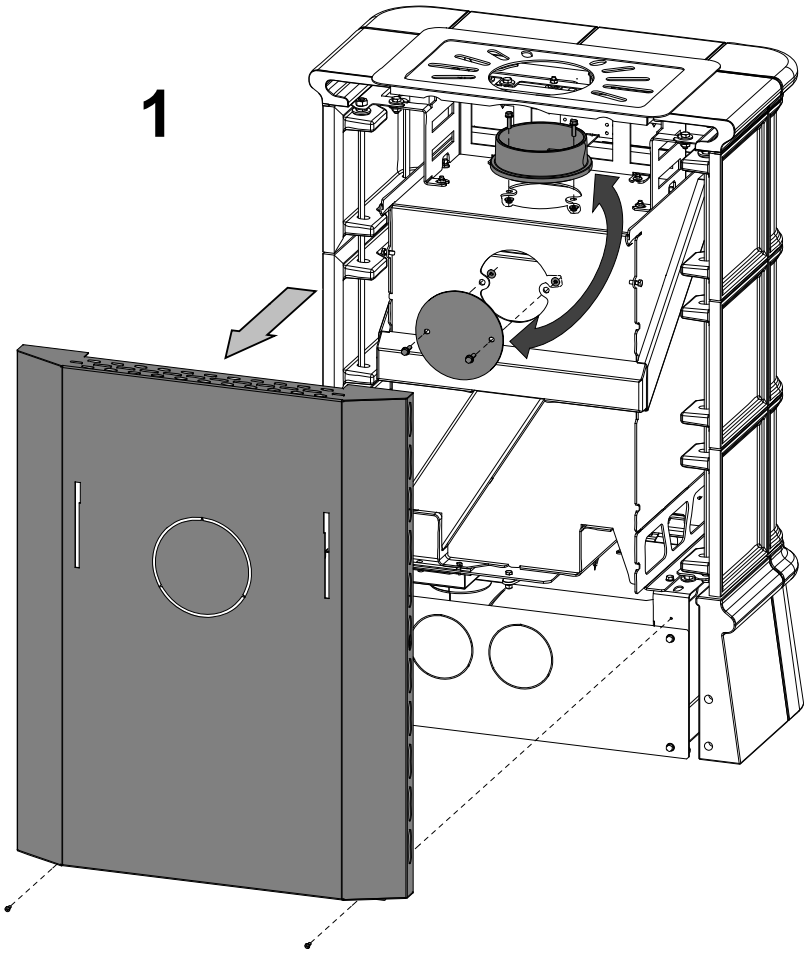

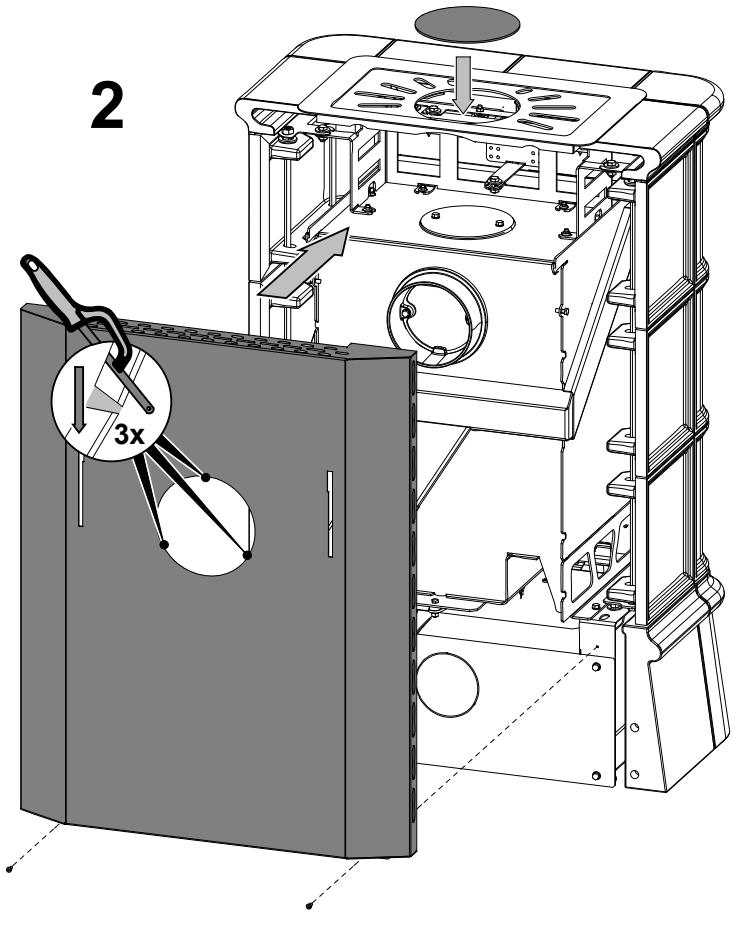


5. Záměna přívodu vzduchu

1

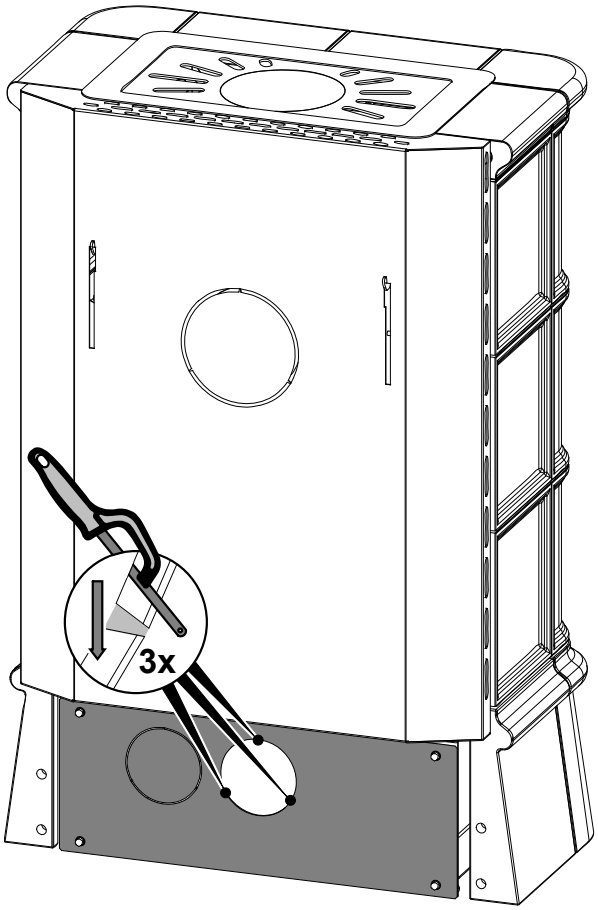

2

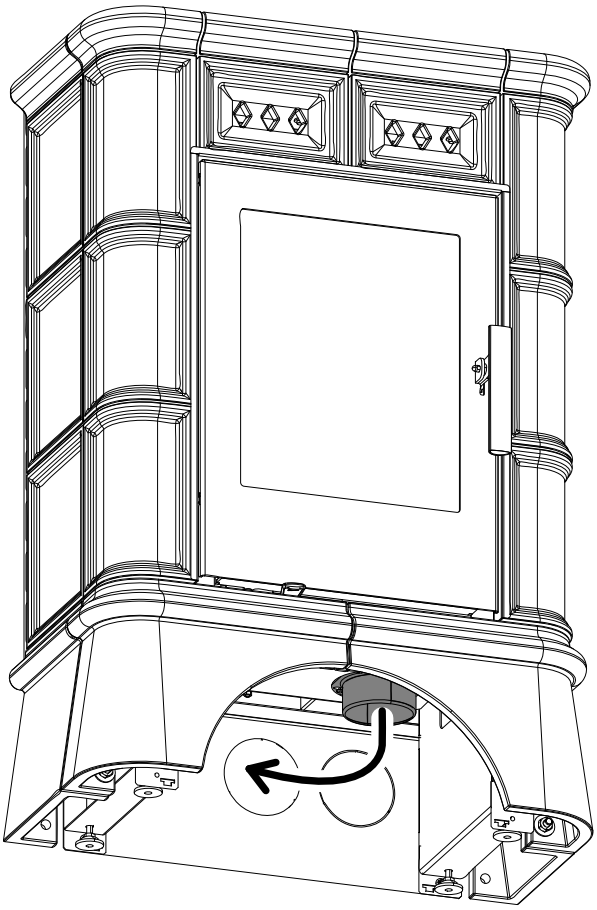

6. Zajištění dvířek v otevřené poloze

Dvířka topeniště můžete zajistit v otevřené poloze, aby bylo čištění pohodlnější. K zajištění dveří použijte západku, viz obrázek níže.

VAROVÁNÍ

Nikdy netopte v kamnech s otevřenými dvířky!

