FOXMARK
...DOMA NEJLÍP

Technical documentation

EN

Fireplace stove with exchanger

Almo II with exchanger

0434518031400–

Machine translation – not reviewed.
Unchanged original at the end.

Introduction

Thank you very much for purchasing our product!

The heater description will provide you with detailed information about the heater's construction, technical specifications and operation. We recommend that you read this information carefully. This will help you avoid potential errors during your own installation and operation.

Detailed installation and operating conditions can be found in the General Operating Instructions (included in the delivery).

Notes in the text

EN



The most important notes are those labeled WARNING. Notes labeled WARNING alert you to **serious risk of damage to the heater or injury.**



The note labeled Warning warns you of possible damage to your heater.



A note labeled Important alerts you to information important for the operation of your heater.



As such, the note draws your attention to information that is important for the operation of your heater in general.

Machine translation – not reviewed.
Unchanged original at the end.

Contents

1. Technical description .....

1 2. Spare parts list 2
2.1. Overall model shot ..... 2 2.2. Detail A1.....
4 2.3. Detail A2, A3, A4, A5..... 6

3. Dimensional diagram..... 8
3.1. Heat exchanger connection 8


4. Easy control 9

5. Heating damper.....10
6. Cooling loop installation..... 11
7. Instructions for cleaning the exchanger.....12

Machine translation – not reviewed.
Unchanged original at the end.

2. Spare parts list

2.1. Exploded view of the model

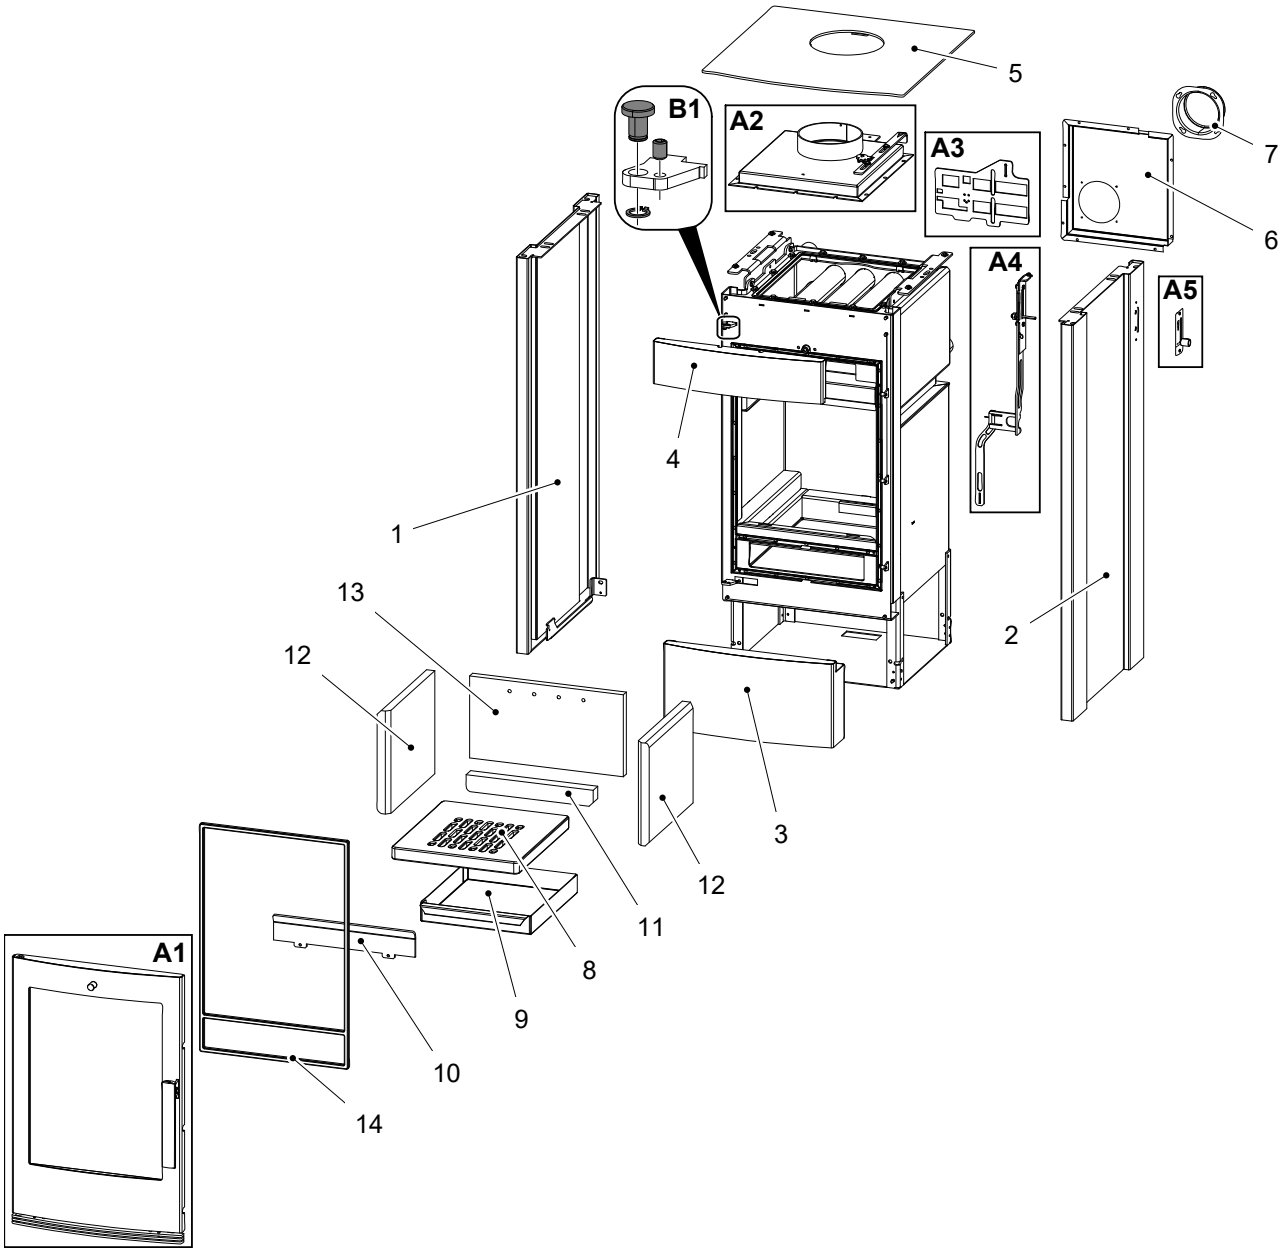


Exploded view of the model			
Position	**Name**	**Amount**	**Item number**
A1	Firebox door (set)/black-silver	1 pc	0434515005300
A1	Firebox door (set)/anthracite-silver	1 pc	0434515015300
A2	Lid (complete)/black	1 pc	0434515015095
A2	Lid (complete)/anthracite	1 pc	0434515115095
A3	Slider (complete)/black	1 pc	0434617005027

Machine translation – not reviewed.
Unchanged original at the end.

A3	Slide valve (complete)/anthracite	1 pc	0434617006027
A4	Control (complete)/Easycontrol	1 pc	0434518005060
A5	Regulator (complete)	1 pc	0434615005005
B1	Hinge fasteners — set	1 pc	0434515005128
1	Side cover — left/black	1 pc	0434516025110
1	Side cover — left/anthracite	1 pc	0434516026110
2	Side cover — right/black	1 pc	0434516025100
2	Side cover — right/anthracite	1 pc	0434516026100
3	Bottom cover/black	1 pc	0434515015146
3	Bottom cover/anthracite	1 pc	0434515016146
4	Top cover/black	1 pc	0434515115145
4	Top cover/anthracite	1 pc	0434515116145
5	Top lid/black	1 pc	0434516025800
5	Top lid/anthracite	1 pc	0434516025800
6	Rear cover	1 pc	0434517005000
7	External air supply (Ø100)	1 pc	0088500050008
8	Grate/blackfire	1 pc	0434515005053
9	Ash pan	1 pc	0434515005030
10	Barrier	1 pc	0434515005040
11	Lower fireclay (30x40x310)	1 pc	0434617005552
12	Fireclay right+left (30x250x300)	2 pcs	0434617005554
13	Rear fireclay (30x199x375)	1 pc	0434617005551
14	Door sealing cord 10 mm	2500 mm	0040300100005

Machine translation – not reviewed.
Unchanged original at the end.

2.2. Detail A1

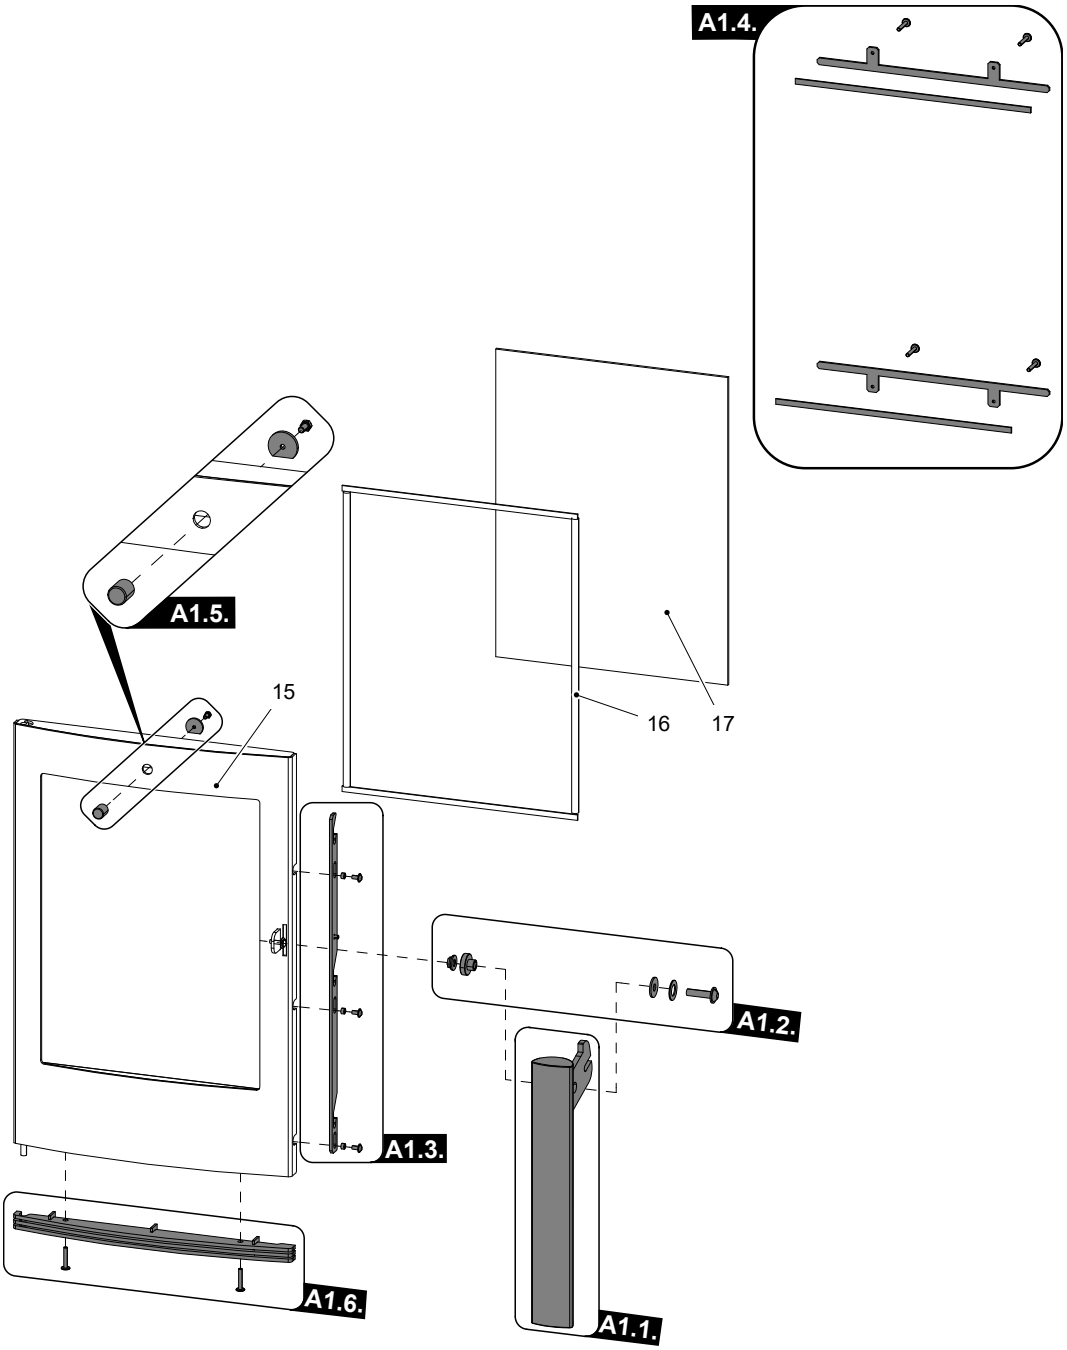

Detail A1			
Position	**Name**	**Amount**	**Item number**
A1.1.	Firebox door lever lock (complete set)	1 pc	0429415005318
A1.2.	Handle fasteners — set	1 pc	0434615505002
A1.3.	Closing rod — set	1 pc	0434615005321
A1.4.	Glass holder — set/black	1 pc	0434615005330
A1.4.	Glass holder — set/anthracite	1 pc	0434615006330
A1.5.	Cleaning cover — set/black	1 pc	0434515505005
A1.5.	Cleaning cover — set/anthracite	1 pc	0434515405005

Machine translation – not reviewed.
Unchanged original at the end.

A1.6.	Blinds/silver — set	1 pc	0434515005315
15	Firebox door (welded part)/black	1 pc	0434515005200
15	Firebox door (welded part)/anthracite	1 pc	0434515006200
16	Glass sealing cord 10x4 mm	1660 mm	0040210040005
17	Heat-resistant glass (345x455)	1 pc	0434515005304


Machine translation – not reviewed.
Unchanged original at the end.

Detail A2			
Position	**Name**	**Amount**	**Item number**
A2.1.	Flap rod/black — set	1 pc	0434515005088
A2.1.	Flap rod/anthracite — set	1 pc	0434515006088
18	Lid/black	1 pc	0434515015085
18	Lid/anthracite	1 pc	0434515016085
A3 detail			
Position	**Name**	**Amount**	**Item number**
A3.1.	Gate valve fasteners — set	1 pc	0434615005003
19	Slide/black	1 pc	0434617007027
19	Slide/anthracite	1 pc	0434617008027
20	Gate valve seal	1 pc	0434517005052
A4 size			
Position	**Name**	**Amount**	**Item number**
21	Control/easycontrol	1 pc	0434518005060
22	Washer 5.3 DIN 125A	1 pc	-
23	Nut M5 DIN 980V	1 pc	-
A5 detail			
Position	**Name**	**Amount**	**Item number**
24	Regulator	1 pc	0420915005625
25	Controller label	1 pc	0429415005171
26	Screw M3x10 BN 9524	2 pcs	0030400300105

Machine translation – not reviewed.
Unchanged original at the end.

3. Dimensional diagram

3.1. Heat exchanger connection

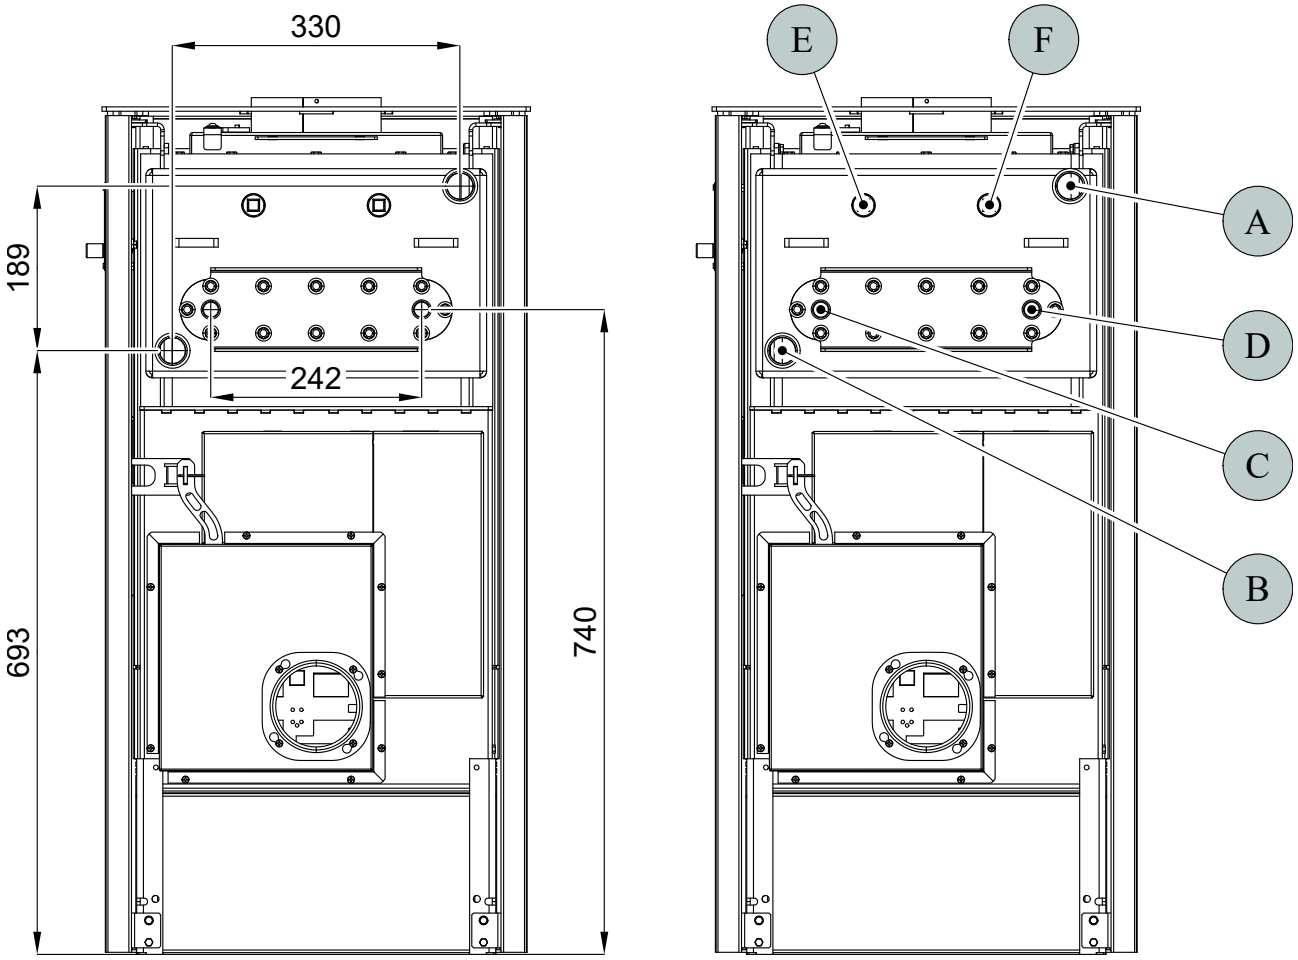

Position	Name
A	Heating water outlet (internal thread G1")
B	Return water inlet (internal thread G1")
C	Coolant inlet (external thread G1/2")
D	Coolant outlet (external thread G1/2")
E	Hole for thermostatic sensor well (internal thread G1/2")/cooling loop
F	Hole for thermostatic sensor well (internal thread G1/2")/circulation pump

Machine translation – not reviewed.
Unchanged original at the end.


4. Easy control

Control of all three air inlets - primary, secondary, tertiary - using just one regulator.

1. The regulator is in the ignition position (Fig. A). All three air inlets (primary, secondary, tertiary).
2. Setting the Easy control regulator in heating mode (fig. B).
3. The regulator is in the position intended to close the air inlets (Fig. C). No inlet is open (primary, secondary, tertiary). This position is only used when the stove is out of operation, after the heating process has ended.

WARNING

During the heating process, the air inlets must not be closed (Fig. C)! In extreme cases, an explosion in the stove may occur, resulting in glass shattering, embers scattering around the room and a fire.

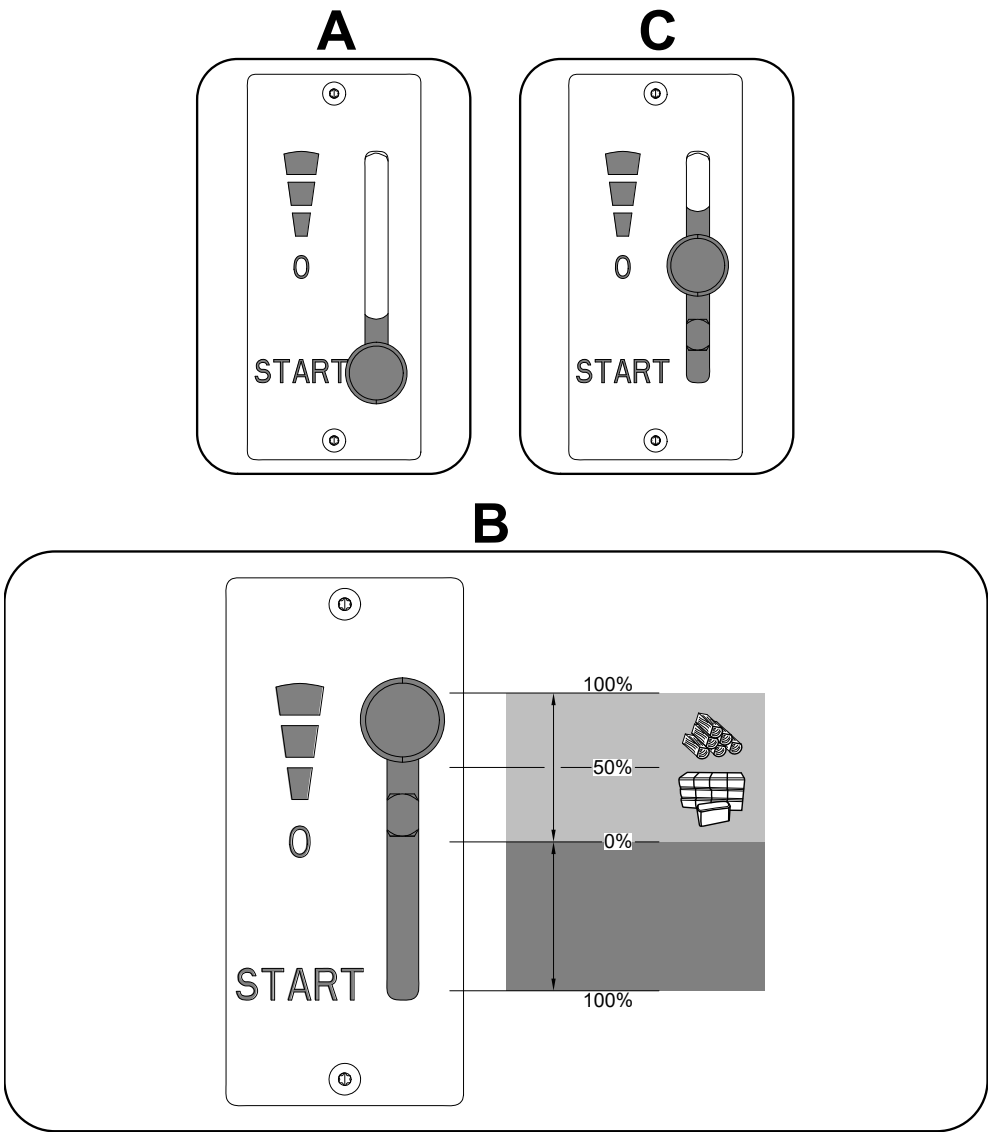

Machine translation – not reviewed.
Unchanged original at the end.


5. Ignition damper


IMPORTANT

In case of ignition or poor chimney draft, slide the ignition damper regulator to position 0 (fig. A), the ignition damper is open. When heating, slide the ignition damper regulator to position 1 (fig. B), the ignition damper is closed.

Note

Please note that prolonged heating with the ignition damper open significantly reduces the efficiency of the heater, increases fuel consumption and worsens emission parameters!

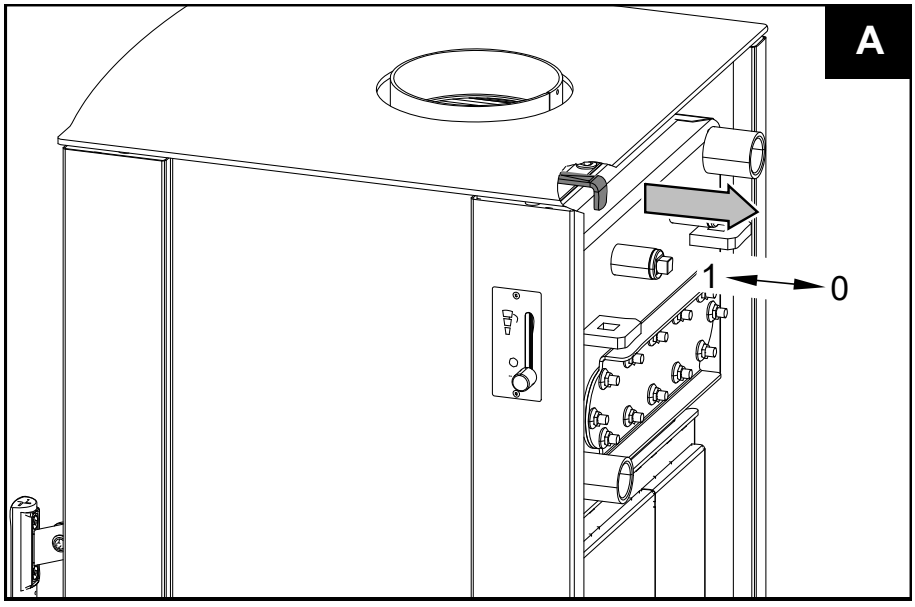

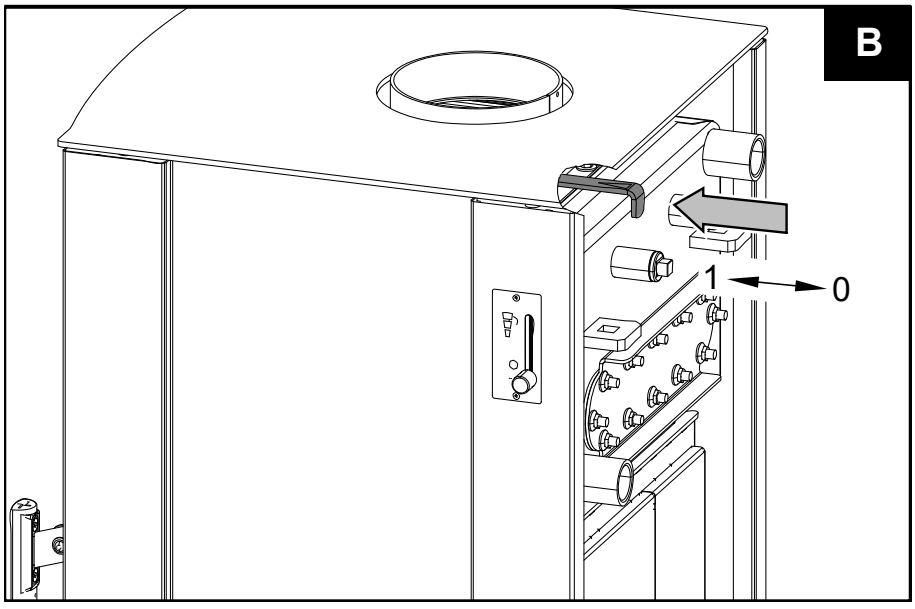


Machine translation – not reviewed.
Unchanged original at the end.

6. Installation of the cooling loop

IMPORTANT

For some markets (CZ, SK, PL) the cooling loop is not included in the delivery.

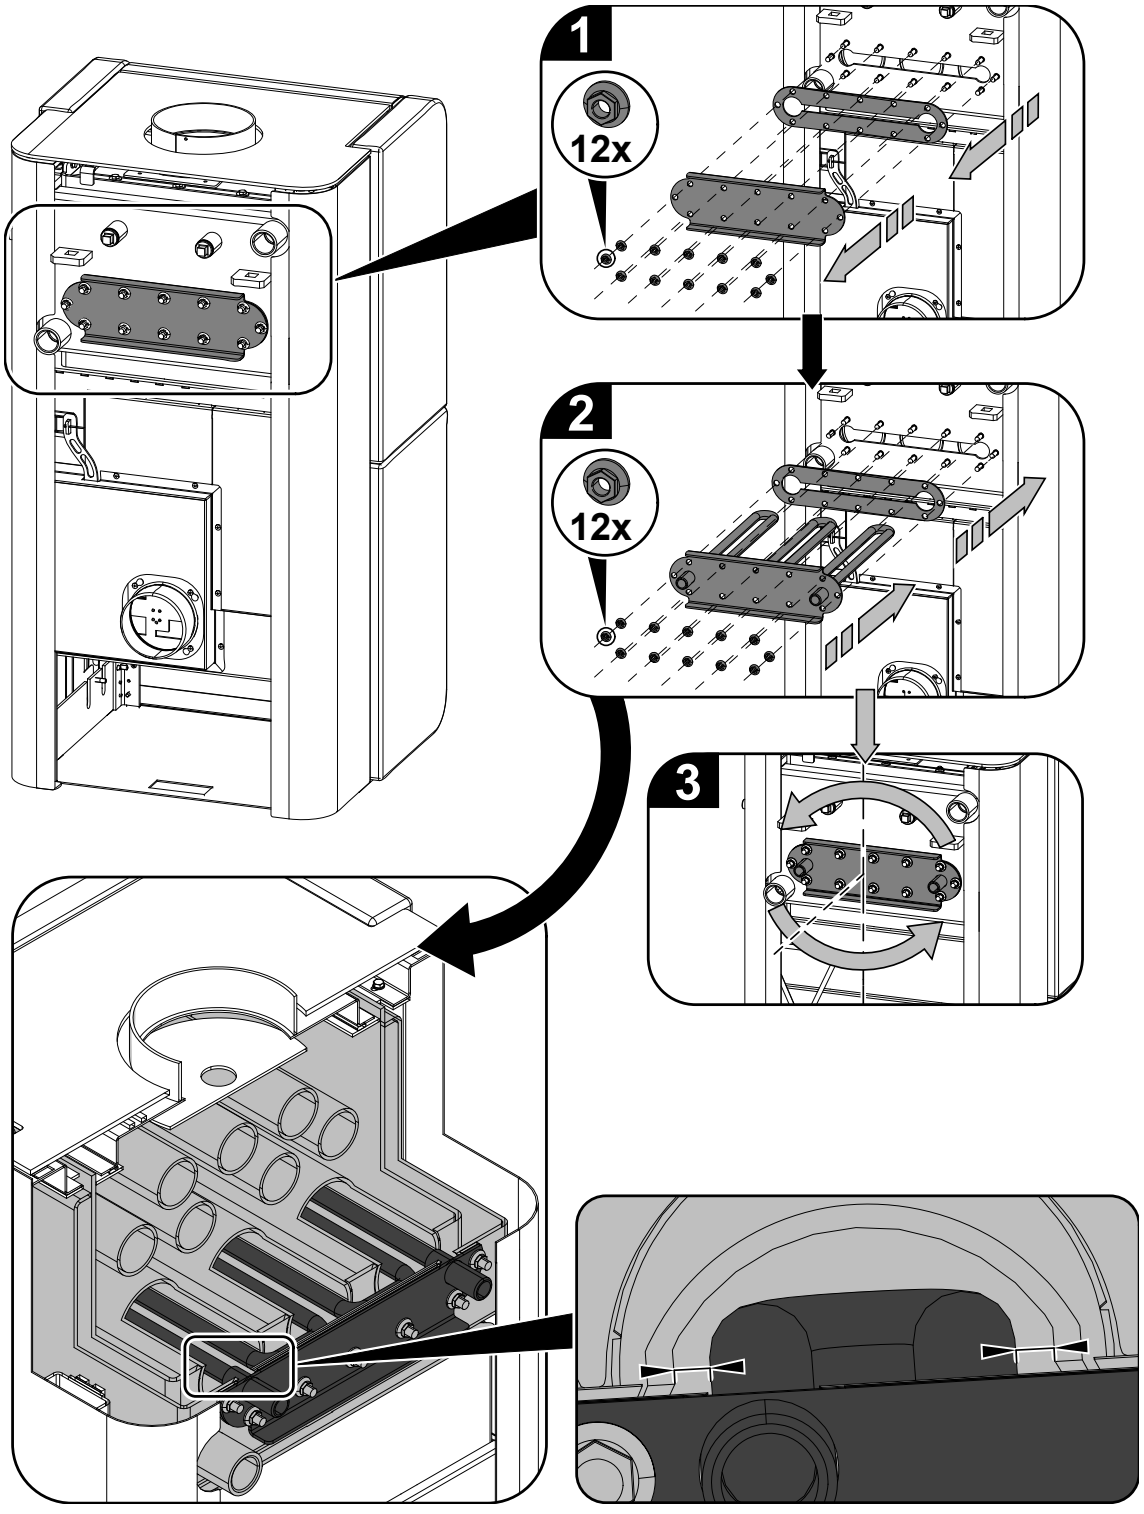


Machine translation – not reviewed.
Unchanged original at the end.

7. Instructions for cleaning the exchanger

IMPORTANT

It is recommended to clean the wiper blade (pos. 4, fig. 5) at least 1 time a week and more often depending on the type of operation.

1. Preparing and installing the cleaning rod

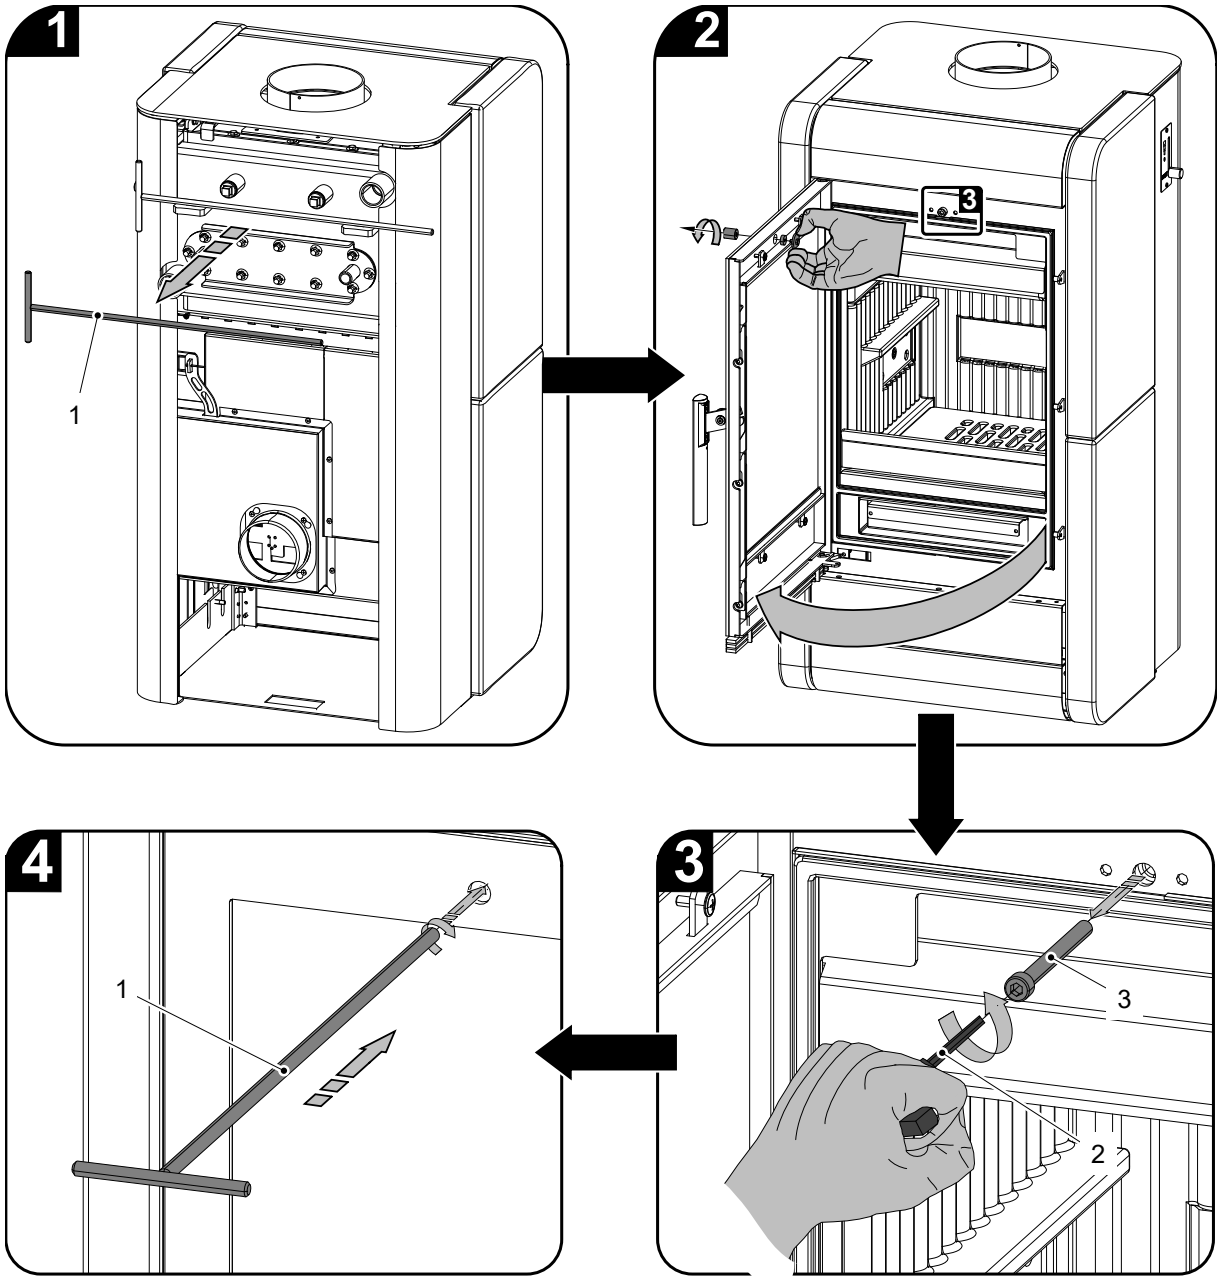


Machine translation – not reviewed.
Unchanged original at the end.

2. Cleaning itself and locking the cleaning plate.

IMPORTANT

Always lock the scraper bar when you finish cleaning (Fig. 5a). Do not leave the scraper bar over the flame (Fig. 5b).

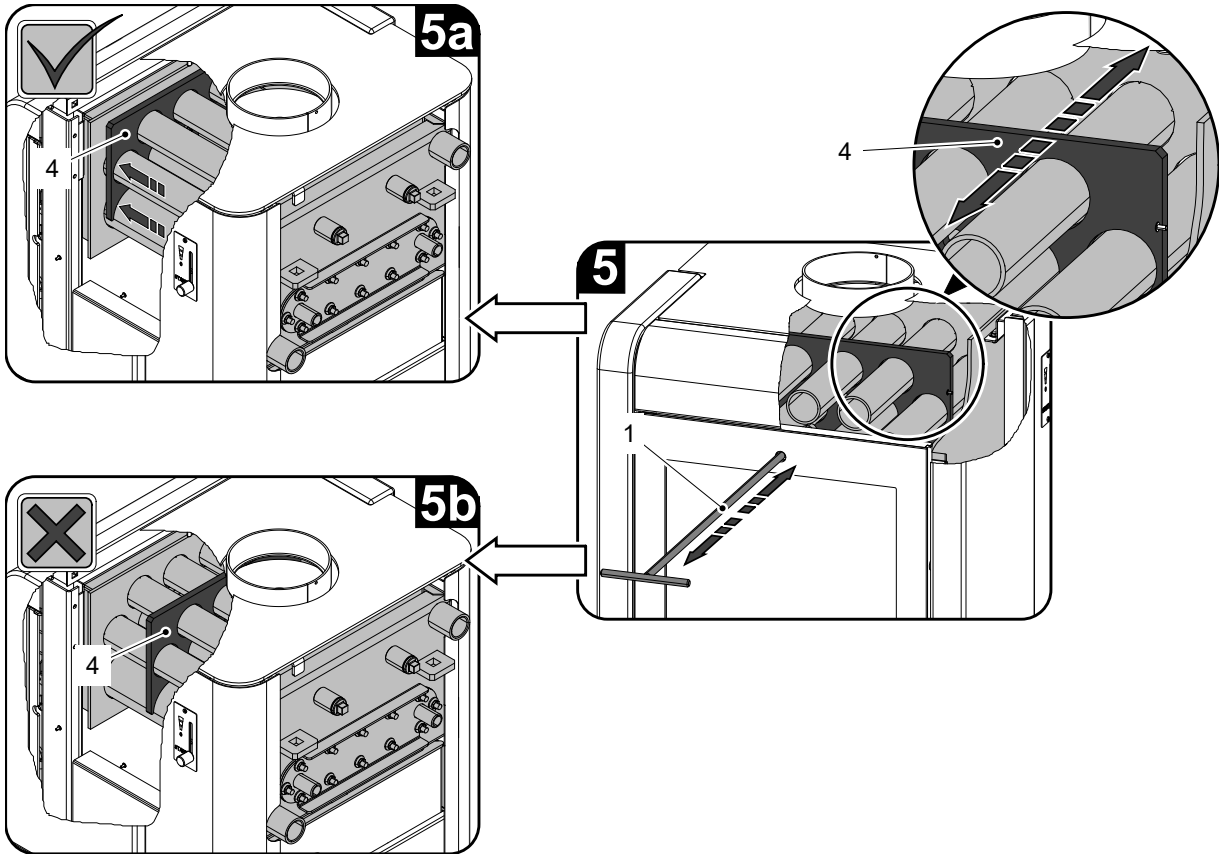

Position	Name	Item number
1	Cleaning rod/black	0433317005063
2	8 mm Allen key (included)	9001700080005
3	Screw M10x80 (DIN 912)	0030031000805
4	Wiper blade	—

Machine translation – not reviewed.
Unchanged original at the end.

FOXMARK
...DOMA NEJLÍP

Technická dokumentace

CZ

Krbová kamna s výměníkem

Almo II s výměníkem

0434518031400–

Úvod

Srdečně děkujeme za zakoupení našeho výrobku!

Popis topidla Vás podrobně seznámí s konstrukcí, technickou specifikací a obsluhou topidla. Doporučujeme seznámit se pozorně s těmito údaji. Vyvarujete se tak případných chyb při vlastní montáži a obsluze.

Podrobné podmínky instalace a obsluhy naleznete ve Všeobecném návodu k obsluze (součást dodávky).

Poznámky v textu



Nejdůležitější jsou poznámky nadepsané **VAROVÁNÍ**. Poznámky nadepsané **VAROVÁNÍ** Vás upozorňují na **vážné nebezpečí poškození topidla či poranění.**



Poznámka nadepsaná **Upozornění** Vás upozorňuje na možná poškození Vašeho topidla.



Poznámka nadepsaná **Důležité** Vás upozorňuje na informace důležité k provozu Vašeho topidla.




Poznámka jako taková Vás upozorňuje zcela obecně na informace důležité k provozu Vašeho topidla.


CZ


Obsah

1. Technický popis 1
2. Seznam náhradních dílů 2
2.1. Celkový rozstřel modelu 2
2.2. Detail A1 4
2.3. Detail A2, A3, A4, A5 6
3. Rozměrové schéma 8
3.1. Zapojení výměníku 8
4. Easy control 9
5. Zatápěcí klapka 10
6. Montáž vychlazovací smyčky 11
7. Návod na čištění výměníku 12

1. Technický popis

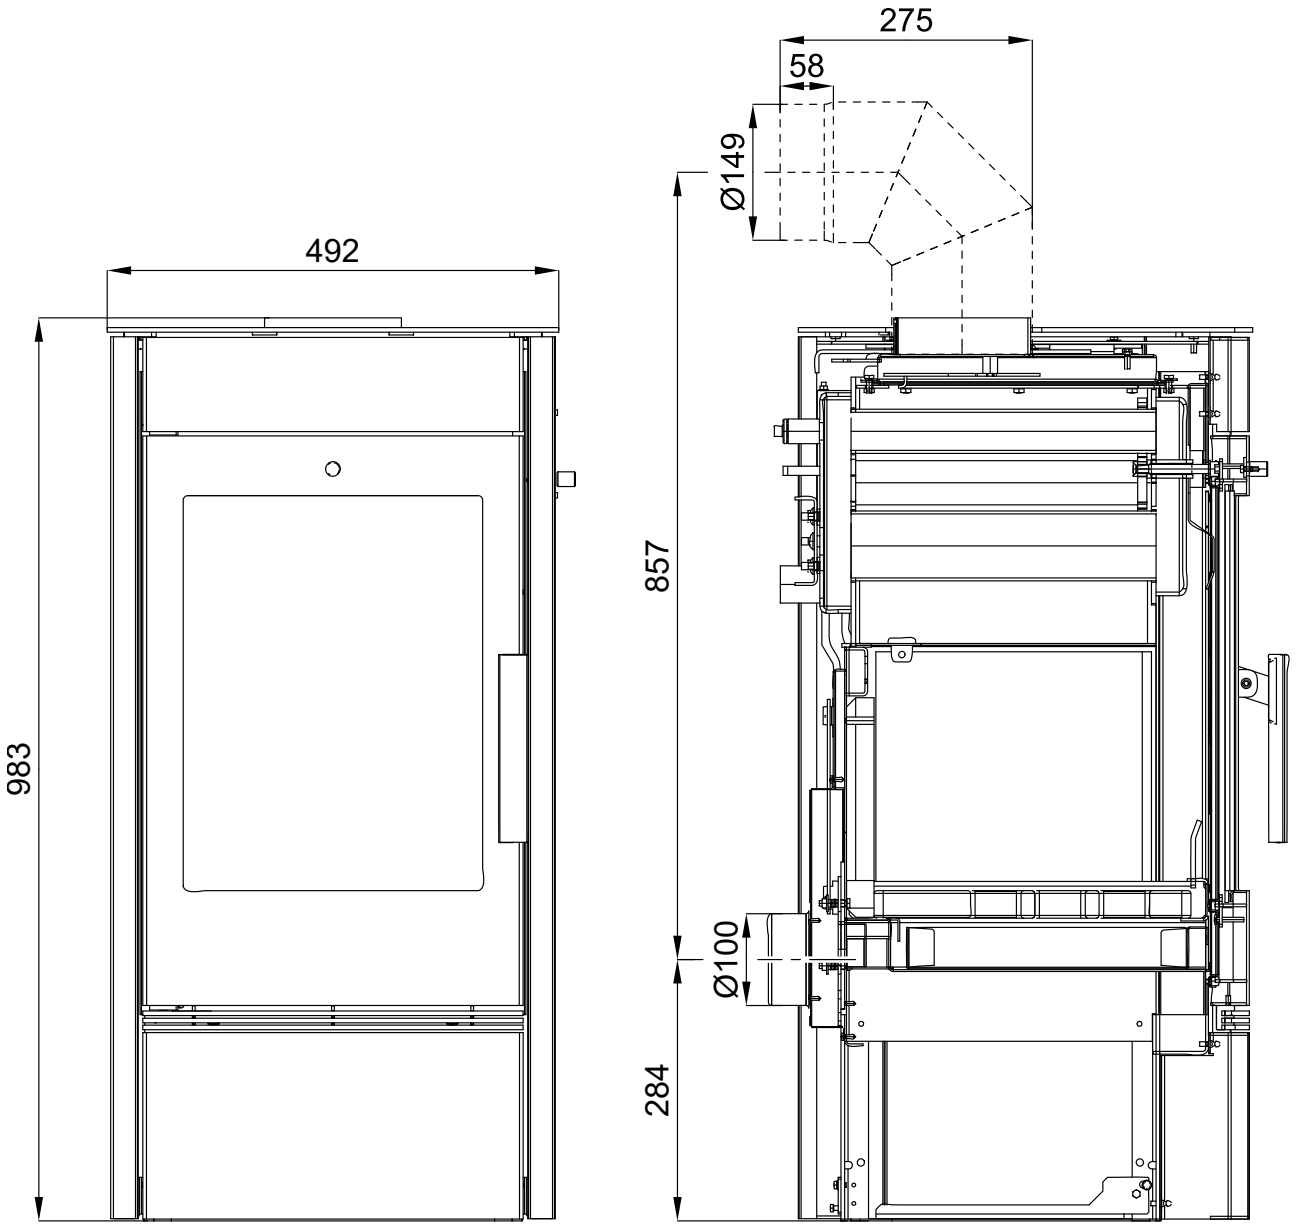


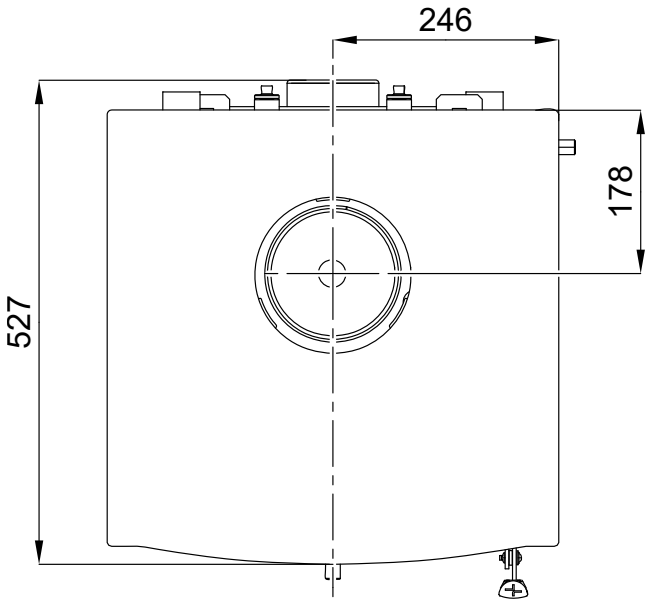

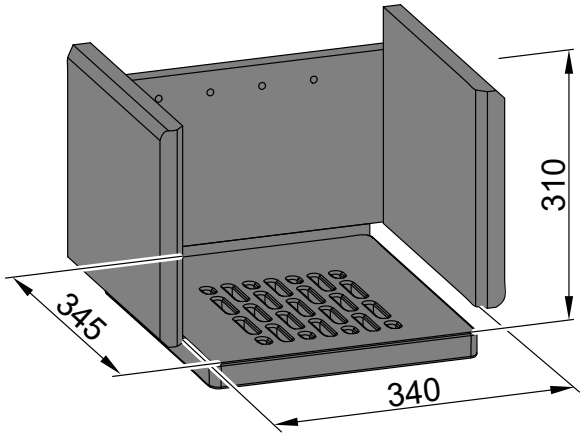

2. Seznam náhradních dílů


2.1. Celkový rozstřel modelu

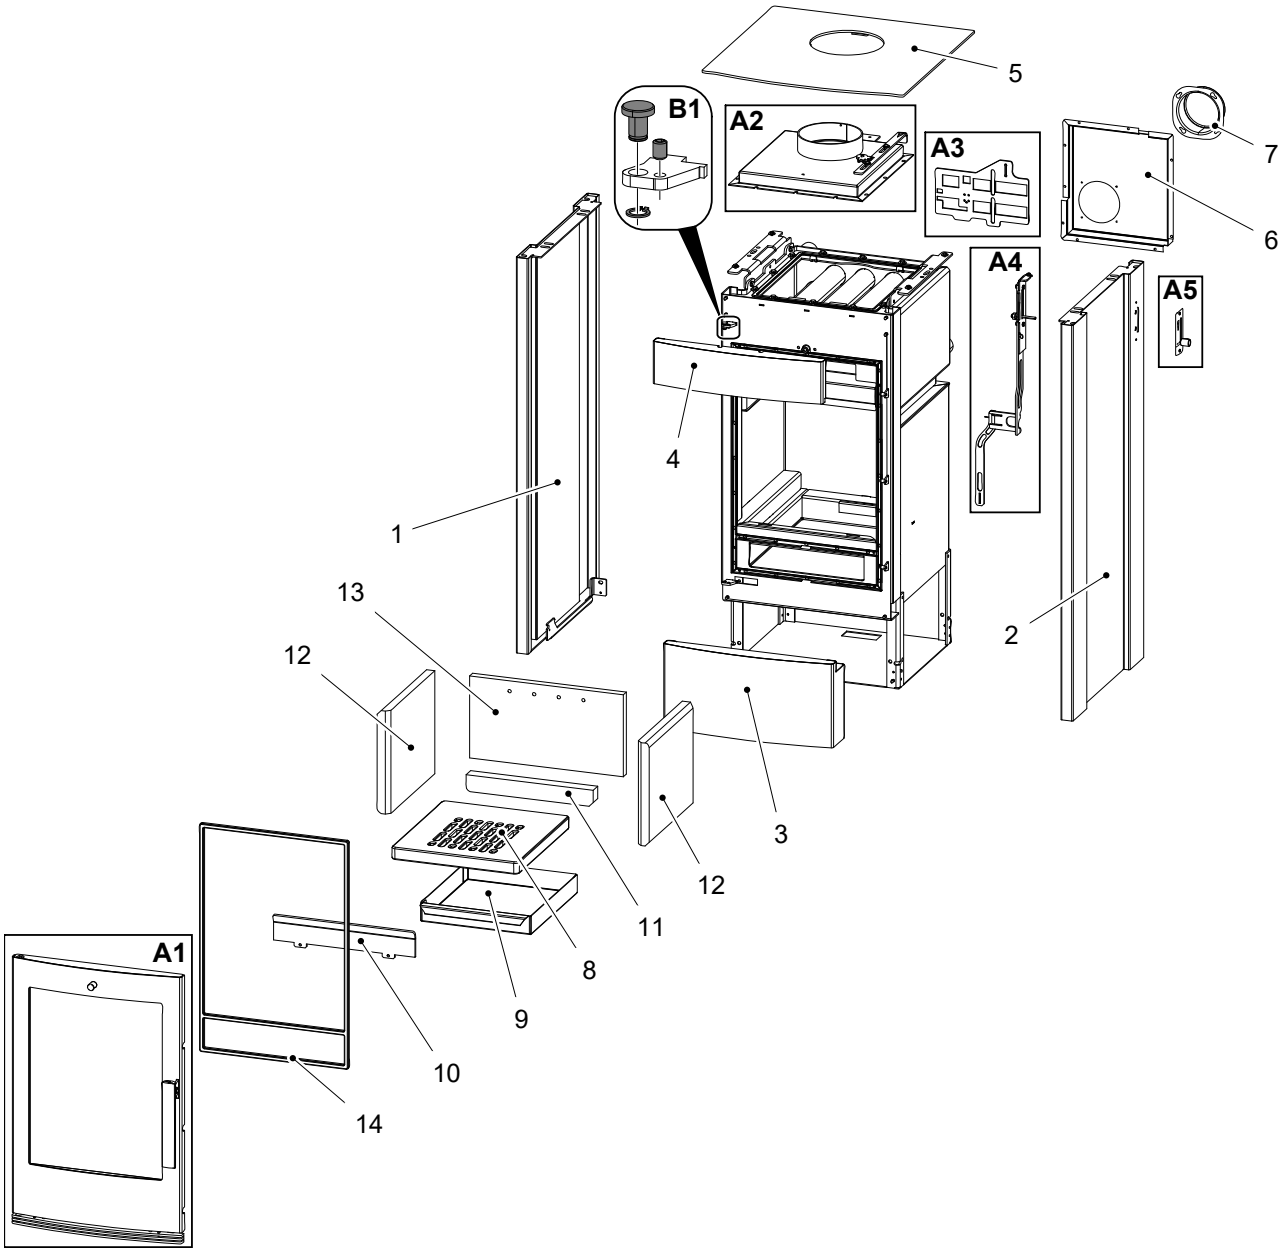

Celkový rozstřel modelu			
Pozice	**Název**	**Množství**	**Číslo zboží**
A1	Dvířka topeniště (komplet)/černá-stříbrná	1 ks	0434515005300
A1	Dvířka topeniště (komplet)/antracit-stříbrná	1 ks	0434515015300
A2	Víko (komplet)/černá	1 ks	0434515015095
A2	Víko (komplet)/antracit	1 ks	0434515115095
A3	Šoupátko (komplet)/černá	1 ks	0434617005027

A3	Šoupátko (komplet)/antracit	1 ks	0434617006027
A4	Ovládání (komplet)/Easycontrol	1 ks	0434518005060
A5	Regulátor (komplet)	1 ks	0434615005005
B1	Spojovací materiál pantu — set	1 ks	0434515005128
1	Kryt boční — levý/černá	1 ks	0434516025110
1	Kryt boční — levý/antracit	1 ks	0434516026110
2	Kryt boční — pravý/černá	1 ks	0434516025100
2	Kryt boční — pravý/antracit	1 ks	0434516026100
3	Kryt spodní/černá	1 ks	0434515015146
3	Kryt spodní/antracit	1 ks	0434515016146
4	Kryt vrchní/černá	1 ks	0434515115145
4	Kryt vrchní/antracit	1 ks	0434515116145
5	Vrchní víko/černá	1 ks	0434516025800
5	Vrchní víko/antracit	1 ks	0434516025800
6	Kryt zadní	1 ks	0434517005000
7	Externí přívod vzduchu (Ø100)	1 ks	0088500050008
8	Rošt/lackfire	1 ks	0434515005053
9	Popelník	1 ks	0434515005030
10	Zábrana	1 ks	0434515005040
11	Šamot spodní (30x40x310)	1 ks	0434617005552
12	Šamot pravý+levý (30x250x300)	2 ks	0434617005554
13	Šamot zadní (30x199x375)	1 ks	0434617005551
14	Těsnící šňůra dveří 10 mm	2500 mm	0040300100005


2.2. Detail A1

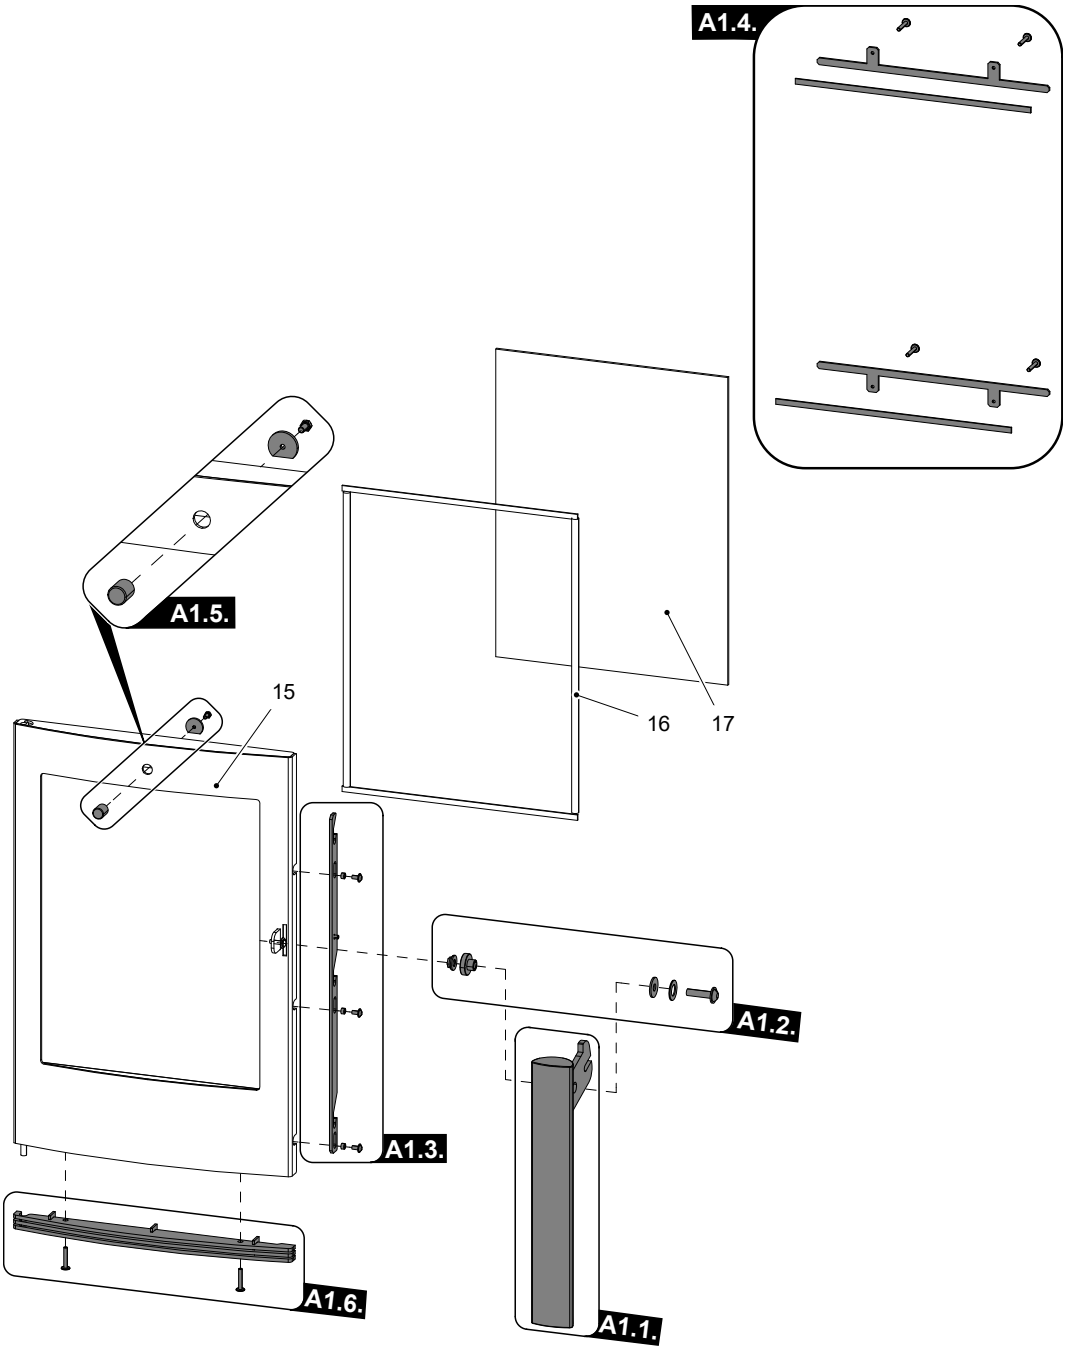

Detail A1			
Pozice	**Název**	**Množství**	**Číslo zboží**
A1.1.	Pákový uzávěr dvířek topeniště (komplet)	1 ks	0429415005318
A1.2.	Spojovací materiál kliky — set	1 ks	0434615505002
A1.3.	Táhlo zavírání — set	1 ks	0434615005321
A1.4.	Držák skla — set/černá	1 ks	0434615005330
A1.4.	Držák skla — set/antracit	1 ks	0434615006330
A1.5.	Kryt čištění — set/černá	1 ks	0434515505005
A1.5.	Kryt čištění — set/antracit	1 ks	0434515405005

A1.6.	Žaluzie/stříbrná — set	1 ks	0434515005315
15	Dvířka topeniště (svařovaný díl)/černá	1 ks	0434515005200
15	Dvířka topeniště (svařovaný díl)/antracit	1 ks	0434515006200
16	Těsnící šňůra skla 10x4 mm	1660 mm	0040210040005
17	Žáruvzdorné sklo (345x455)	1 ks	0434515005304


2.3. Detail A2, A3, A4, A5

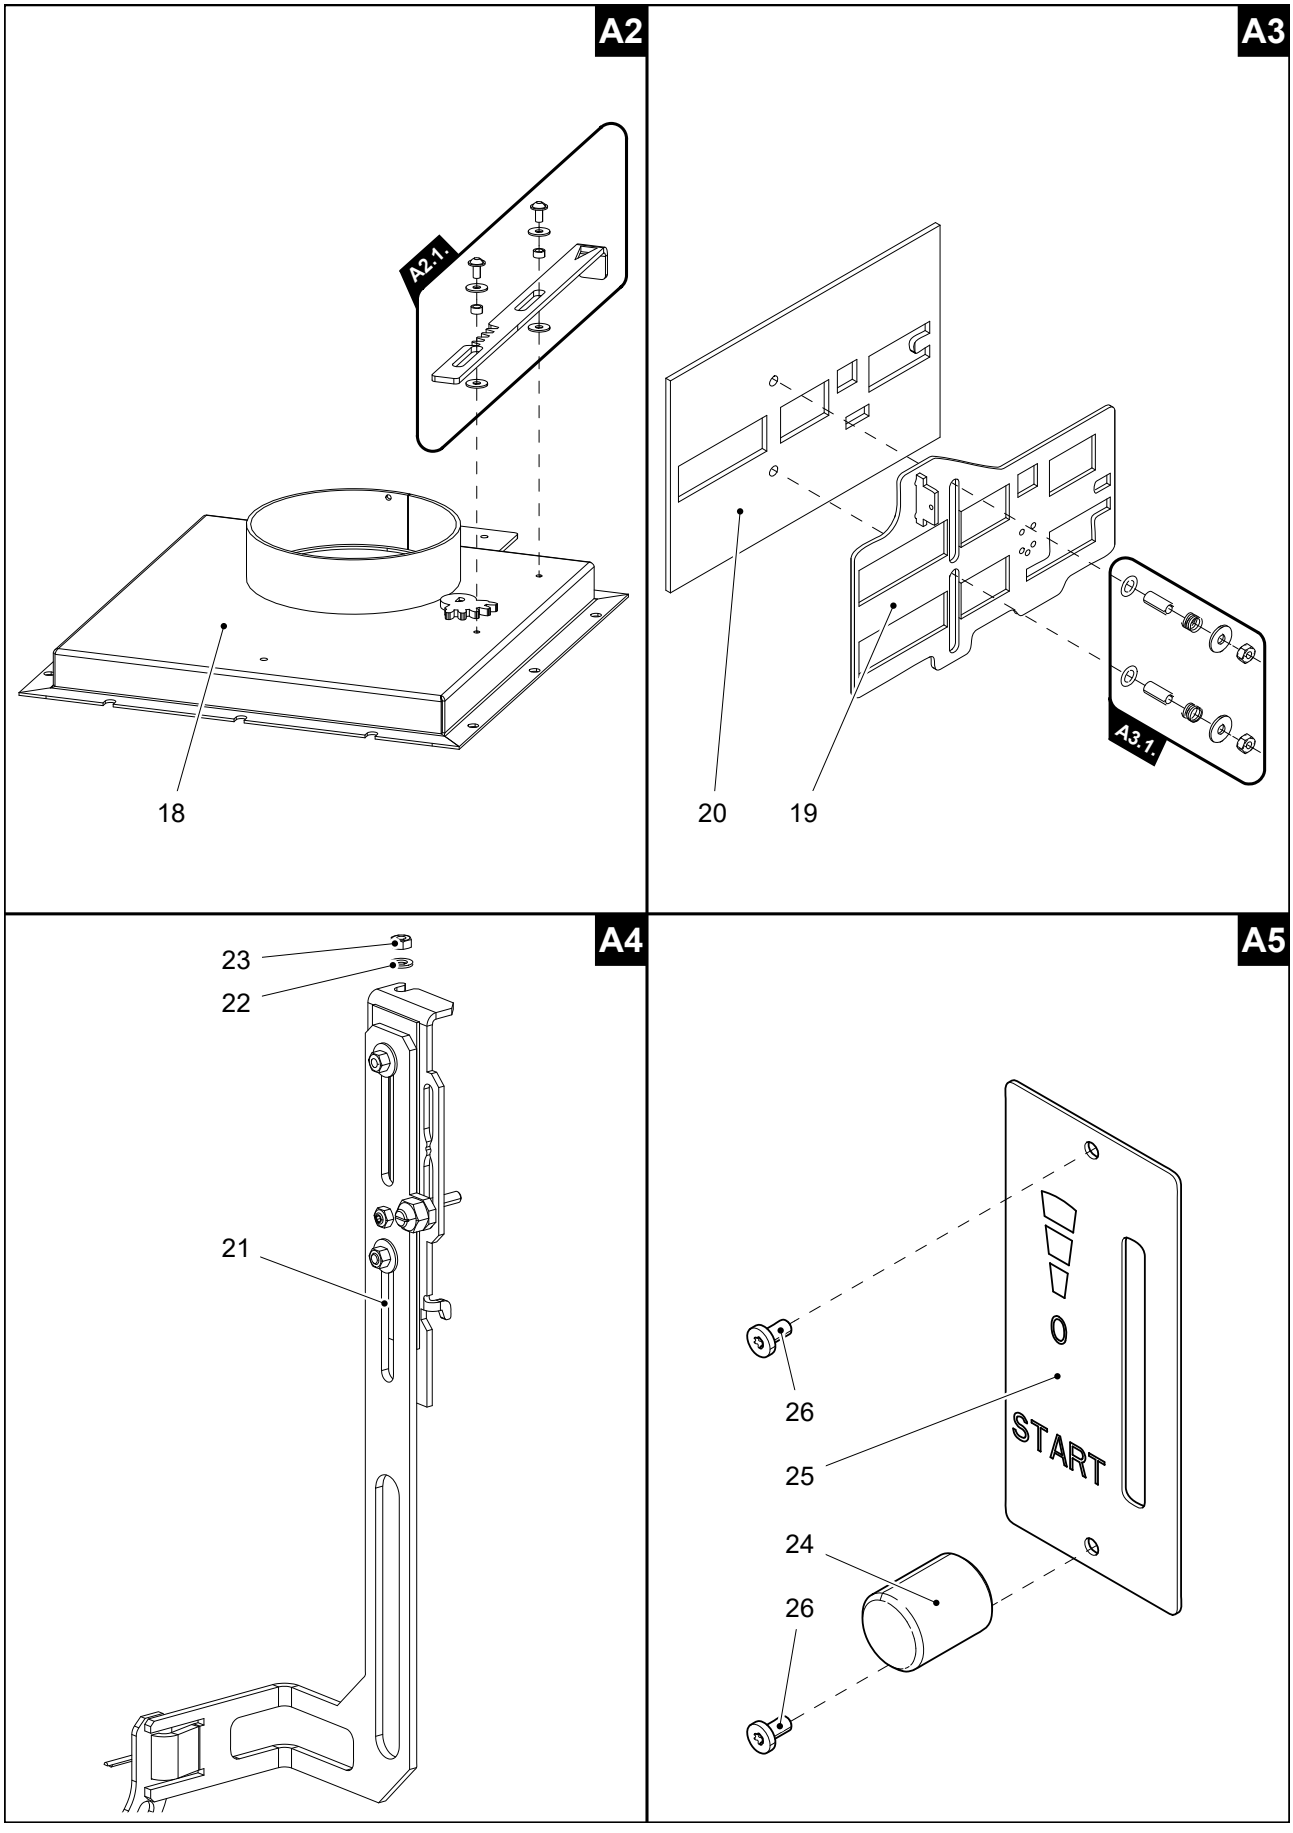

Detail A2			
Pozice	**Název**	**Množství**	**Číslo zboží**
A2.1.	Táhlo klapky/černá — set	1 ks	0434515005088
A2.1.	Táhlo klapky/antracit — set	1 ks	0434515006088
18	Víko/černá	1 ks	0434515015085
18	Víko/antracit	1 ks	0434515016085
Detail A3			
Pozice	**Název**	**Množství**	**Číslo zboží**
A3.1.	Spojovací materiál šoupátka — set	1 ks	0434615005003
19	Šoupátko/černá	1 ks	0434617007027
19	Šoupátko/antracit	1 ks	0434617008027
20	Těsnění šoupátka	1 ks	0434517005052
Detail A4			
Pozice	**Název**	**Množství**	**Číslo zboží**
21	Ovládání/easycontrol	1 ks	0434518005060
22	Podložka 5,3 DIN 125A	1 ks	-
23	Matice M5 DIN 980V	1 ks	-
Detail A5			
Pozice	**Název**	**Množství**	**Číslo zboží**
24	Regulátor	1 ks	0420915005625
25	Štítek regulátoru	1 ks	0429415005171
26	Šroub M3x10 BN 9524	2 ks	0030400300105

3. Rozměrové schéma

3.1. Zapojení výměníku

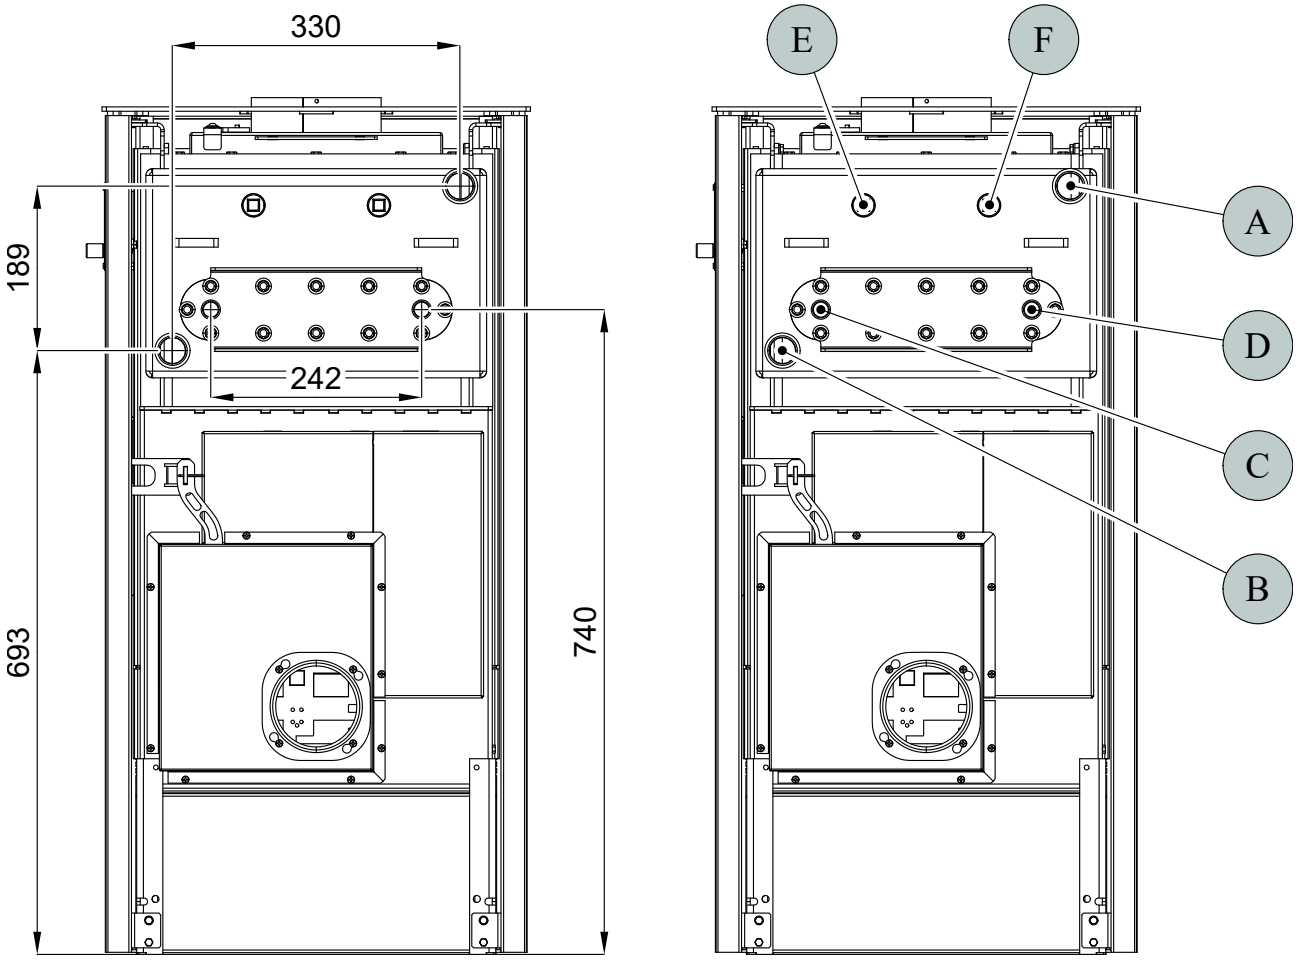

Pozice	Název
A	Vývod topné vody (vnitřní závit G1")
B	Přívod vratné vody (vnitřní závit G1")
C	Přívod chladící kapaliny (vnější závit G1/2")
D	Vývod chladící kapaliny (vnější závit G1/2")
E	Otvor pro jímku termostatického čidla (vnitřní závit G1/2")/vychlazovací smyčka
F	Otvor pro jímku termostatického čidla (vnitřní závit G1/2")/oběhové čerpadlo


4. Easy control

Ovládání všech tří přívodů vzduchu-primárního, sekundárního, terciálního-pouze pomocí jednoho regulátoru.

1. Regulátor je v pozici určené pro zátop (obr. A). Jsou otevřeny všechny tři přívody vzduchu (primární, sekundární, terciální).
2. Nastavení regulátoru Easy control v režimu topení (obr. B).
3. Regulátor je v pozici určené pro uzavření přívodů vzduchu (obr. C). Žádný přívod není otevřen (primární, sekundární, terciální). Tato pozice se používá pouze v případě, kdy jsou kamna mimo provoz, po ukončení procesu topení.

VAROVÁNÍ

Během procesu topení nesmí dojít k uzavření přívodů vzduchu (obr. C)! V krajním případě může dojít i k explozi v kamnech a následnému roztříštění skla, rozmetání uhlíků po místnosti a ke vzniku požáru.

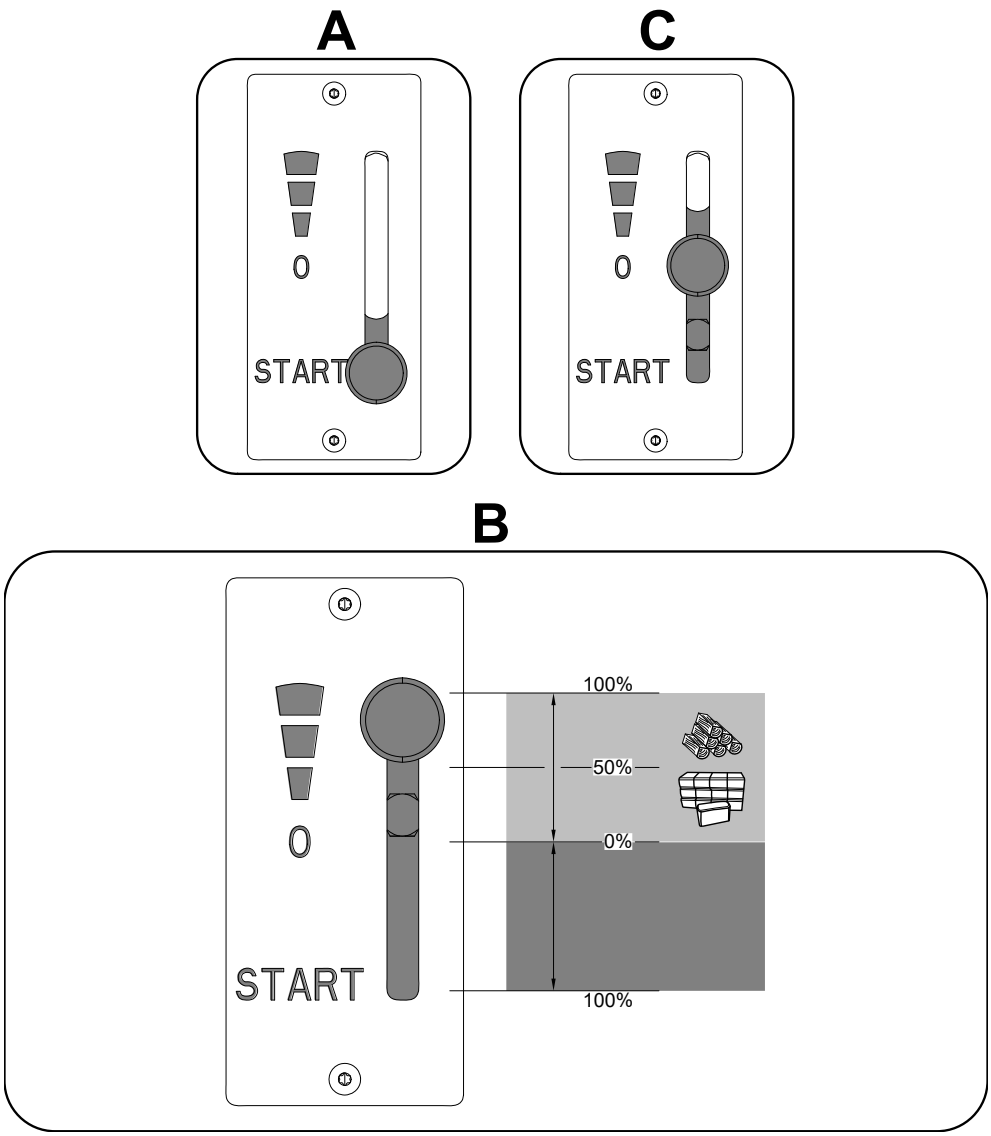


5. Zatápěcí klapka


DŮLEŽITÉ

V případě zatápění či zhoršeného tahu komína vysuňte regulátor zatápěcí klapky do polohy 0 (obr. A), zatápěcí klapka je otevřena. Při topení zasuňte regulátor zatápěcí klapky do polohy 1 (obr. B), zatápěcí klapka je zavřena.

Poznámka

Vezměte na zřetel, že při dlouhodobém topení s otevřenou zatápěcí klapkou významně klesá účinnost topidla, narůstá spotřeba paliva a zhoršují se emisní parametry!

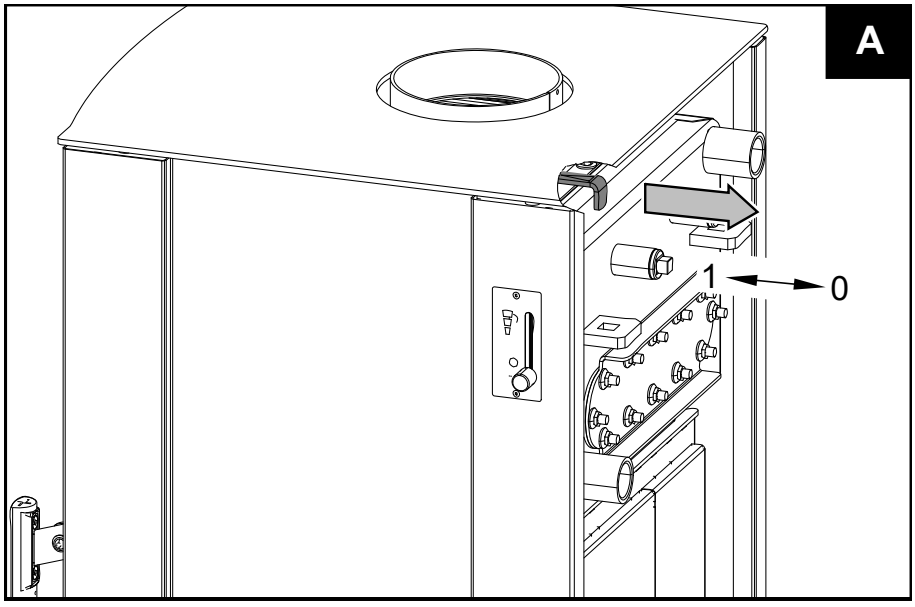


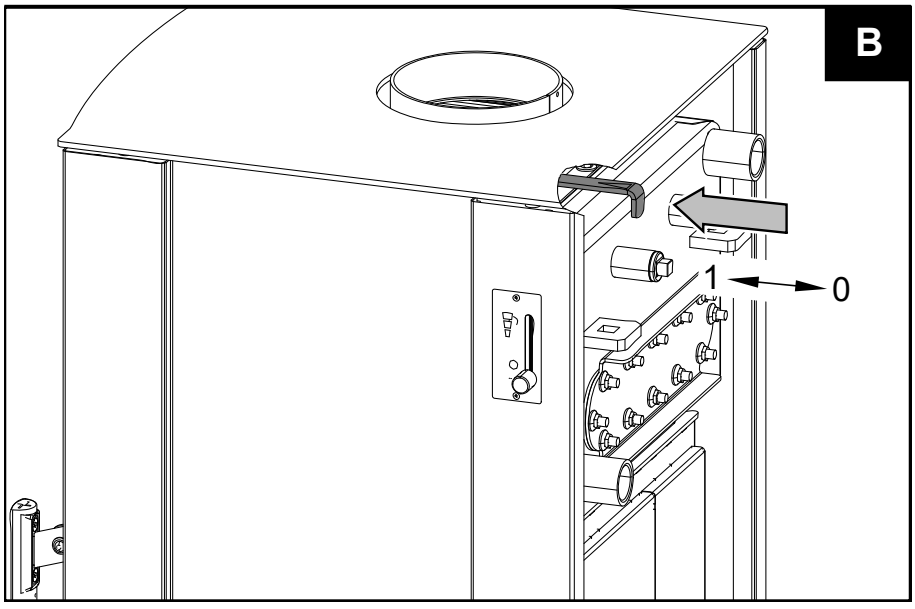

6. Montáž vychlazovací smyčky

DŮLEŽITÉ

Pro některé trhy (CZ, SK, PL) není vychlazovací smyčka součástí dodávky.

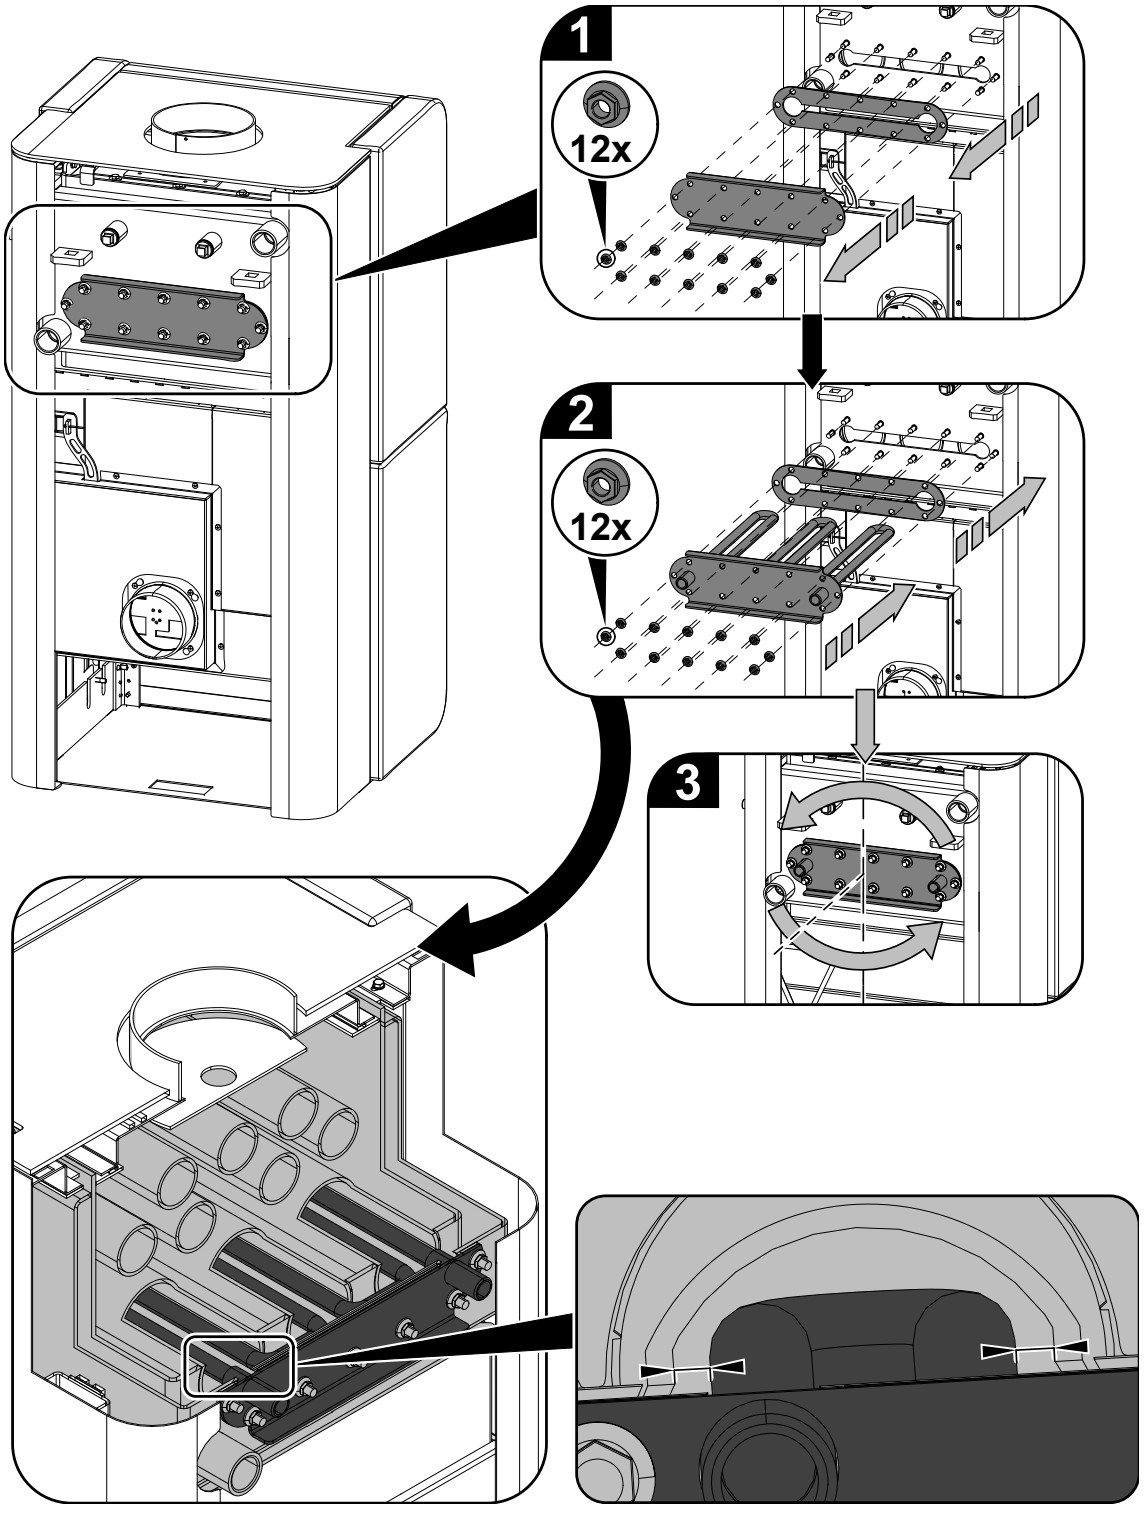


7. Návod na čištění výměníku

DŮLEŽITÉ

Čištění stírací lištou (poz. 4, obr. 5) se doporučuje provádět minimálně 1x za týden a podle způsobu provozu i častěji.


1. Příprava a namontování táhla čištění

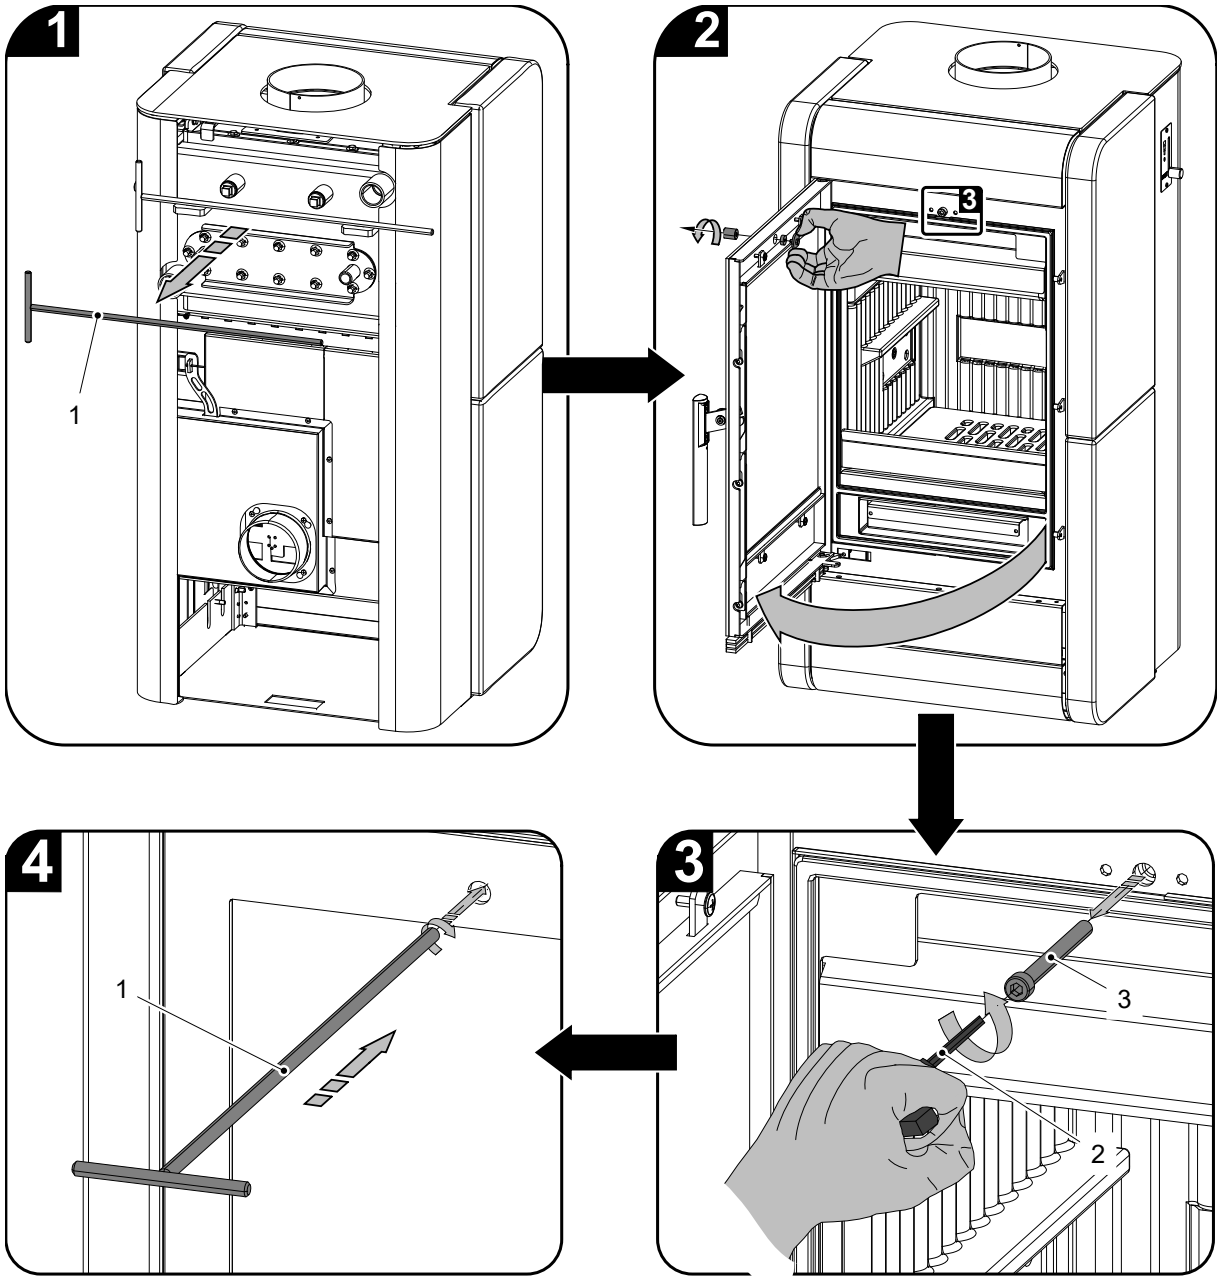

2. Samotné čištění a aretace čistící desky.

DŮLEŽITÉ

Při ukončení čištění vždy zaaretujte stírací lištu (obr. 5a). Nenechávejte stírací lištu nad plamenem (obr. 5b).

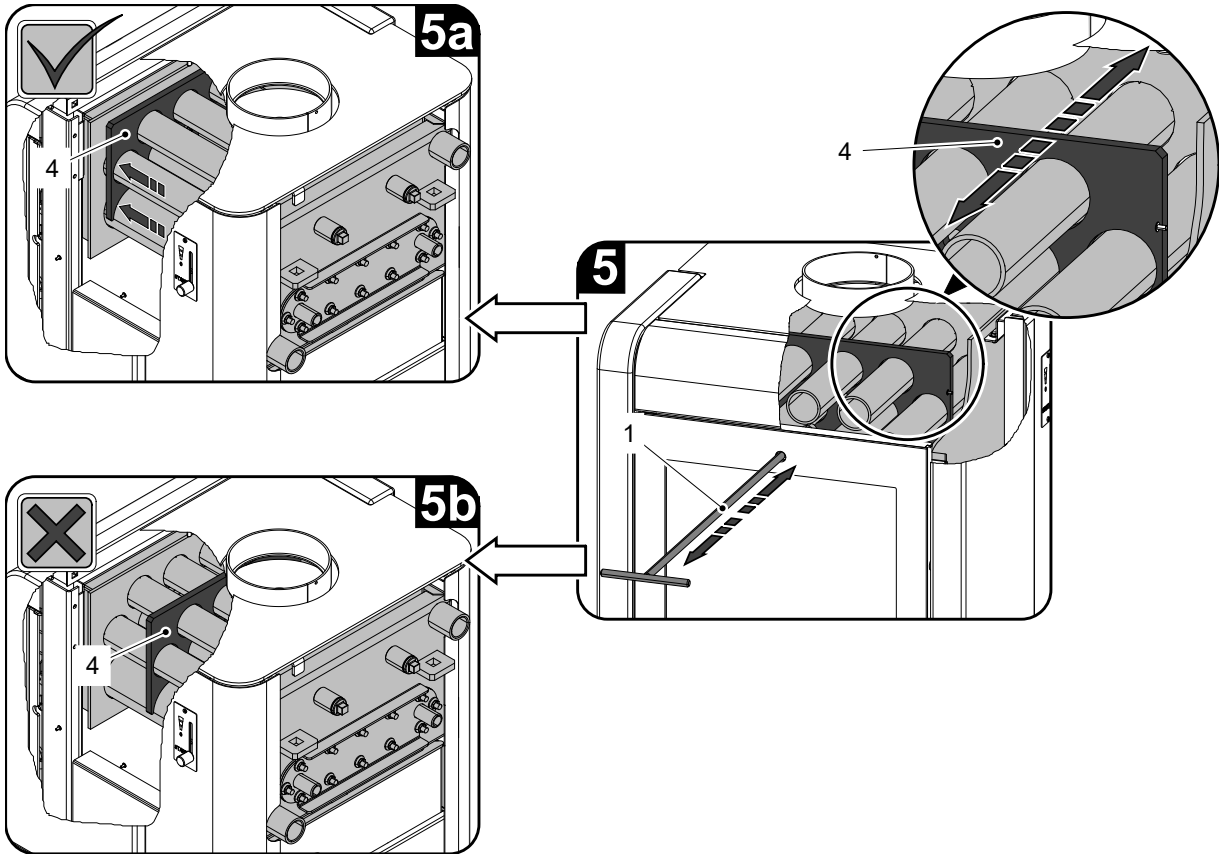

Pozice	Název	Číslo zboží
1	Táhlo čištění/černá	0433317005063
2	Imbusový klíč 8 mm (je součástí dodávky)	9001700080005
3	Šroub M10x80 (DIN 912)	0030031000805
4	Stírací lišta	—