FOXMARK
...DOMA NEJLÍP

Technical documentation

EN

Fireplace stove with exchanger

Matera with exchanger

0435215031400–

Machine translation – not reviewed.
Unchanged original at the end.

Introduction

Thank you very much for purchasing our product!

The heater description will provide you with detailed information about the heater's construction, technical specifications and operation. We recommend that you read this information carefully. This will help you avoid potential errors during your own installation and operation.

Detailed installation and operating conditions can be found in the General Operating Instructions (included in the delivery).

Notes in the text

EN



The most important are the notes marked WARNING. Notes marked WARNING alert you to a serious risk of damage to the heater or injury.



The note labeled Warning warns you of possible damage to your heater.



A note labeled Important alerts you to information important for the operation of your heater.



As such, the note draws your attention to information that is important for the operation of your heater in general.

Machine translation – not reviewed.
Unchanged original at the end.

Contents

1. Technical description 1
2. Spare parts list 2
2.1. Overall model breakdown 2
2.2. Detail A1..... 4
3. Connecting the exchanger 6
3.1. Loopless variant..... 6
3.2. Loop variant 7
4. Easy control 8
5. Ignition damper..... 9
6. Installation of the cooling loop 10
7. Instructions for cleaning the exchanger 11
7.1. Long-term cleaning of the exchanger..... 11
7.2. Short-term cleaning of the exchanger.....12


Machine translation – not reviewed.
Unchanged original at the end.

Exploded view of the model			
Position	**Name**	**Amount**	**Item number**
A1	Cast iron firebox door (set)/black	1 pc	0619018155300
B1	Closing pin (complete)	1 pc	0619018165007
B2	Firebox door hinge (set)	1 pc	0619018155005
1	Ash pan	1 pc	0432317005600
2	Barrier/black	1 pc	0419018155006
3	Refractory concrete grate	1 pc	0619018155552
4	Refractory lining – bottom (30x114x345)	2 pcs	0619018155554
5	Refractory lining – left (85x295x342)	1 pc	0619018155551
6	Refractory lining – rear (35x185x530)	1 pc	0619018155553
7	Refractory lining – right (85x295x342)	1 pc	0619018155511
8	Regulator rod/black	1 pc	0435215005011
9	Frame/black	1 pc	0435215005400
10	Tiled front/honeycomb	1 pc	0435215005120
10	Tiled front/ivory	1 pc	0435215015120
10	Tiled front/green	1 pc	0435215025120
11	Tiled baseboard/honeycomb	1 pc	0435215005150
11	Tiled plinth/ivory	1 pc	0435215015150
11	Tiled plinth/green	1 pc	0435215025150
12a	Tiled side-left/honeycomb	3 pcs	0435215005113
12a	Tiled side-left/ivory	3 pcs	0435215015113
12a	Tiled side-left/green	3 pcs	0435215025113
12b	Tiled side-right/honeycomb	3 pcs	0435215005133
12b	Tiled side-right/ivory	3 pcs	0435215015133
12b	Tiled side-right/green	3 pcs	0435215025133
13a	Side holder-left/black	1 pc	0435215005110
13b	Side holder-right/black	1 pc	0435215005130
14	Heat exchanger sealing cord 10x4 mm	1520 mm	0040210040005
15	Sealing cord for the exchanger cover 10x4 mm	1850 mm	0040210040005
16	Heat exchanger cover/black	1 pc	0435215005002
17	Tiled cornice/honeycomb	1 pc	0435215005140
17	Tiled cornice/ivory	1 pc	0435215015140
17	Tiled cornice/green	1 pc	0435215025140
18	Top cover/black	1 pc	0435215005160
19	Back cover/black	1 pc	0435215005007

Machine translation – not reviewed.
Unchanged original at the end.

20	Sensor well	1 pc	0431317006050
21	External air supply (Ø100)	1 pc	0088500050008
22	Air module	1 pc	0419018155500
P	Pedestal/black	1 pc	0435215005500
V	Exchanger/black	1 pc	0419018205050

2.2. Detail A1

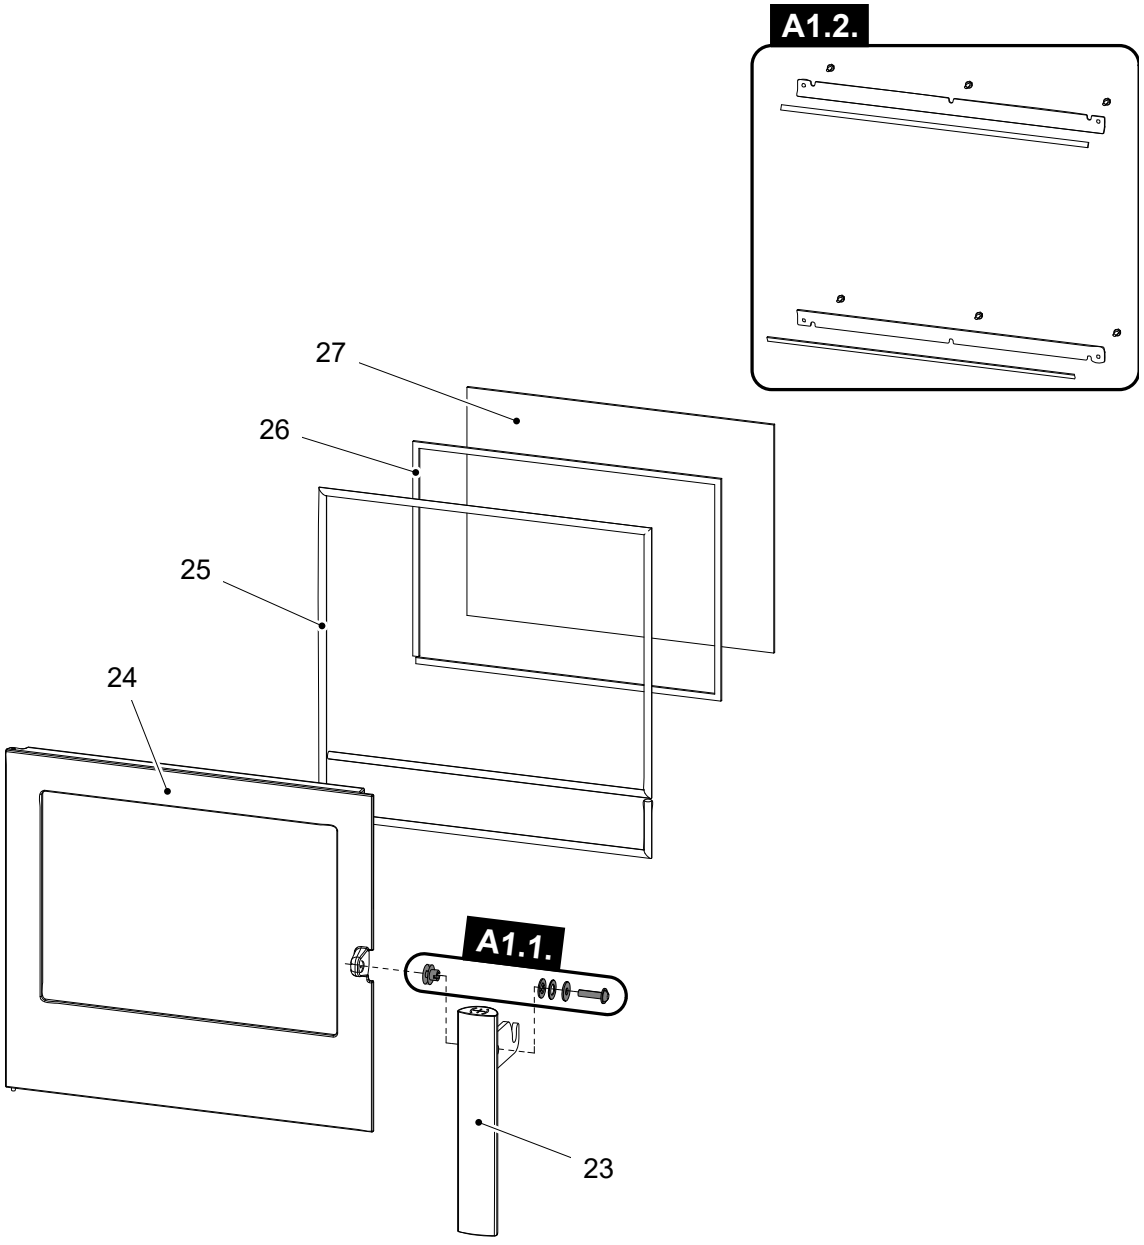

Detail A1			
Position	**Name**	**Amount**	**Item number**
A1.1. + 23	Firebox door lever lock (complete set) + handle fasteners – set	1 pc	0420114017301


Machine translation – not reviewed.
Unchanged original at the end.

A1.2.	Glass holder – set/black	1 pc	0619018155303
24	Cast iron/black firebox door	1 pc	0619018155301
25	Door sealing cord 10 mm	2600 mm	0040300100005
26	Glass sealing cord 10x4 mm	1700 mm	0040210040005
27	Heat-resistant glass (4x370x501)	1 pc	0619018155302

Machine translation – not reviewed.
Unchanged original at the end.

3. Connecting the exchanger


3.1. Loopless variant

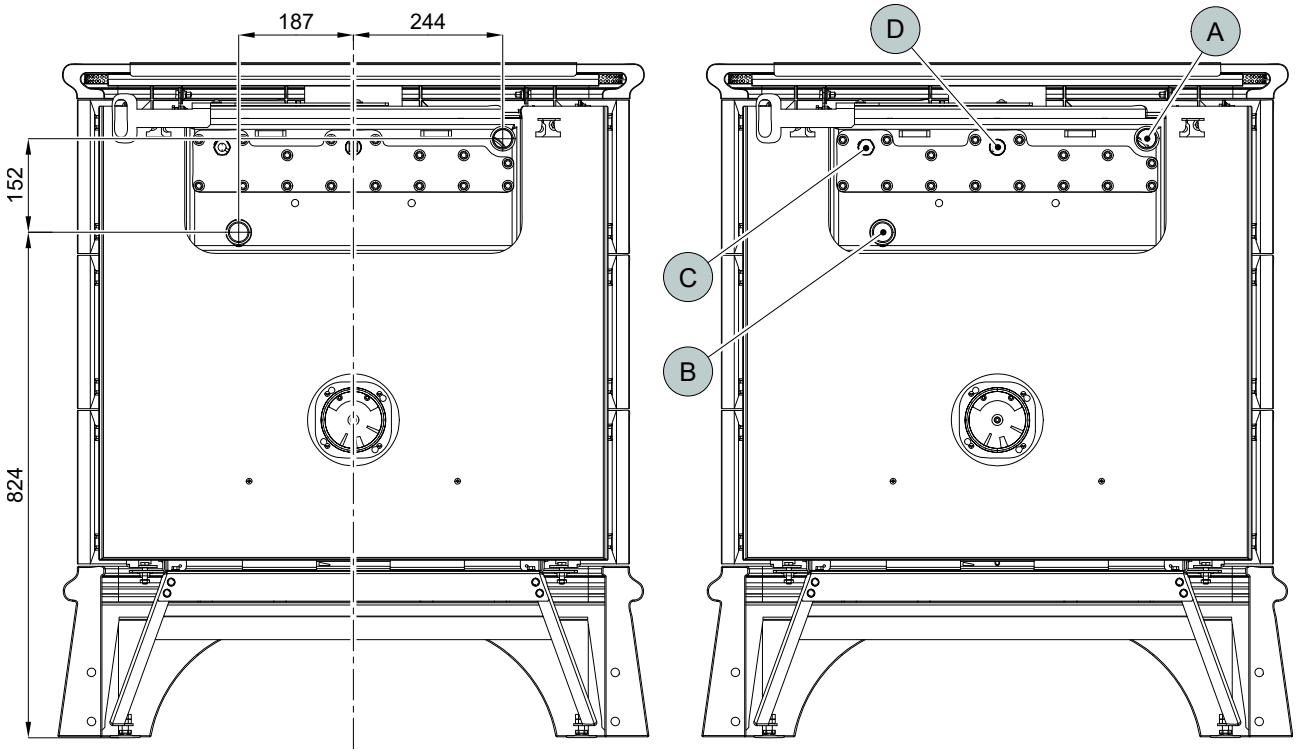

Position	Name
A	Heating water outlet (internal thread G1")
B	Return water inlet (internal thread G1")
C	Hole with well for thermostatic sensor (internal thread G1/2")/circulation pump
D	Hole for thermostatic sensor well (internal thread G1/2")/cooling loop

Machine translation – not reviewed.
Unchanged original at the end.

3.2. Loop variant

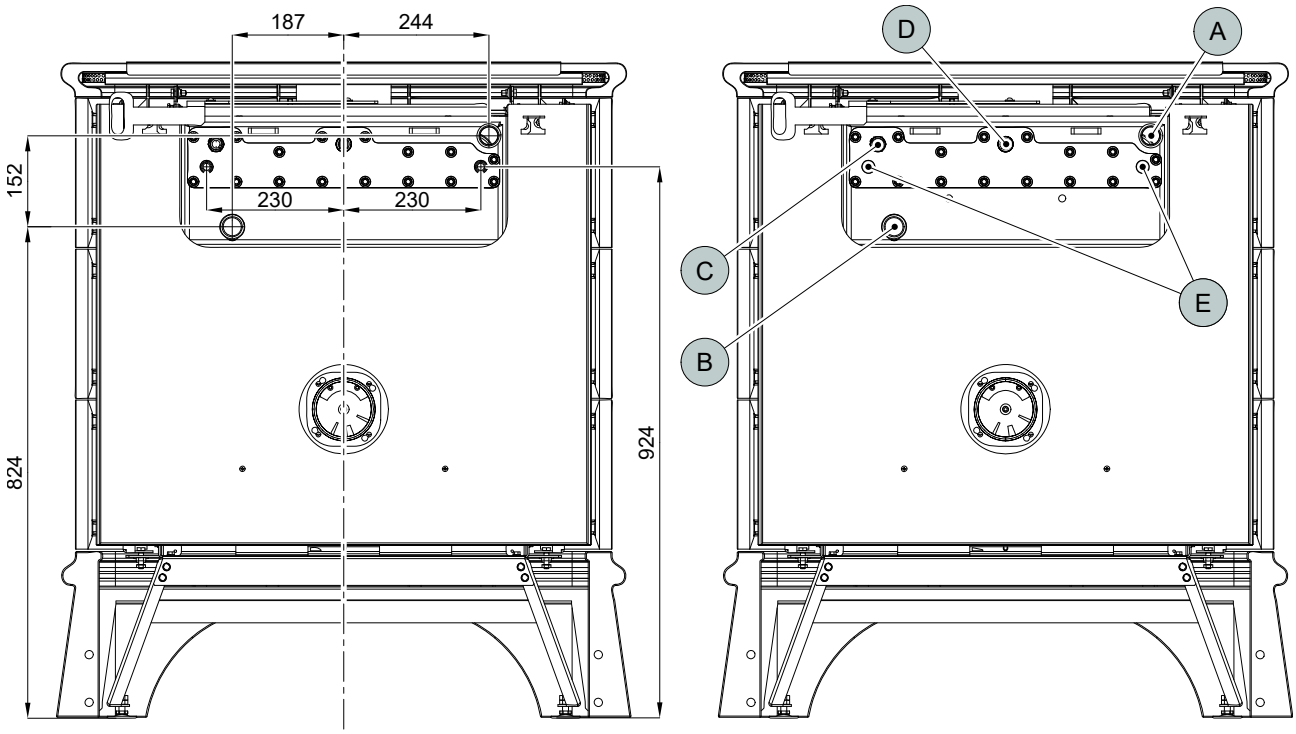

Position	Name
A	Heating water outlet (internal thread G1")
B	Return water inlet (internal thread G1")
C	Hole with well for thermostatic sensor (internal thread G1/2")/circulation pump
D	Hole for thermostatic sensor well (internal thread G1/2")/cooling loop
E	Cooling loop inlet/outlet (G1/2" male thread)

Machine translation – not reviewed.
Unchanged original at the end.


4. Easy control


Control of all three air inlets (primary, secondary, tertiary) using only one regulator.

1. The regulator is in the position designated for ignition (Fig. A). All three air inlets (primary, secondary, tertiary) are open.
2. Setting the Easy control regulator in heating mode (fig. B).
3. The regulator is in the position designated for closing the air inlets (fig. C). No inlet is open (primary, secondary, tertiary). This position is only used when the stove is out of operation, after the heating process has ended.

WARNING

During the heating process, the air inlets must not be closed (Fig. C)! In extreme cases, an explosion in the stove may occur, resulting in glass shattering, embers scattering around the room and a fire.

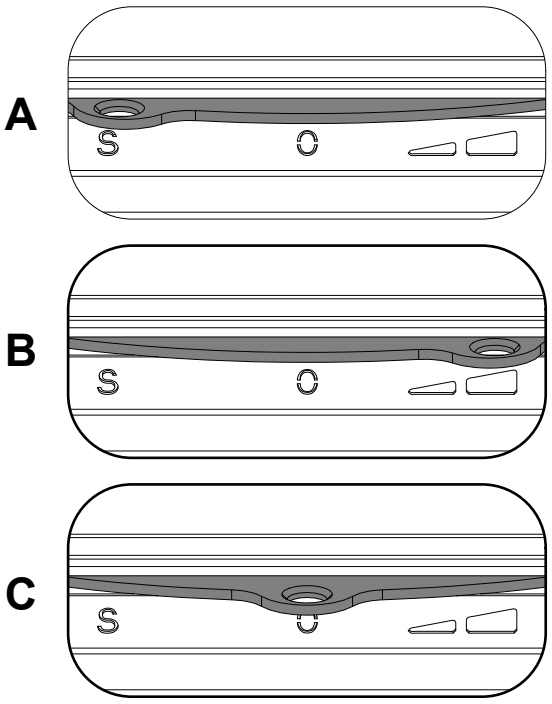

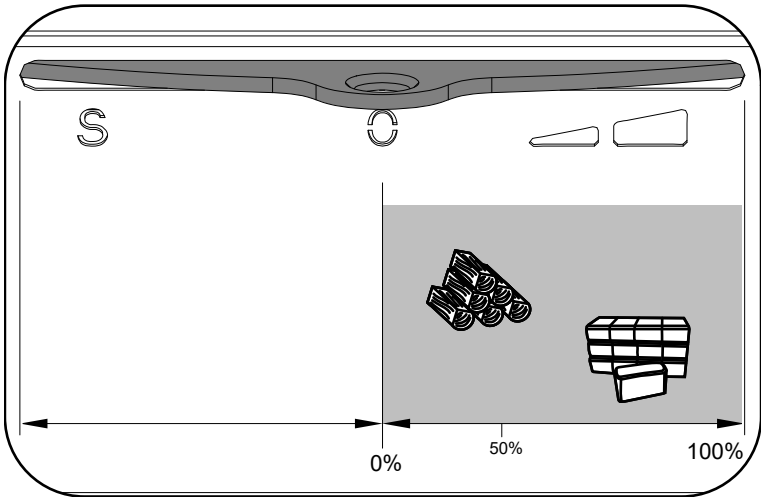

Machine translation – not reviewed.
Unchanged original at the end.


5. Ignition damper


IMPORTANT

In case of ignition or poor chimney draft, slide the ignition damper regulator to position 1 (fig. A), the ignition damper is open. When heating, slide the ignition damper regulator to position 0 (fig. B), the ignition damper is closed.

Note

Please note that prolonged heating with the ignition damper open significantly reduces the efficiency of the heater, increases fuel consumption and worsens emission parameters!

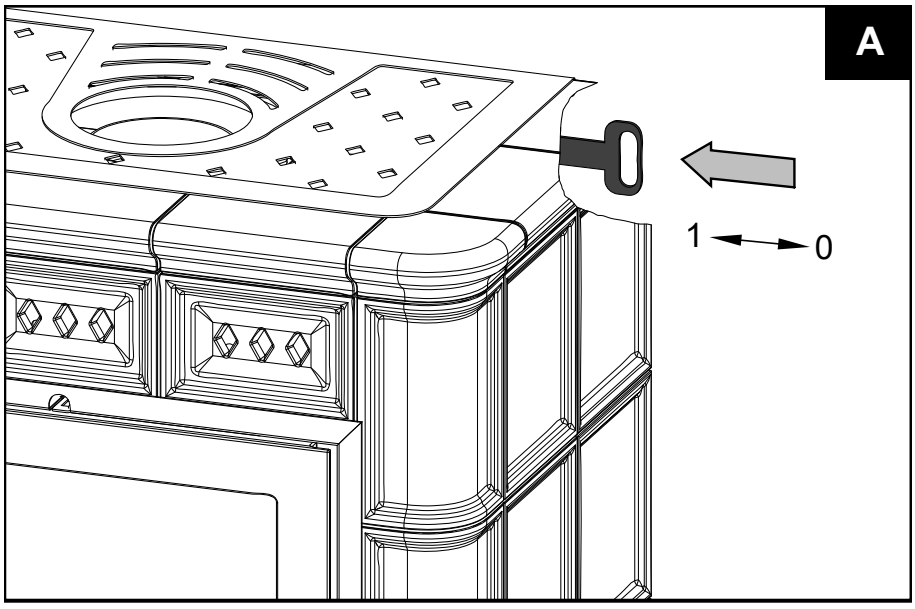

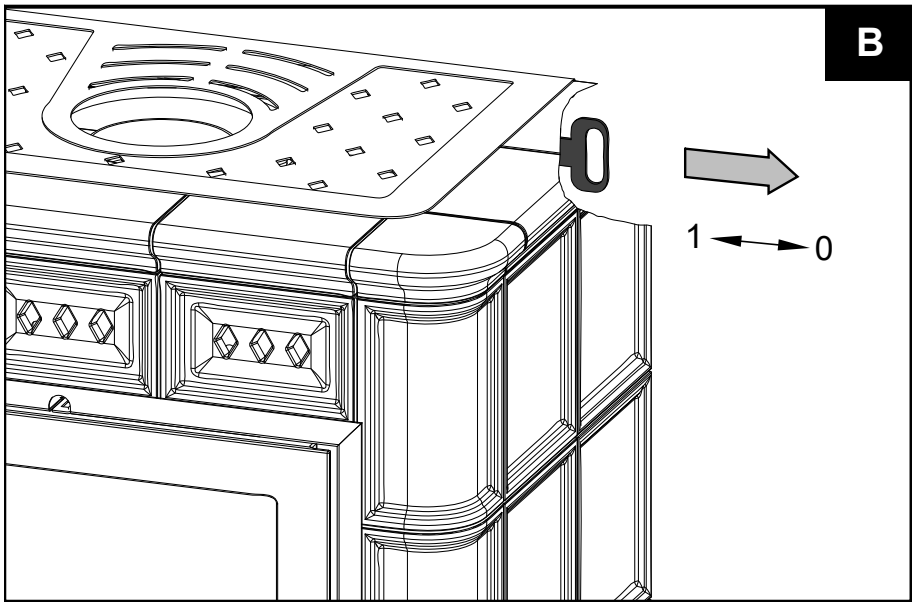


Machine translation – not reviewed.
Unchanged original at the end.

6. Installation of the cooling loop

IMPORTANT

The cooling loop is supplied as a separate accessory.

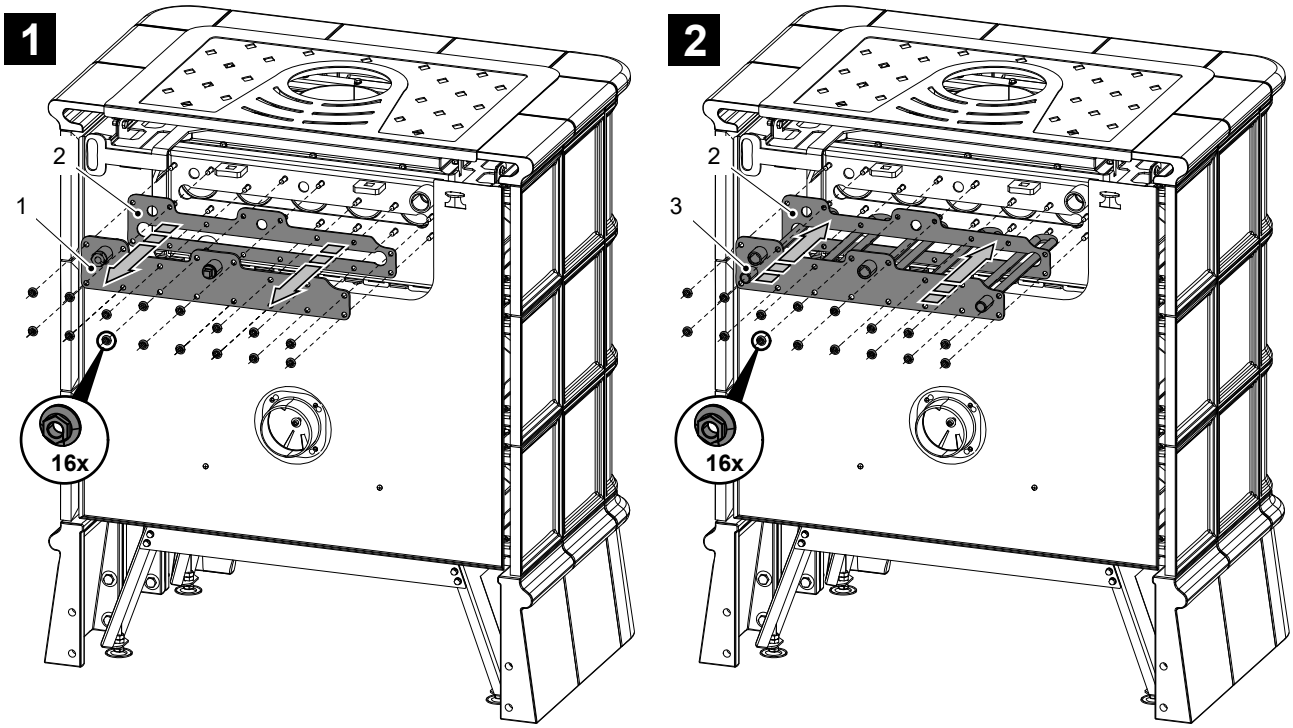

Position	Name	Item number
1	Loop cover/black	0419018305023
2	Seal	0419018305013
3	Cooling loop	0419018155018


Machine translation – not reviewed.
Unchanged original at the end.

7. Instructions for cleaning the exchanger

7.1. Long-term cleaning of the exchanger

NOTICE

Perform long-term cleaning of the exchanger from above after removing the exchanger cover, or from below from the furnace, at least 1 time a year (e.g. before the heating season).

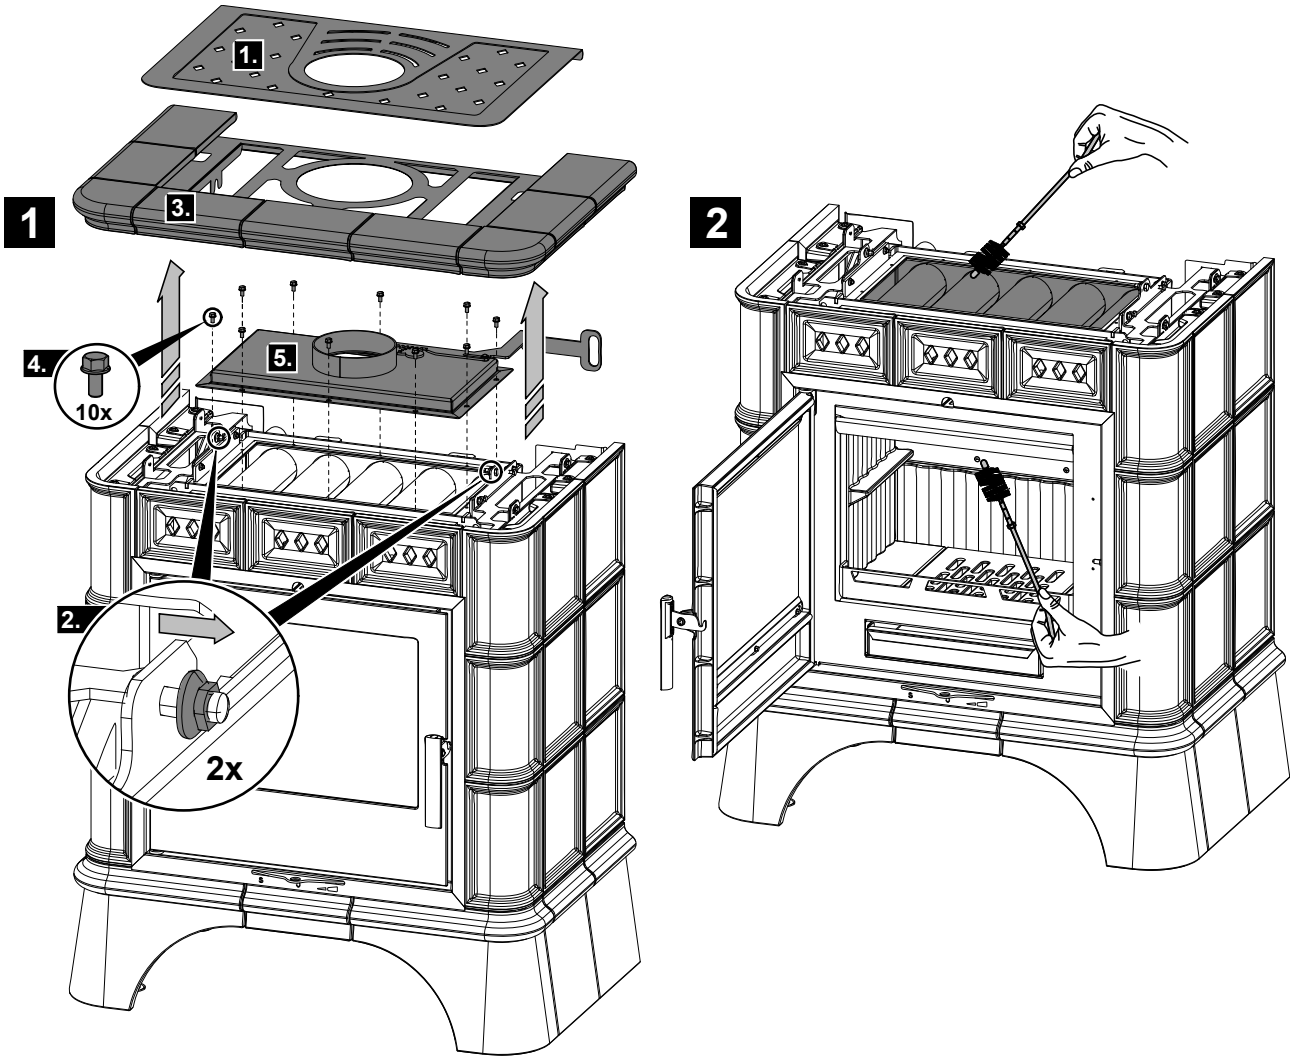


Machine translation – not reviewed.
Unchanged original at the end.

7.2. Short-term cleaning of the exchanger


IMPORTANT

It is recommended to clean the wiper blade (pos. 4, fig. 3) at least 1 time a week, or more often depending on the heating intensity.

1

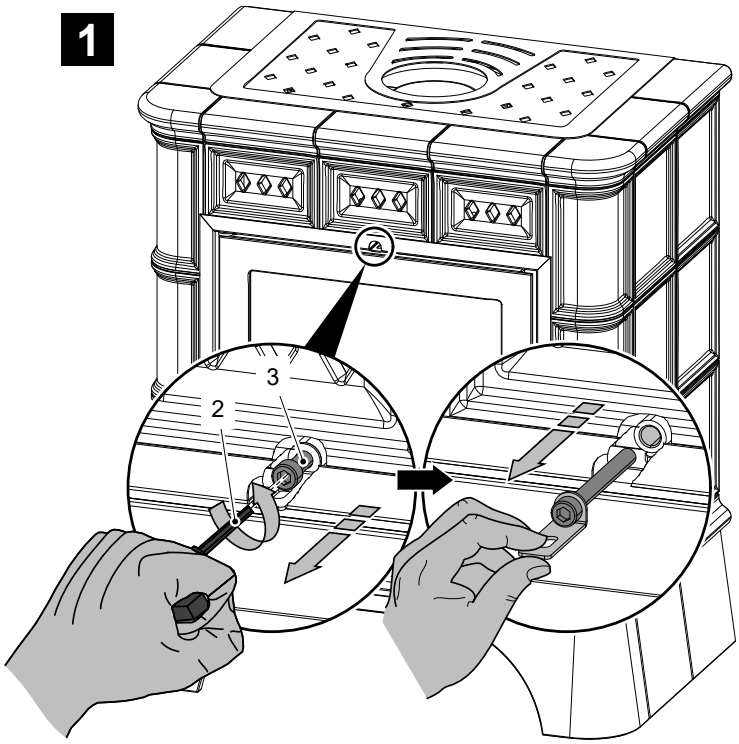


2

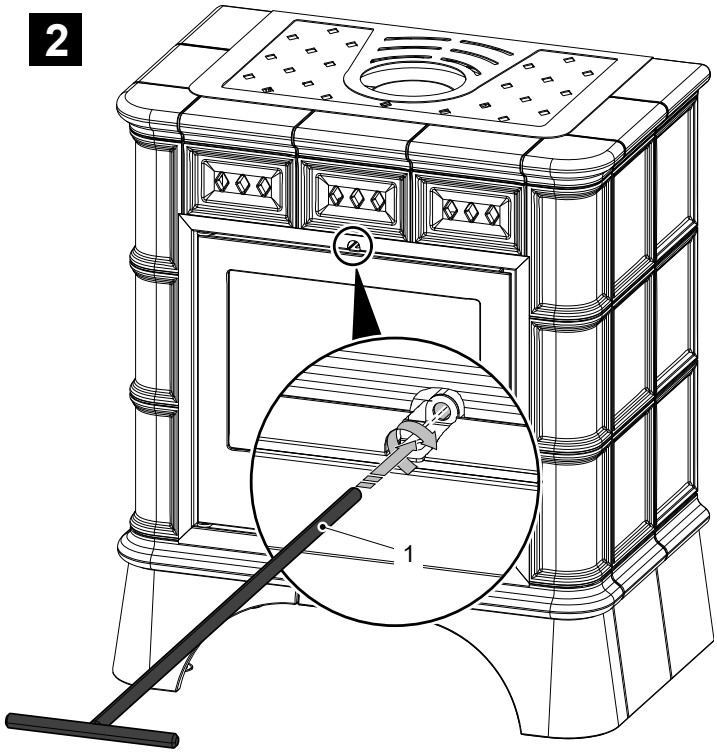

Machine translation – not reviewed.
Unchanged original at the end.

3

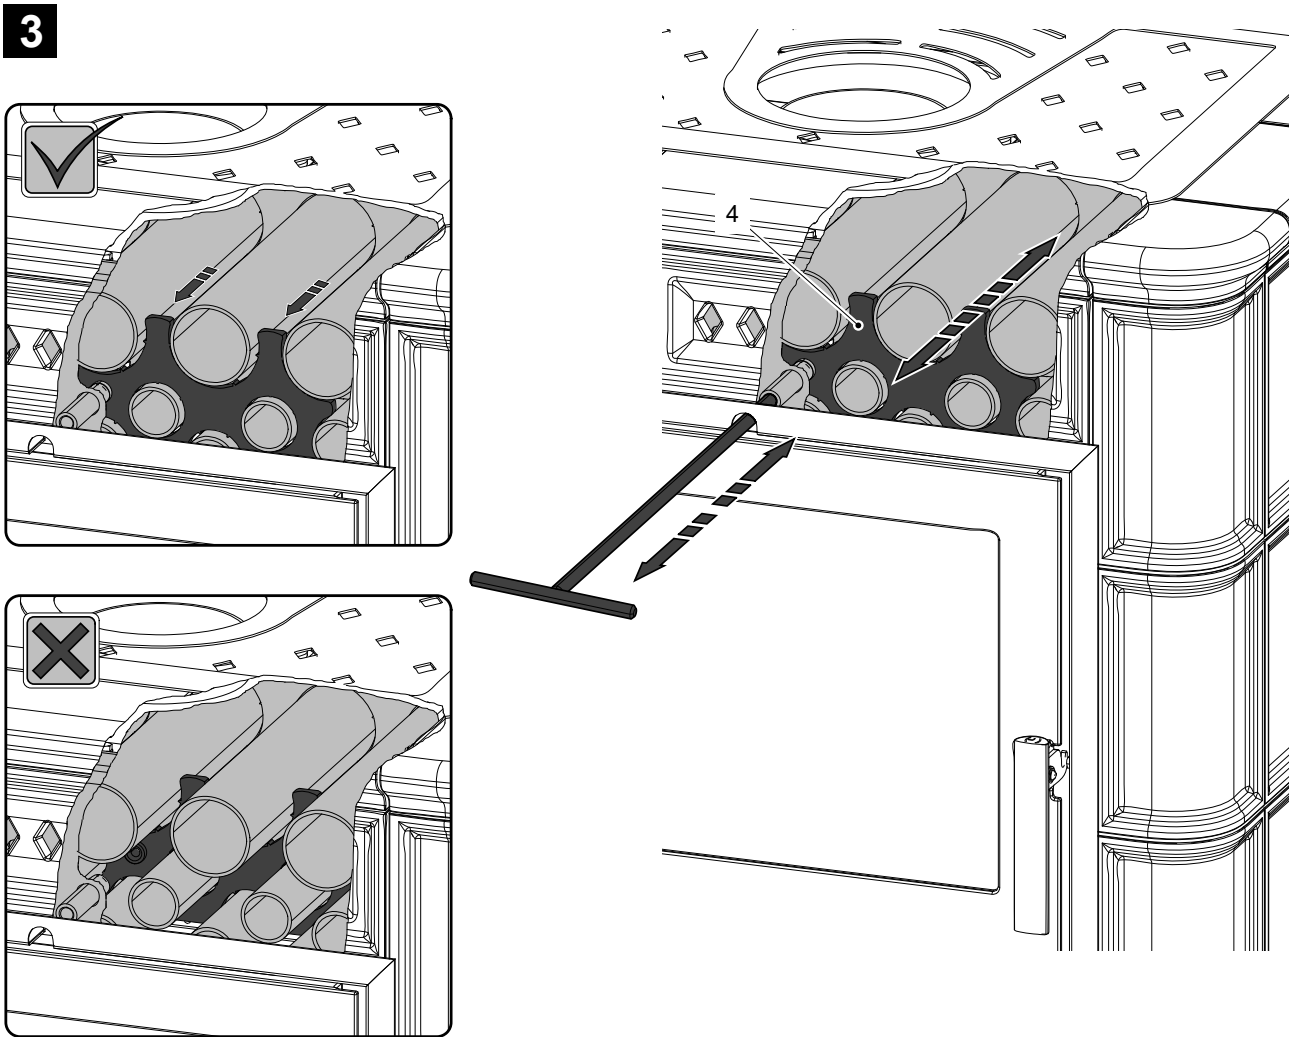

Position	Name	Item number
1	Cleaning rod/black	0433317005063
2	8 mm Allen key (included)	9001700085002
3	Screw M10x100 (DIN 912)	0030031001005
4	Wiper blade	–

Machine translation – not reviewed.
Unchanged original at the end.

FOXMARK

...DOMA NEJLÍP

Technická dokumentace

CZ

Krbová kamna s výměníkem

Matera s výměníkem

04352150314000–

Úvod

Srdečně děkujeme za zakoupení našeho výrobku!

Popis topidla Vás podrobně seznámí s konstrukcí, technickou specifikací a obsluhou topidla. Doporučujeme seznámit se pozorně s těmito údaji. Vyvarujete se tak případných chyb při vlastní montáži a obsluze.

Podrobné podmínky instalace a obsluhy naleznete ve Všeobecném návodu k obsluze (součást dodávky).

Poznámky v textu



Nejdůležitější jsou poznámky nadepsané **VAROVÁNÍ**. Poznámky nadepsané **VAROVÁNÍ** Vás upozorňují na **vážné nebezpečí poškození topidla či poranění.**



Poznámka nadepsaná **Upozornění** Vás upozorňuje na možná poškození Vašeho topidla.



Poznámka nadepsaná **Důležité** Vás upozorňuje na informace důležité k provozu Vašeho topidla.



Poznámka jako taková Vás upozorňuje zcela obecně na informace důležité k provozu Vašeho topidla.

CZ

Obsah

1. Technický popis 1

2. Seznam náhradních dílů 2
2.1. Celkový rozstřel modelu 2
2.2. Detail A1 4

3. Zapojení výměníku 6
3.1. Varianta bez smyčky 6
3.2. Varianta se smyčkou 7


4. Easy control 8

5. Zatápěcí klapka 9

6. Montáž vychlazovací smyčky 10


7. Návod na čištění výměníku 11
7.1. Dlouhodobé čištění výměníku 11
7.2. Krátkodobé čištění výměníku 12

1. Technický popis

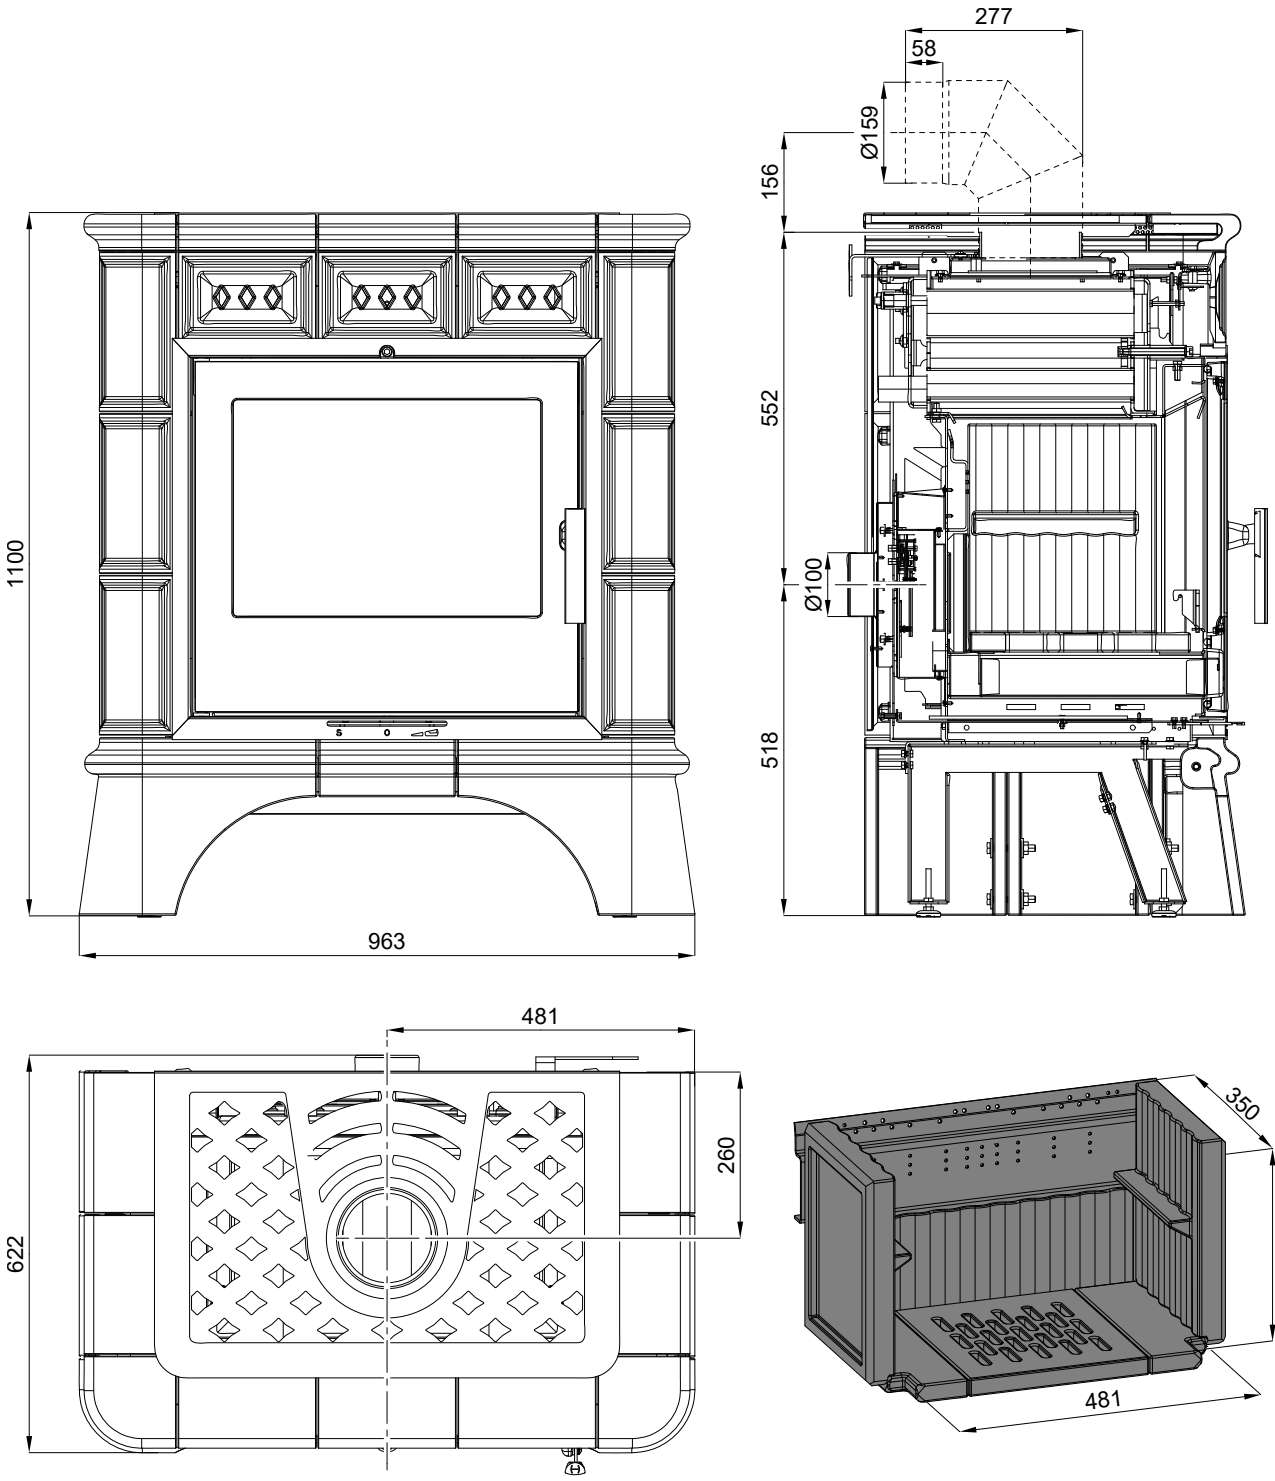

2. Seznam náhradních dílů


2.1. Celkový rozstřel modelu

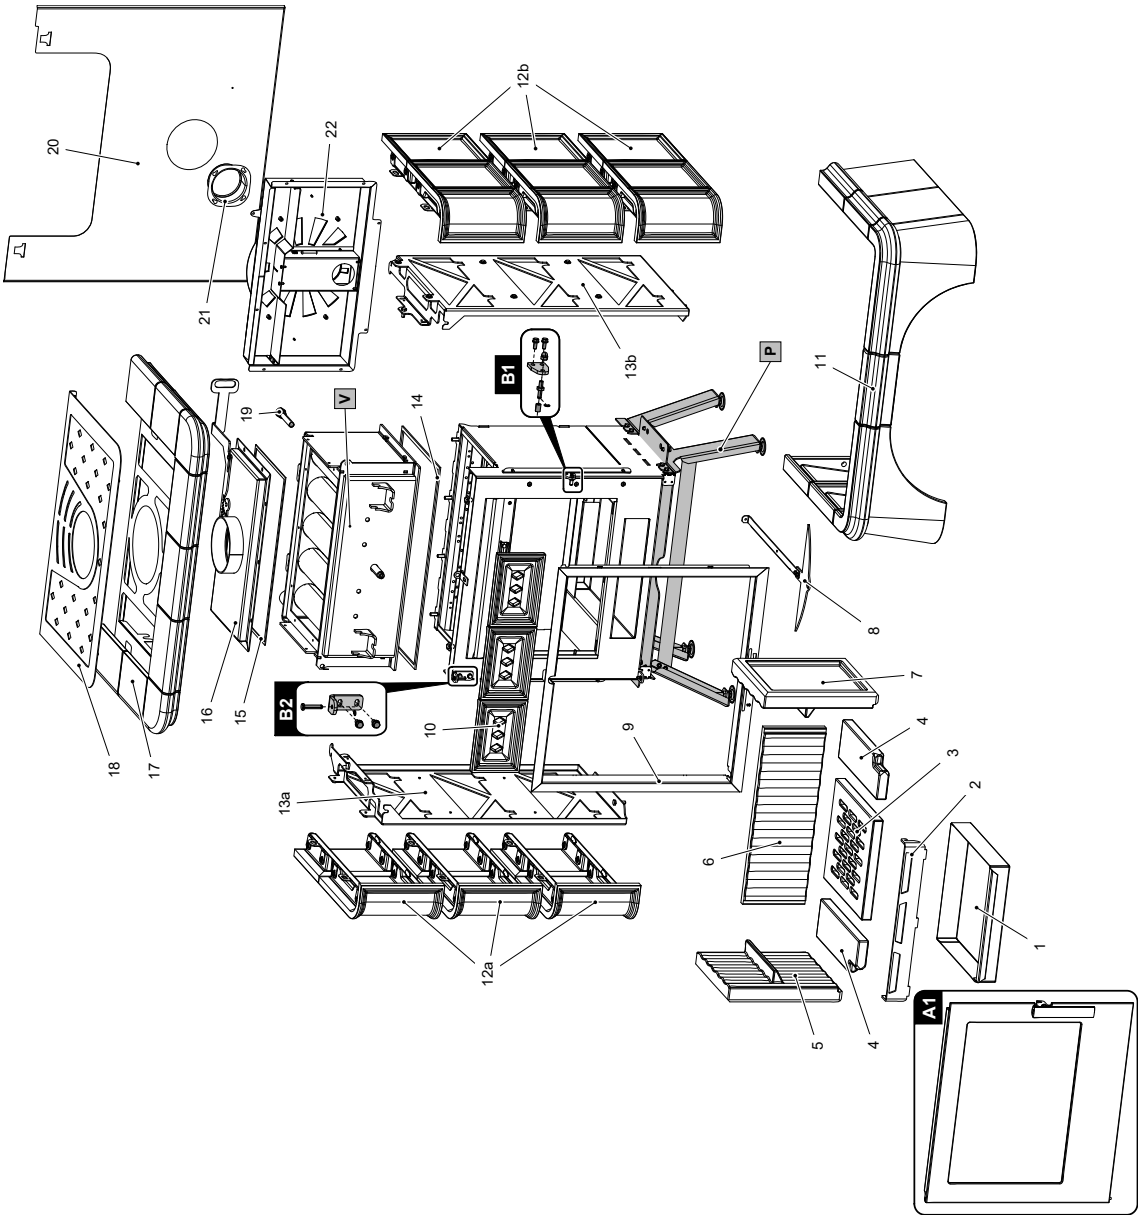

Celkový rozstřel modelu			
Pozice	**Název**	**Množství**	**Číslo zboží**
A1	Dvířka topeniště litinová (komplet)/černá	1 ks	0619018155300
B1	Čep zavírání (komplet)	1 ks	0619018165007
B2	Závěs dvířek topeniště (komplet)	1 ks	0619018155005
1	Popelník	1 ks	0432317005600
2	Zábrana/černá	1 ks	0419018155006
3	Žárobetonový rošt	1 ks	0619018155552
4	Žáruvzdorná vyzdívka – spodní (30x114x345)	2 ks	0619018155554
5	Žáruvzdorná vyzdívka – levá (85x295x342)	1 ks	0619018155551
6	Žáruvzdorná vyzdívka – zadní (35x185x530)	1 ks	0619018155553
7	Žáruvzdorná vyzdívka – pravá (85x295x342)	1 ks	0619018155511
8	Táhlo regulátoru/černá	1 ks	0435215005011
9	Rám/černá	1 ks	0435215005400
10	Kachlové čelo/medovník	1 ks	0435215005120
10	Kachlové čelo/slonová kost	1 ks	0435215015120
10	Kachlové čelo/zelená	1 ks	0435215025120
11	Kachlový sokl/medovník	1 ks	0435215005150
11	Kachlový sokl/slonová kost	1 ks	0435215015150
11	Kachlový sokl/zelená	1 ks	0435215025150
12a	Kachlový bok-levý/medovník	3 ks	0435215005113
12a	Kachlový bok-levý/slonová kost	3 ks	0435215015113
12a	Kachlový bok-levý/zelená	3 ks	0435215025113
12b	Kachlový bok-pravý/medovník	3 ks	0435215005133
12b	Kachlový bok-pravý/slonová kost	3 ks	0435215015133
12b	Kachlový bok-pravý/zelená	3 ks	0435215025133
13a	Držák boku-levý/černá	1 ks	0435215005110
13b	Držák boku-pravý/černá	1 ks	0435215005130
14	Těsnící šňůra výměníku 10x4 mm	1520 mm	0040210040005
15	Těsnící šňůra víka výměníku 10x4 mm	1850 mm	0040210040005
16	Víko výměníku/černá	1 ks	0435215005002
17	Kachlová římsa/medovník	1 ks	0435215005140
17	Kachlová římsa/slonová kost	1 ks	0435215015140
17	Kachlová římsa/zelená	1 ks	0435215025140
18	Vrchní kryt/černá	1 ks	0435215005160
19	Zadní kryt/černá	1 ks	0435215005007

20	Jímka na čidlo	1 ks	0431317006050
21	Externí přívod vzduchu (Ø100)	1 ks	0088500050008
22	Modul vzduchu	1 ks	0419018155500
P	Podstavec/černá	1 ks	0435215005500
V	Výměník/černá	1 ks	0419018205050

2.2. Detail A1

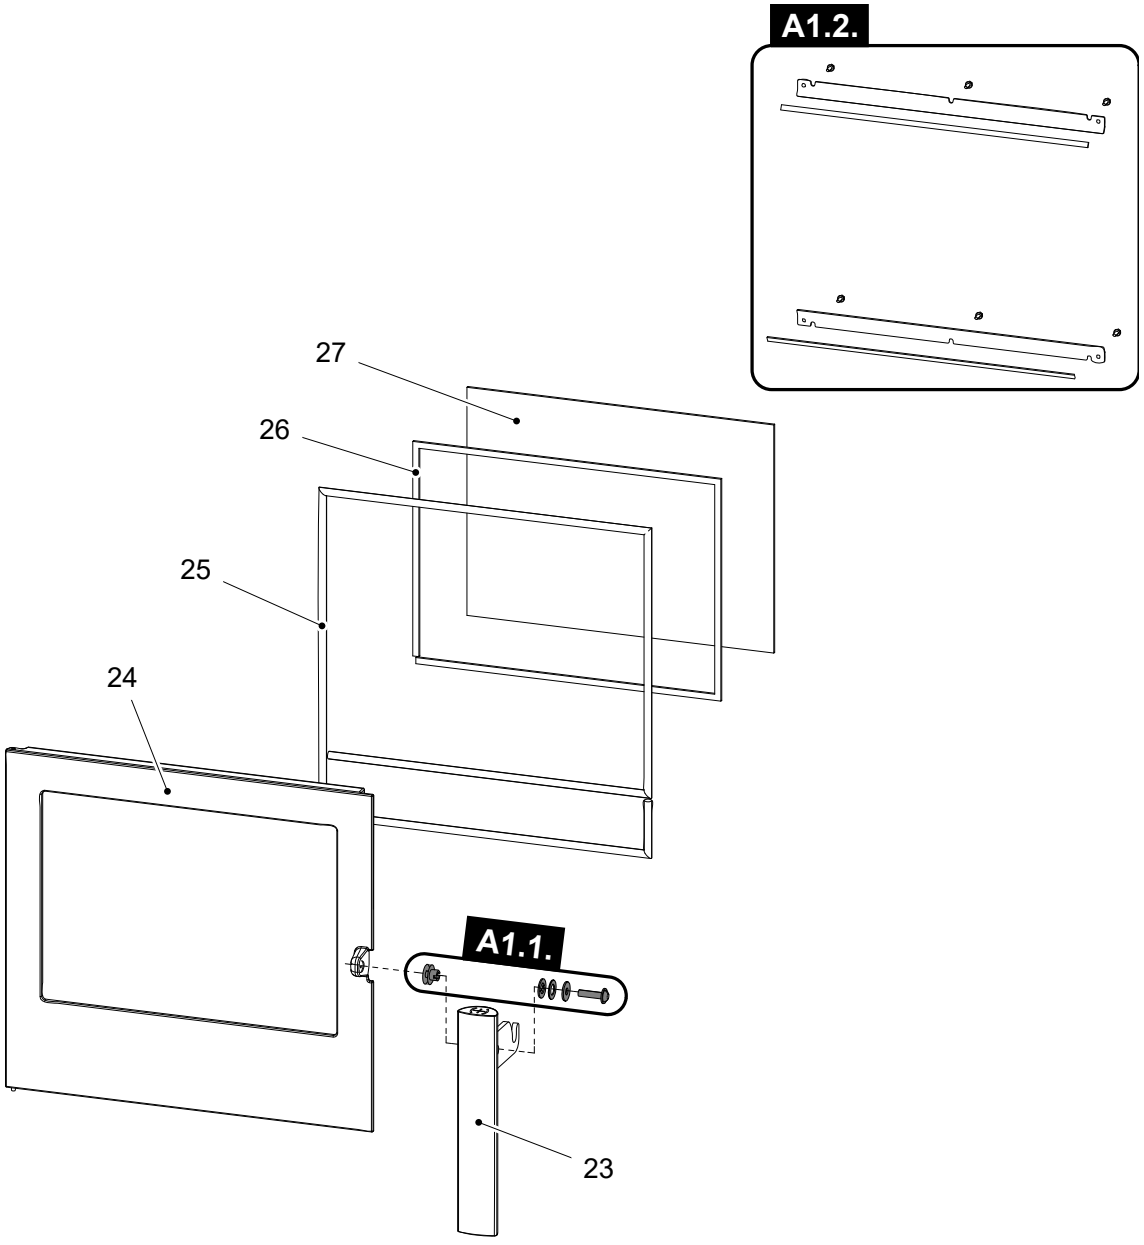


Detail A1			
Pozice	**Název**	**Množství**	**Číslo zboží**
A1.1. + 23	Pákový uzávěr dvířek topeniště (komplet) + spojovací materiál kliky – set	1 ks	0420114017301

A1.2.	Držák skla – set/černá	1 ks	0619018155303
24	Dvířka topeniště litinová/černá	1 ks	0619018155301
25	Těsnící šňůra dveří 10 mm	2600 mm	0040300100005
26	Těsnící šňůra skla 10x4 mm	1700 mm	0040210040005
27	Žáruvzdorné sklo (4x370x501)	1 ks	0619018155302


3. Zapojení výměníku

3.1. Varianta bez smyčky

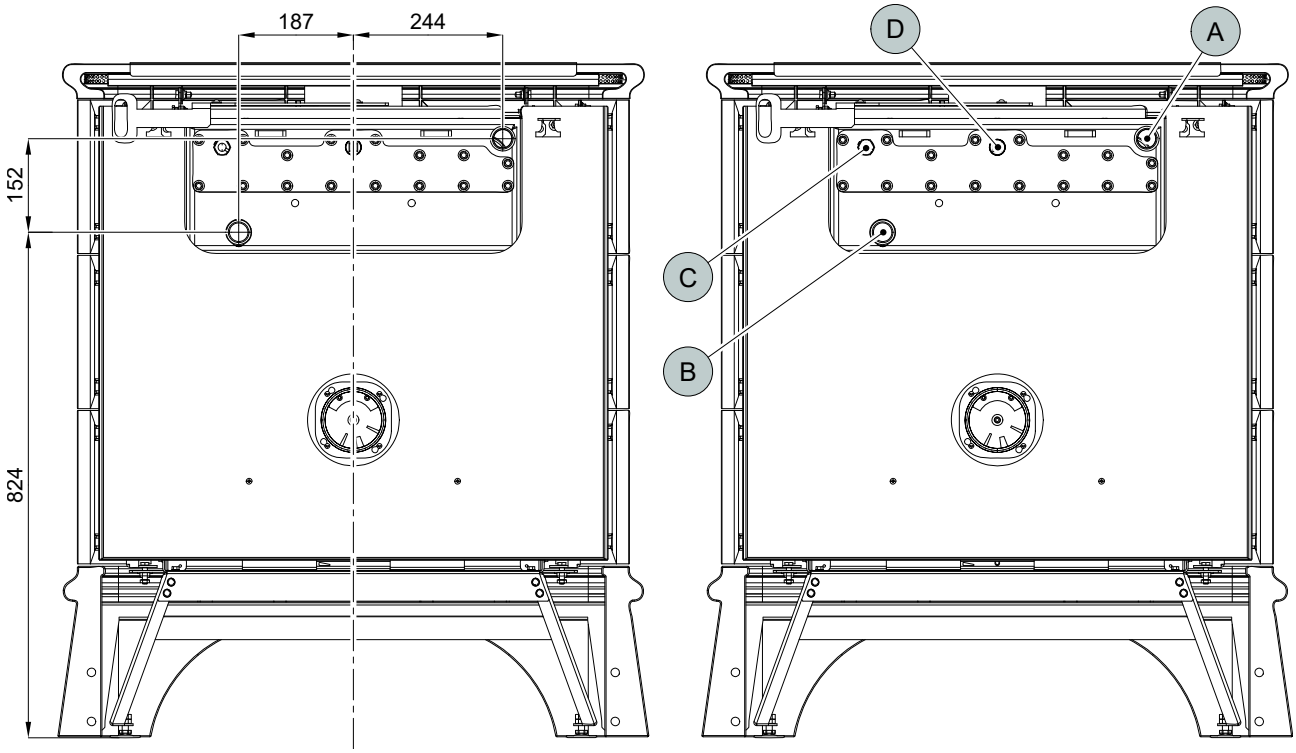

Pozice	Název
A	Vývod topné vody (vnitřní závit G1")
B	Přívod vratné vody (vnitřní závit G1")
C	Otvor s jímkou pro termostatické čidlo (vnitřní závit G1/2")/oběhové čerpadlo
D	Otvor pro jímku termostatického čidla (vnitřní závit G1/2")/vychlazovací smyčka

3.2. Varianta se smyčkou

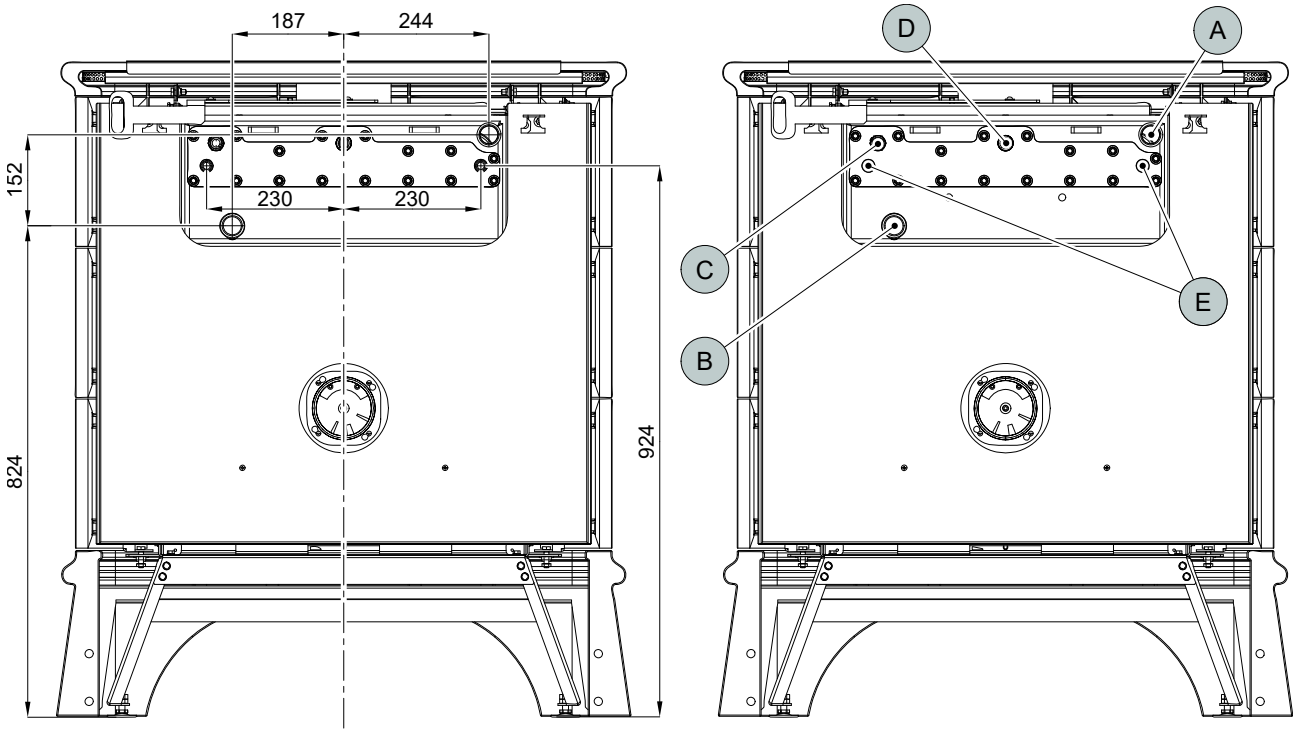

Pozice	Název
A	Vývod topné vody (vnitřní závit G1")
B	Přívod vratné vody (vnitřní závit G1")
C	Otvor s jímkou pro termostatické čidlo (vnitřní závit G1/2")/oběhové čerpadlo
D	Otvor pro jímku termostatického čidla (vnitřní závit G1/2")/vychlazovací smyčka
E	Vstup/výstup vychlazovací smyčky (vnější závit G1/2")


4. Easy control


Ovládání všech tří přívodů vzduchů (primárního, sekundárního, terciálního) pouze pomocí jednoho regulátoru.

1. Regulátor je v pozici určené pro zátop (obr. A). Jsou otevřeny všechny tři přívody vzduchu (primární, sekundární, terciální).
2. Nastavení regulátoru Easy control v režimu topení (obr. B).
3. Regulátor je v pozici určené pro uzavření přívodů vzduchu (obr. C). Žádný přívod není otevřen (primární, sekundární, terciální). Tato pozice se používá pouze v případě, kdy jsou kamna mimo provoz, po ukončení procesu topení.

VAROVÁNÍ

Během procesu topení nesmí dojít k uzavření přívodů vzduchu (obr. C)! V krajním případě může dojít i k explozi v kamnech a následnému roztříštění skla, rozmetání uhlíků po místnosti a ke vzniku požáru.

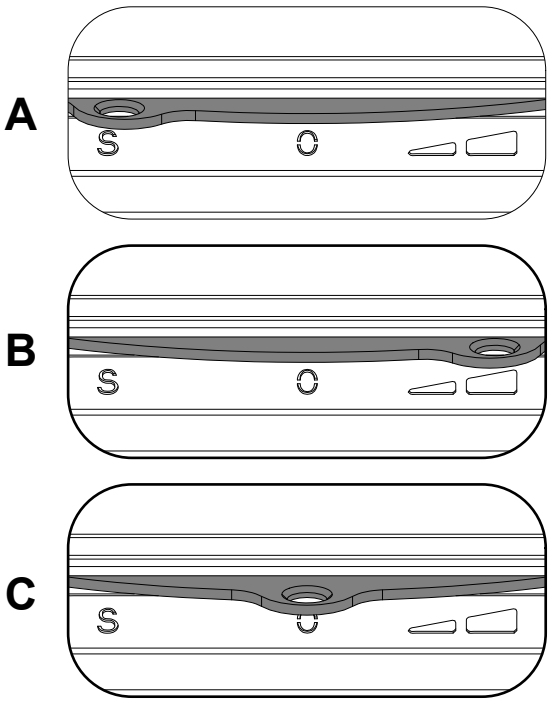

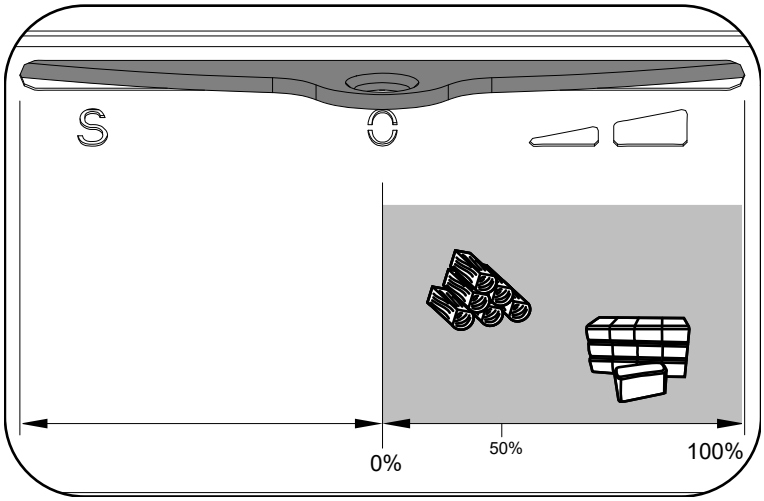


5. Zatápěcí klapka


DŮLEŽITÉ

V případě zatápění či zhoršeného tahu komína zasuňte regulátor zatápěcí klapky do polohy 1 (obr. A), zatápěcí klapka je otevřena. Při topení vysuňte regulátor zatápěcí klapky do polohy 0 (obr. B), zatápěcí klapka je zavřena.

Poznámka

Vezměte na zřetel, že při dlouhodobém topení s otevřenou zatápěcí klapkou významně klesá účinnost topidla, narůstá spotřeba paliva a zhoršují se emisní parametry!

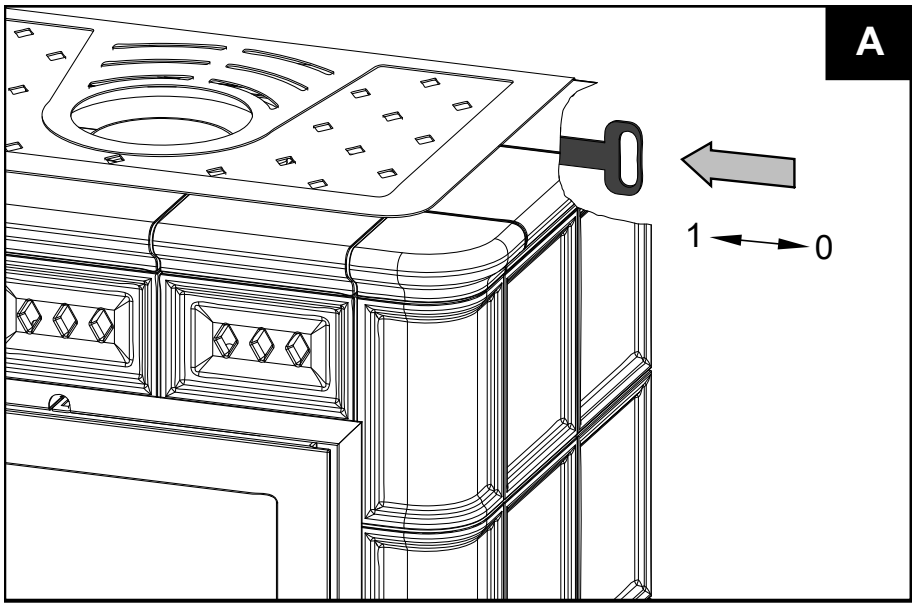


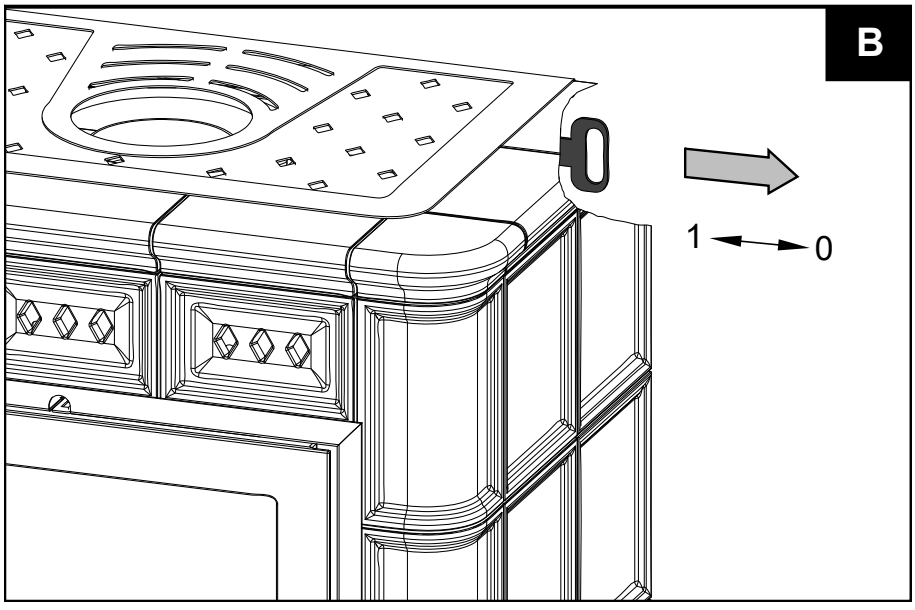

6. Montáž vychlazovací smyčky

DŮLEŽITÉ

Vychlazovací smyčka je dodávána jako zvláštní příslušenství.

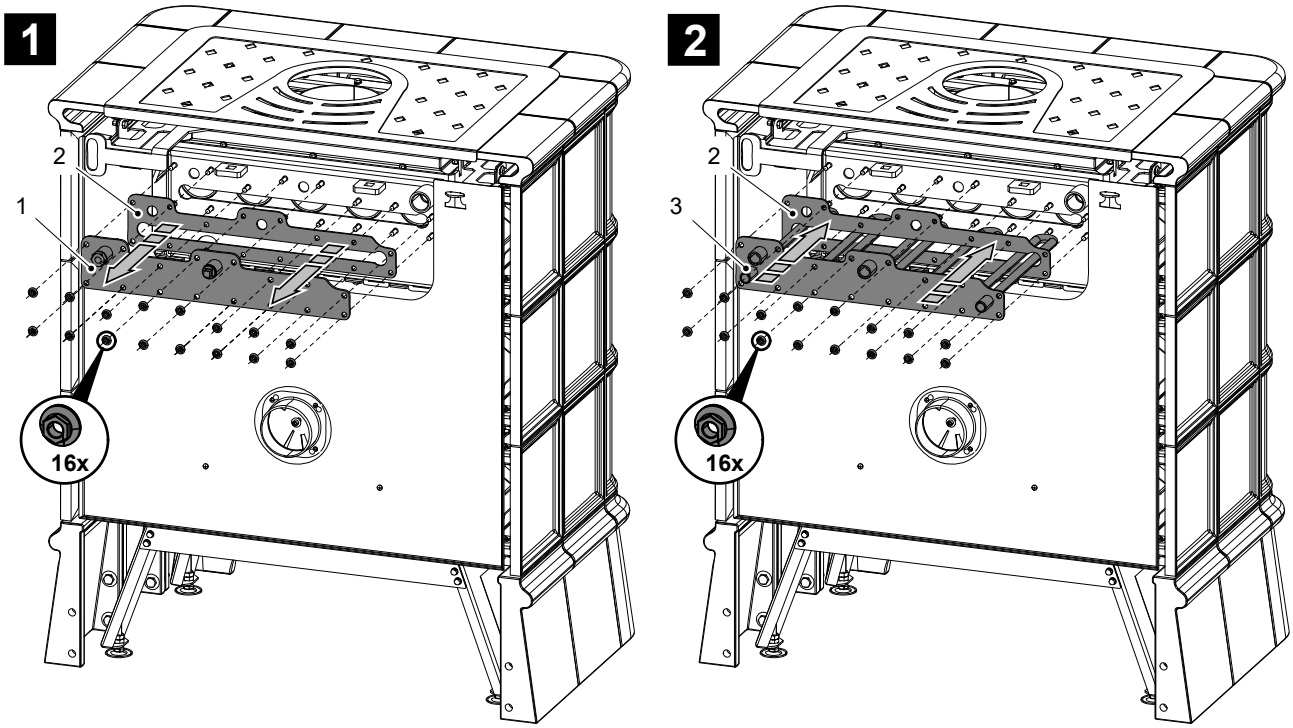


Pozice	Název	Číslo zboží
1	Víko smyčky/černá	0419018305023
2	Těsnění	0419018305013
3	Vychlazovací smyčka	0419018155018

7. Návod na čištění výměníku

7.1. Dlouhodobé čištění výměníku

UPOZORNĚNÍ

Dlouhodobé čištění výměníku provádějte shora po odejmutí víka výměníku, nebo zdola z topeniště, a to minimálně 1x za rok (např. před topnou sezónou).

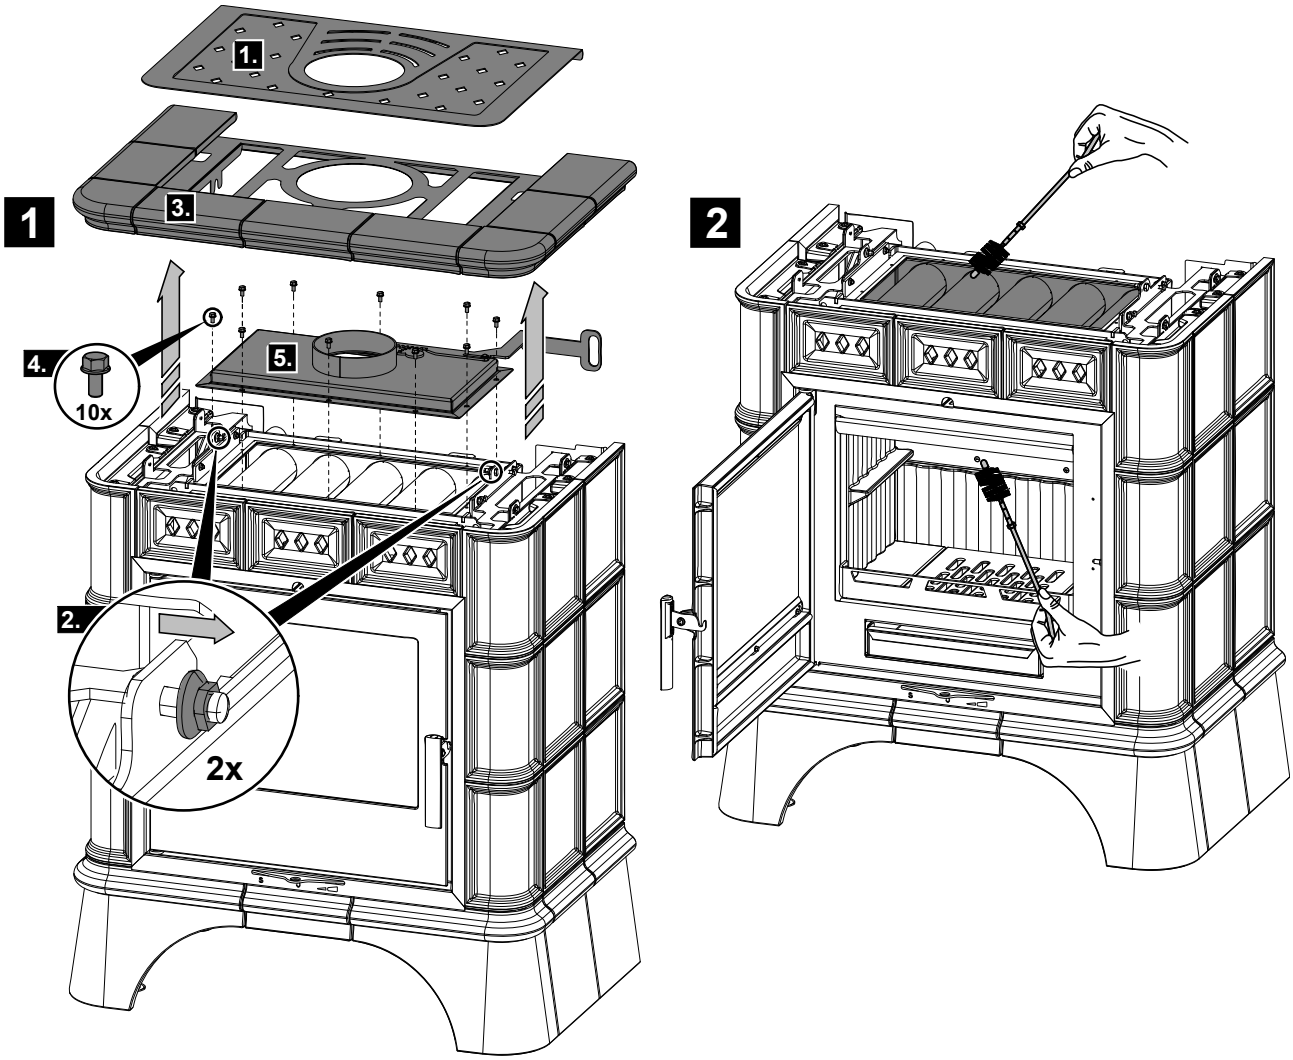


7.2. Krátkodobé čištění výměníku


DŮLEŽITÉ

Čištění stírací lištou (poz. 4, obr. 3) se doporučuje provádět minimálně 1x za týden, případně i častěji v závislosti na intenzitě topení.


1

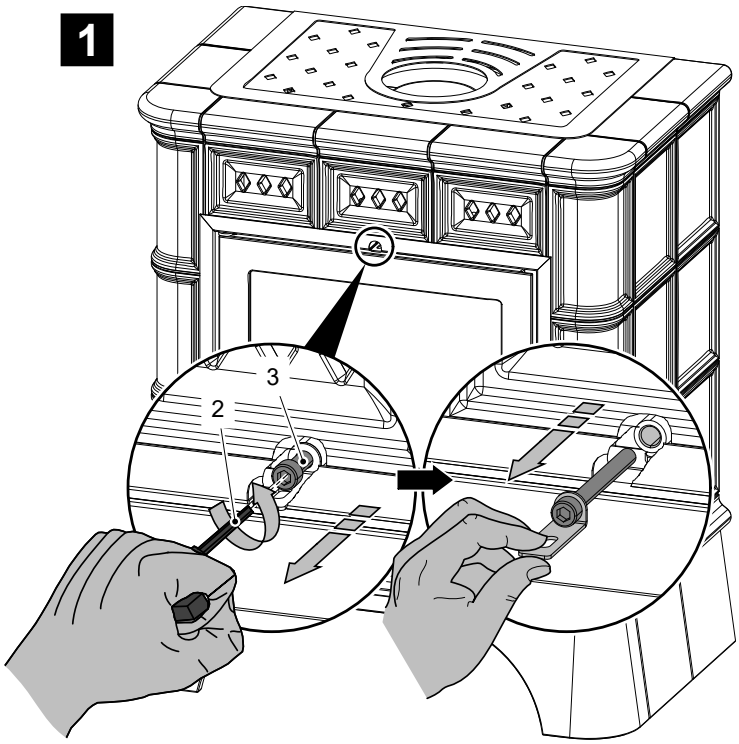

2

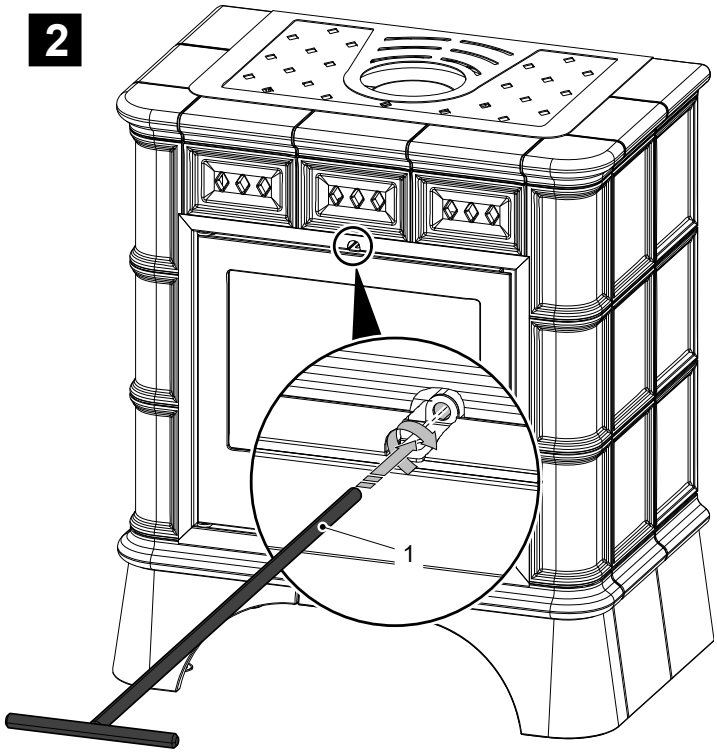

3

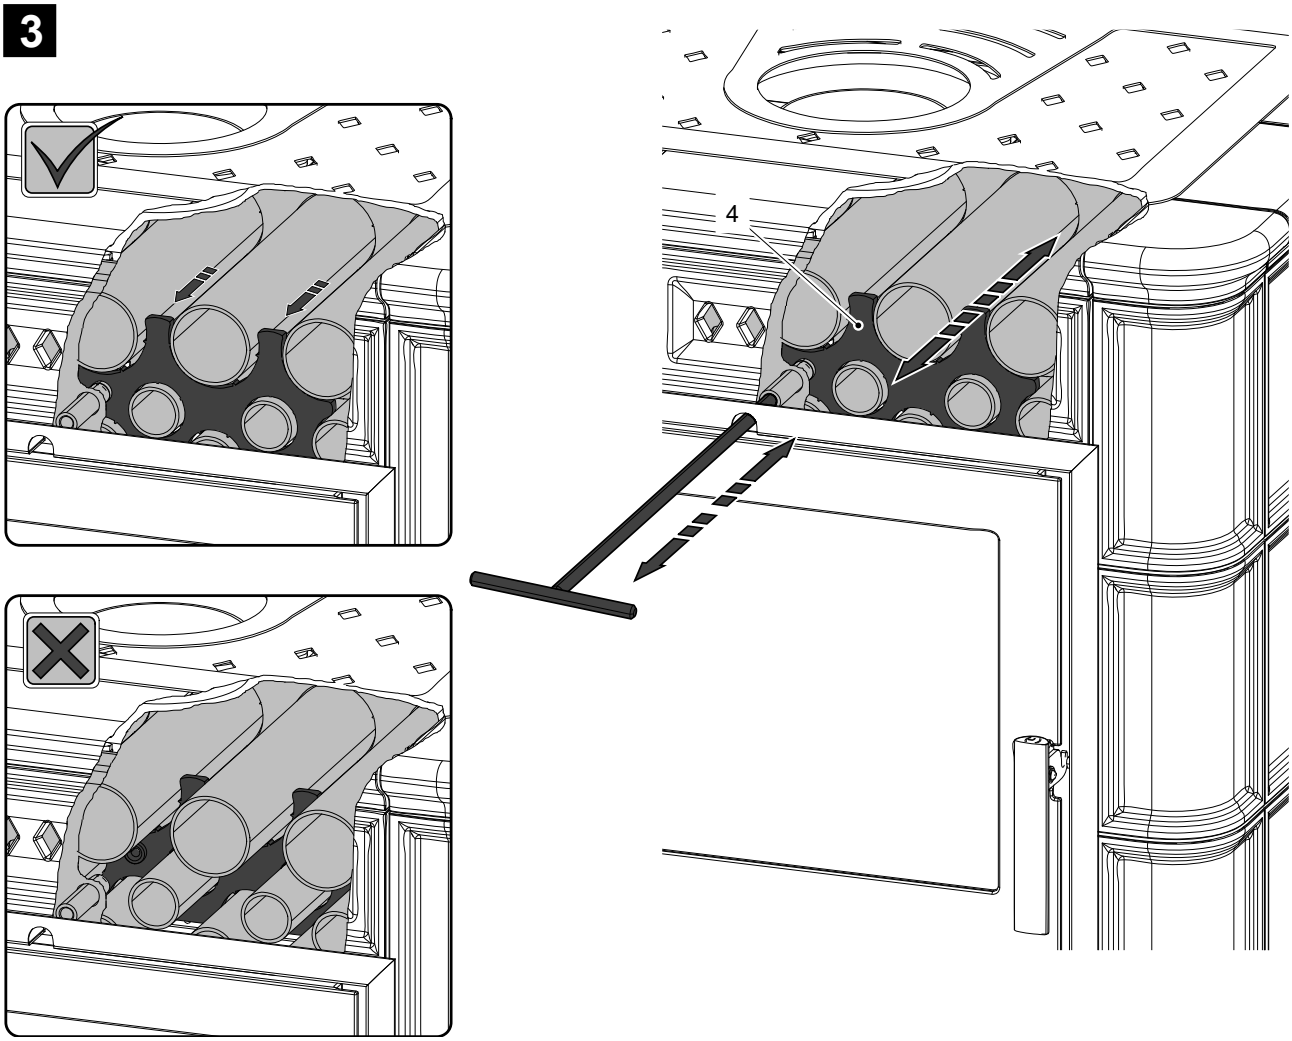

Pozice	Název	Číslo zboží
1	Táhlo čištění/černá	0433317005063
2	Imbusový klíč 8 mm (je součástí dodávky)	9001700085002
3	Šroub M10x100 (DIN 912)	0030031001005
4	Stírací lišta	–