Introduction

Thank you very much for purchasing our product!

The heater description will provide you with detailed information about the heater's construction, technical specifications and operation. We recommend that you read this information carefully. This will help you avoid potential errors during your own installation and operation.

Detailed installation and operating conditions can be found in the General Operating Instructions (included in the delivery).

Notes in the text

EN



The most important are the notes marked WARNING. Notes marked WARNING alert you to a serious risk of damage to the heater or injury.



The note labeled Warning warns you of possible damage to your heater.



A note labeled Important alerts you to information important for the operation of your heater.



As such, the note draws your attention to information that is important for the operation of your heater in general.

Machine translation – not reviewed.
Unchanged original at the end.


Contents

1. Dimensional diagram..... 1
2. Spare parts list 2
2.1. Overall model breakdown 2
2.2. Detail A1..... 4
3. Easy control 5
4. Replacing the flue pipe 6
5. Air supply replacement 7
6. Locking the door in the open position..... 8

Machine translation – not reviewed.
Unchanged original at the end.

2. Spare parts list

2.1. Exploded view of the model

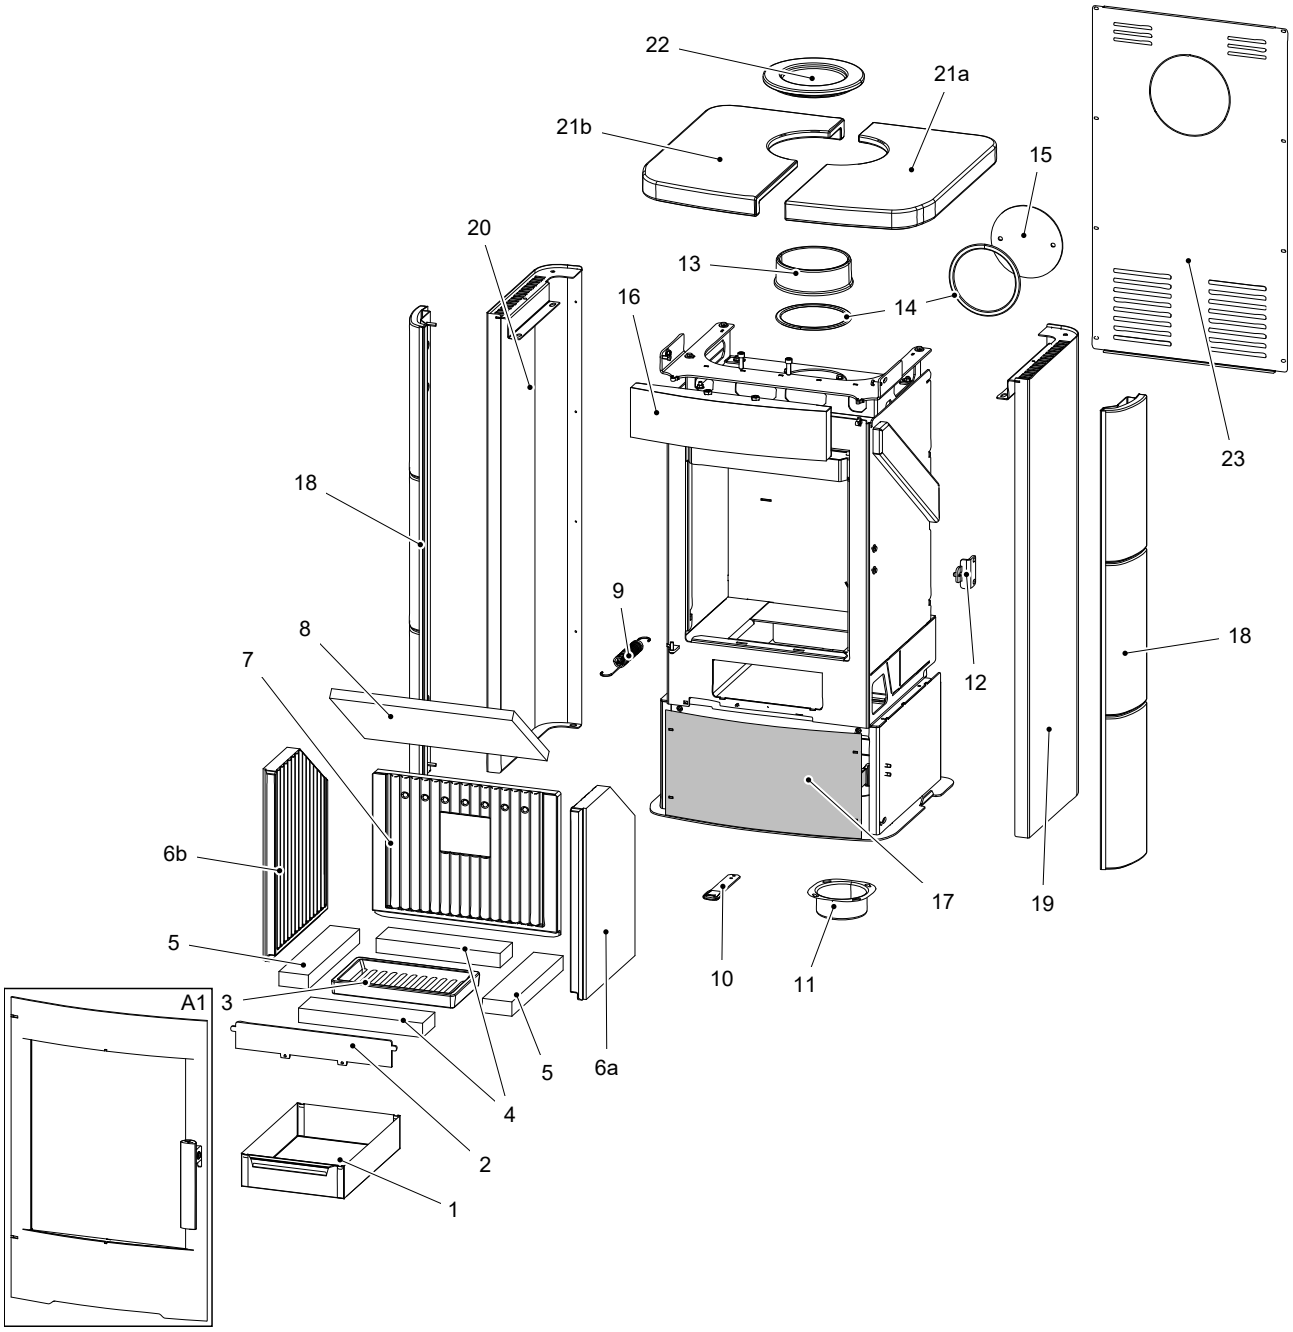


Position	Name	Amount	Item number
Exploded view of the model			
A1	Firebox door (set)/black	1 pc	0424637705300
1	Ash pan	1 pc	0424617405600
2	Barrier/black	1 pc	0424617405005

Machine translation – not reviewed.
Unchanged original at the end.

3	Grate/black	1 pc	0429415005005
4	Brick 30x70x261	2 pcs	0424617405506
5	Brick 30x62x292	2 pcs	0424617405505
6a	Right side (30x300x415)	1 pc	0428315005502
6b	Left side (30x300x415)	1 pc	0428315005503
7	Back (30x390x320)	1 pc	0428315005501
8	Aperture (vermiculite)	1 pc	0424617405504
9	Door spring	1 pc	0428612005002
10	Regulator rod/black	1 pc	0424637705015
11	External air supply (Ø100)	1 pc	0088500050008
12	Closing pin (complete)	1 pc	0424637005001
13	Flue/black	1 pc	0494015005020
14	Flue pipe cord seal 10x4 mm	470 mm	0040210040005
15	Flue pipe plug/black	1 pc	0424617405011
16	Front cover/black	1 pc	0424637705045
17	Door bottom/black	1 pc	0424637705920
18	Side panel/white	2 pcs	0424637705101
18	Side panel/havana	2 pcs	0424637715101
19	Side cover right/black	1 pc	0424637705060
20	Side cover left/black	1 pc	0424637705050
21a	Upper paneling, white/black	1 pc	0434515006200
21a	Upper panel parvý/havana	1 pc	0434515016200
21b	Upper left trim/white	1 pc	0434515006201
21b	Upper left panel/havana	1 pc	0434515016201
22	Ceramic lid/white (optional accessory)	1 pc	0435015006100
22	Ceramic lid/havana (optional accessory)	1 pc	0435015016100
23	Rear cover	1 pc	0424637705903

Machine translation – not reviewed.
Unchanged original at the end.

2.2. Detail A1

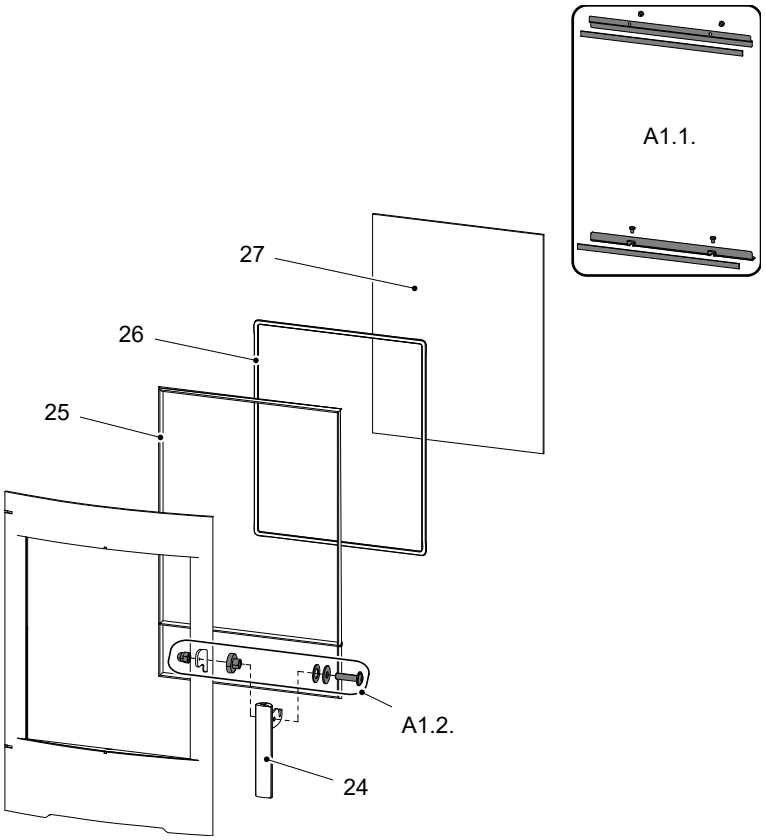

Position	Name	Amount	Item number
Detail A1			
A1.1.	Glass holder – set/black	1 pc	0424618005302
A1.2.	Handle fasteners – set	1 pc	0424637005315
24	Handle	1 pc	0424618005310
25	Door sealing cord 10 mm	2210 mm	0040300100005
26	Glass sealing cord 8x2 mm	1500 mm	0040208020006
27	Heat-resistant glass (4x338x431)	1 pc	0424637005301

Machine translation – not reviewed.
Unchanged original at the end.


3. Easy control


Control of all three air inlets - primary, secondary, tertiary - using just one regulator.

1. The regulator is in the position designated for ignition (Fig. A). All three air inlets (primary, secondary, tertiary) are open.
2. Setting the Easy control regulator in heating mode (fig. B).
3. The regulator is in the position designated for closing the air inlets (fig. C). No inlet is open (primary, secondary, tertiary). This position is only used when the stove is out of operation, after the heating process has ended.

WARNING

During the heating process, the air inlets must not be closed (Fig. C)! In extreme cases, an explosion in the stove may occur, resulting in glass shattering, embers scattering around the room and a fire.

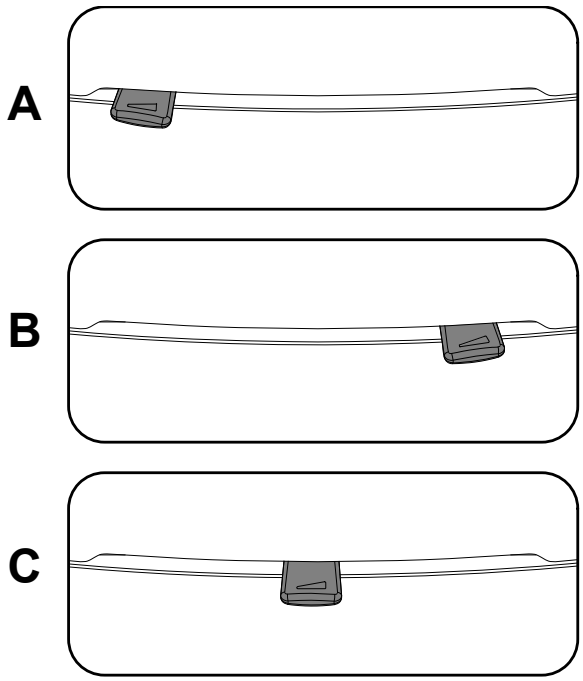

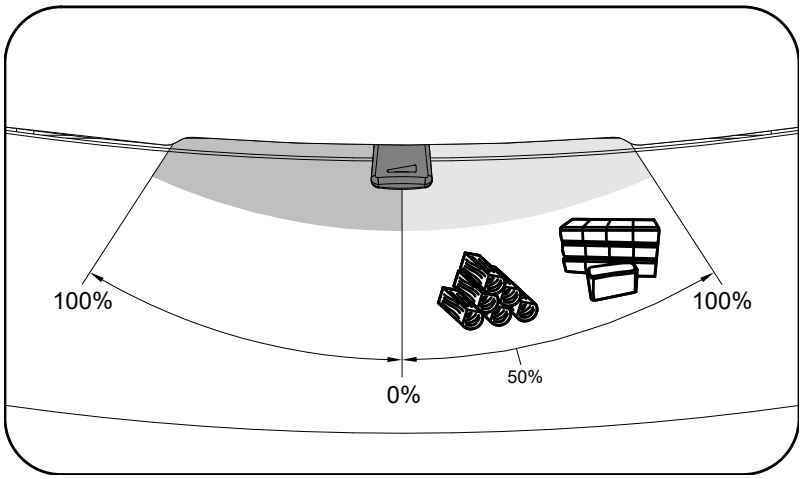


Machine translation – not reviewed.
Unchanged original at the end.

6. Locking the door in the open position

You can lock the firebox door in the open position to make cleaning more convenient. Use the latch to secure the door, see the image below.

WARNING

Never heat in a stove with the door open!

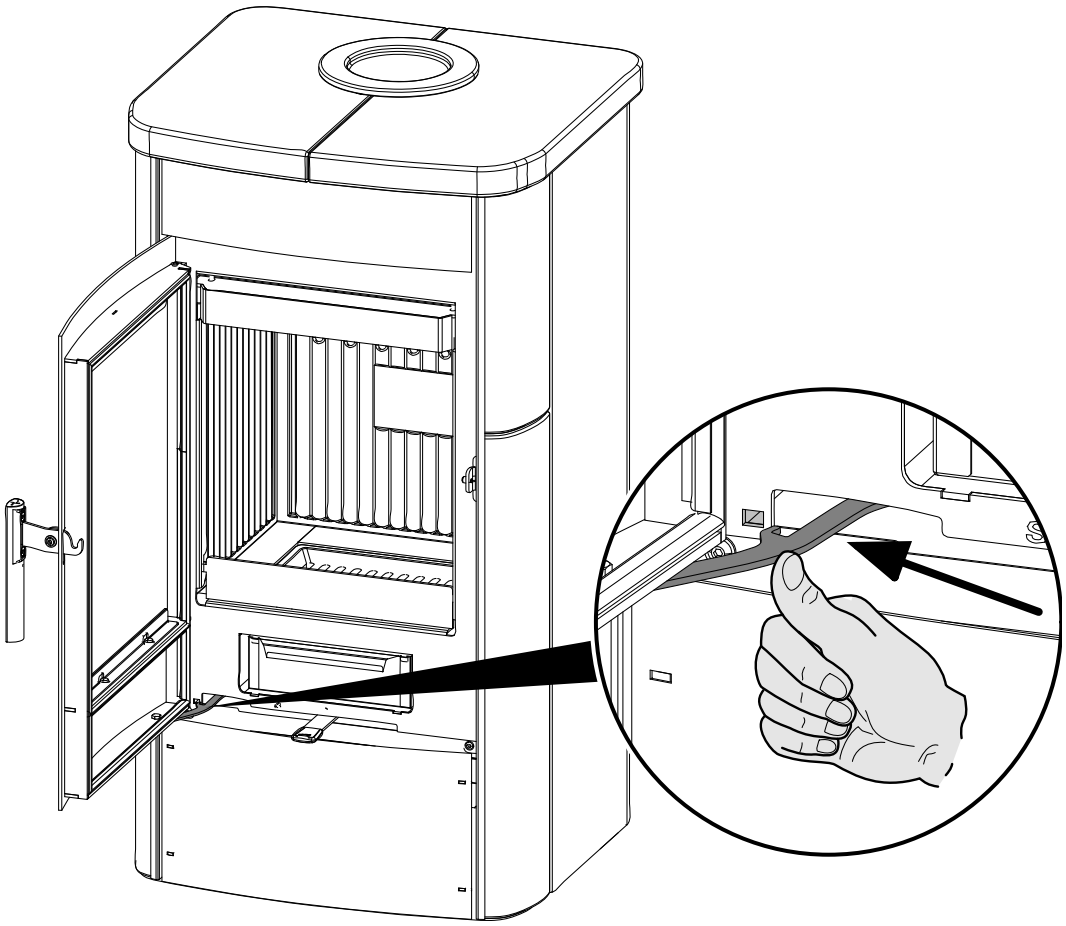

Machine translation – not reviewed.
Unchanged original at the end.

FOXMARK

...DOMA NEJLÍP

Technická dokumentace

CZ

Krbová kamna

Alytus II

0424637731400–

Úvod

Srdečně děkujeme za zakoupení našeho výrobku!

Popis topidla Vás podrobně seznámí s konstrukcí, technickou specifikací a obsluhou topidla. Doporučujeme seznámit se pozorně s těmito údaji. Vyvarujete se tak případných chyb při vlastní montáži a obsluze.

Podrobné podmínky instalace a obsluhy naleznete ve Všeobecném návodu k obsluze (součást dodávky).

Poznámky v textu



Nejdůležitější jsou poznámky nadepsané **VAROVÁNÍ**. Poznámky nadepsané **VAROVÁNÍ** Vás upozorňují na **vážné nebezpečí poškození topidla či poranění.**



Poznámka nadepsaná **Upozornění** Vás upozorňuje na možná poškození Vašeho topidla.



Poznámka nadepsaná **Důležité** Vás upozorňuje na informace důležité k provozu Vašeho topidla.




Poznámka jako taková Vás upozorňuje zcela obecně na informace důležité k provozu Vašeho topidla.


CZ


Obsah

1. Rozměrové schéma 1
2. Seznam náhradních dílů 2
2.1. Celkový rozstřel modelu 2
2.2. Detail A1 4
3. Easy control 5
4. Záměna kouřovodu 6
5. Záměna přívodu vzduchu 7
6. Zajištění dvířek v otevřené poloze 8

1. Rozměrové schéma

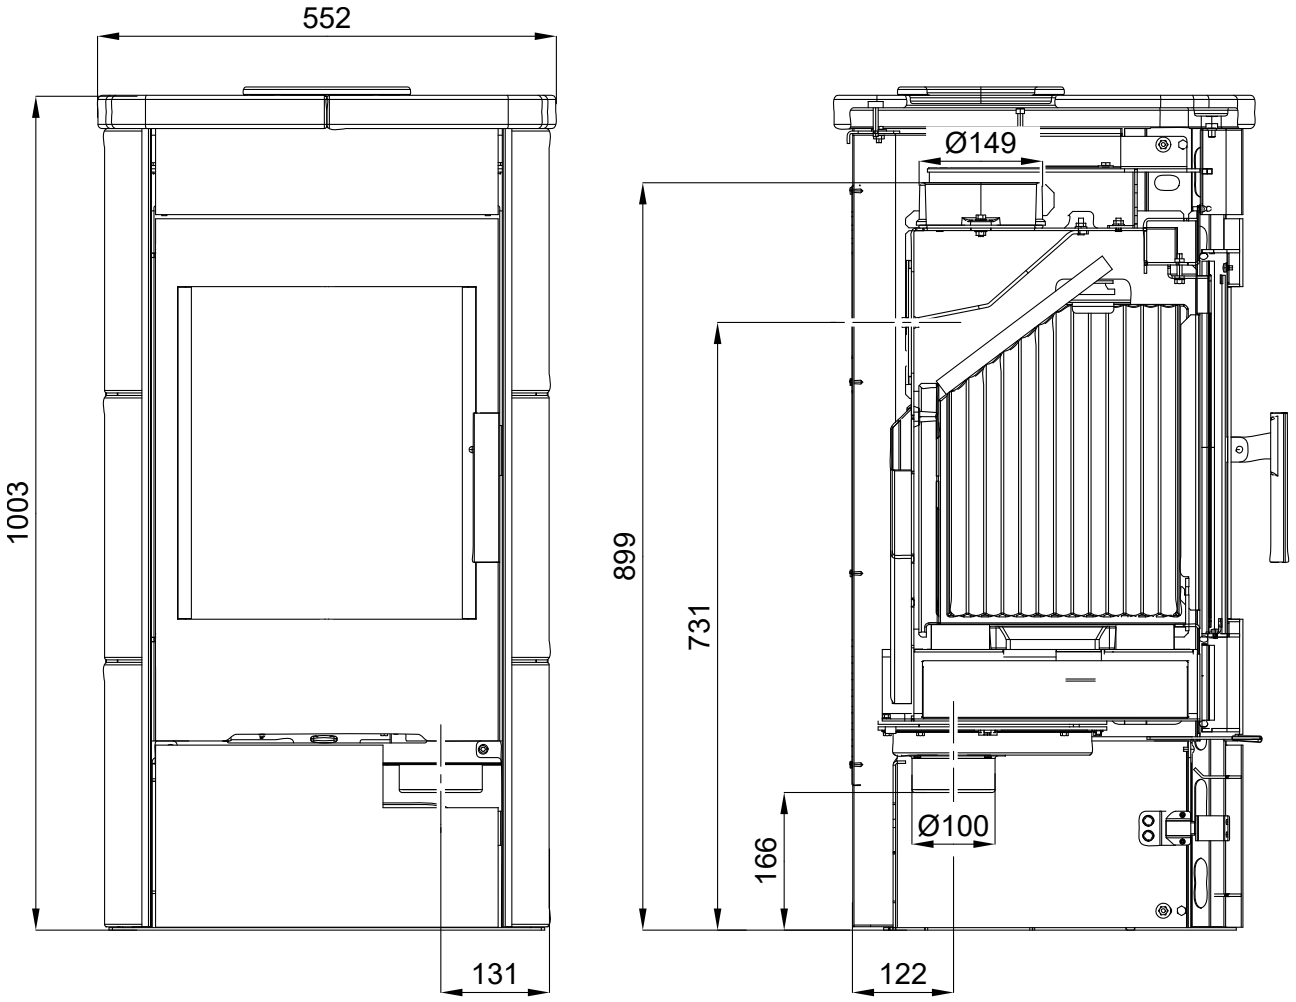


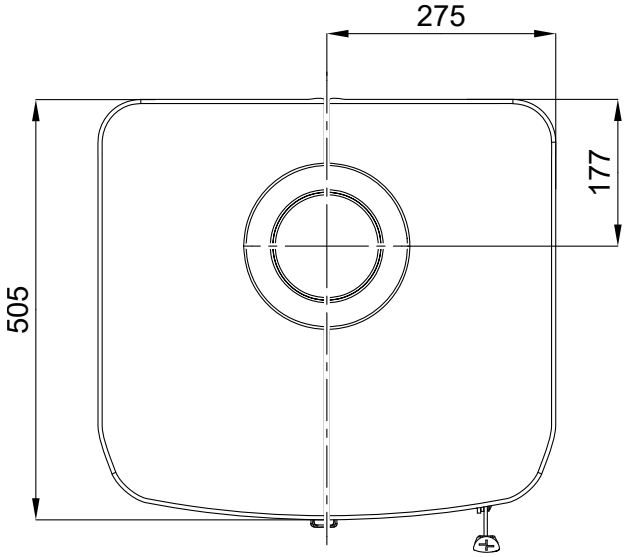

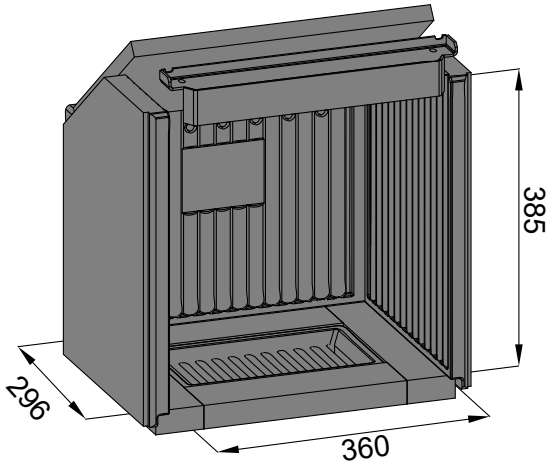

2. Seznam náhradních dílů


2.1. Celkový rozstřel modelu

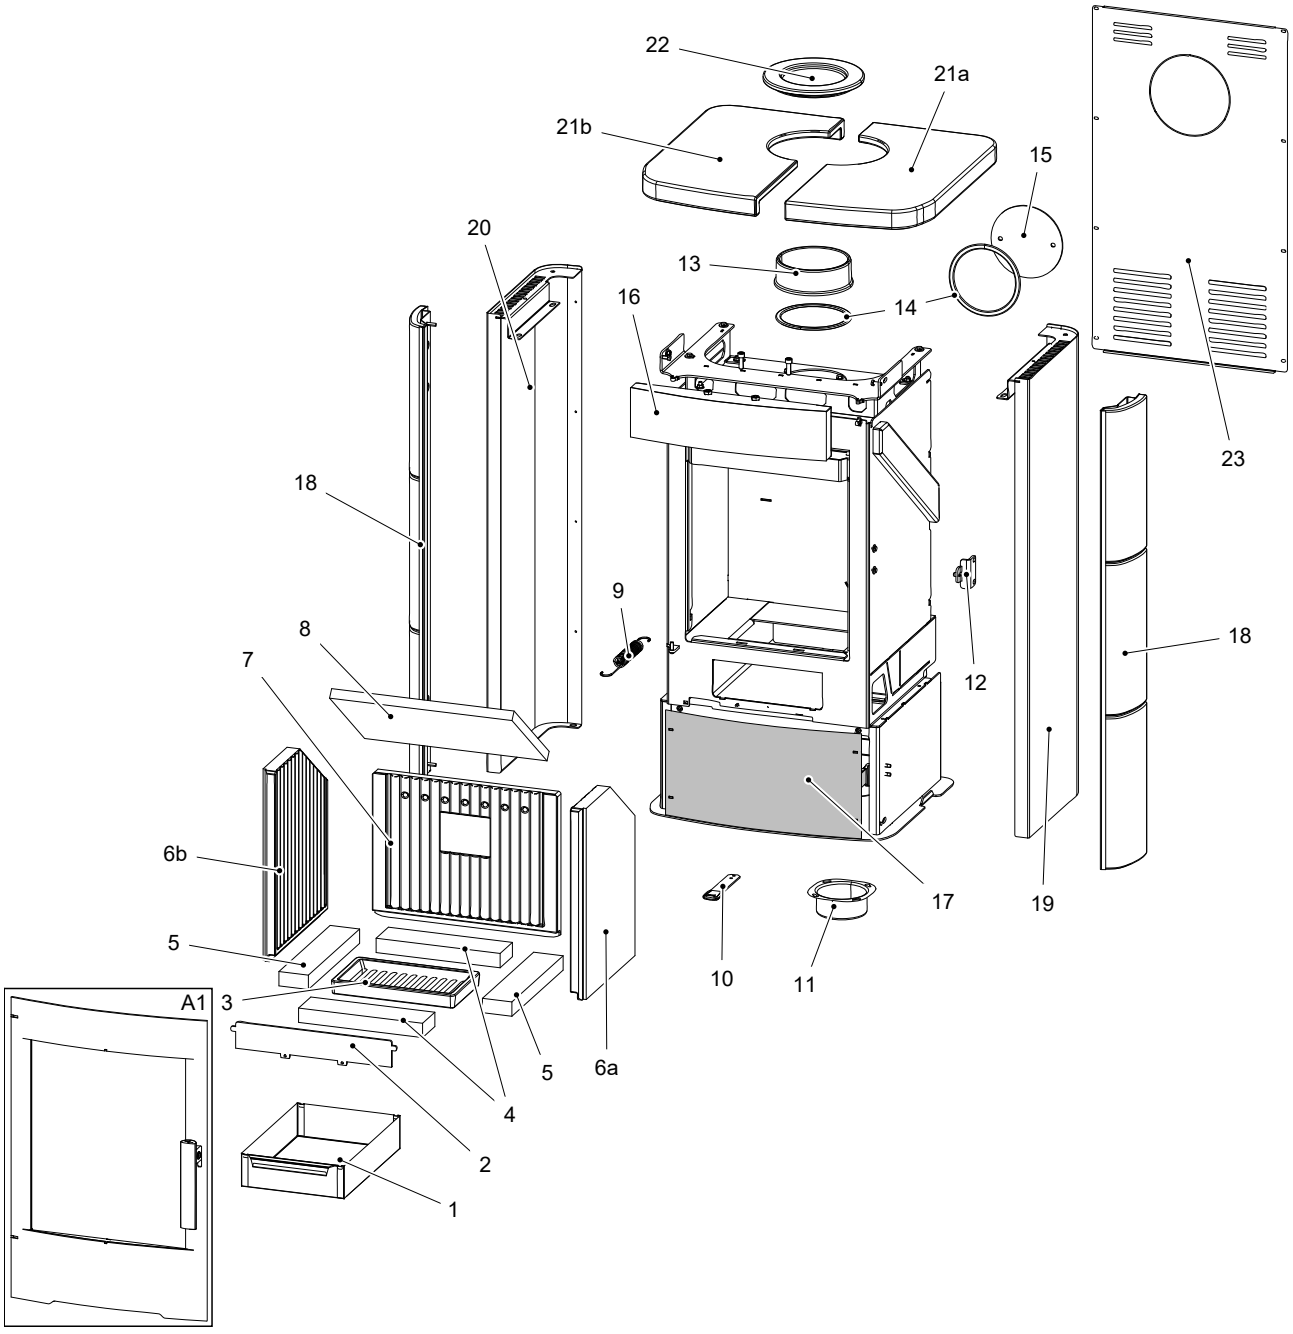

Pozice	Název	Množství	Číslo zboží
	Celkový rozstřel modelu		
A1	Dvířka topeniště (komplet)/černá	1 ks	0424637705300
1	Popelník	1 ks	0424617405600
2	Zábrana/černá	1 ks	0424617405005

3	Rošt/černá	1 ks	0429415005005
4	Cihla 30x70x261	2 ks	0424617405506
5	Cihla 30x62x292	2 ks	0424617405505
6a	Bok pravý (30x300x415)	1 ks	0428315005502
6b	Bok levý (30x300x415)	1 ks	0428315005503
7	Záda (30x390x320)	1 ks	0428315005501
8	Clona (vermikulit)	1 ks	0424617405504
9	Pružina dveří	1 ks	0428612005002
10	Táhlo regulátoru/černá	1 ks	0424637705015
11	Externí přívod vzduchu (Ø100)	1 ks	0088500050008
12	Čep zavírání (komplet)	1 ks	0424637005001
13	Kouřovod/černá	1 ks	0494015005020
14	Těsnění šňůra kouřovodu 10x4 mm	470 mm	0040210040005
15	Záslepka kouřovodu/černá	1 ks	0424617405011
16	Čelní kryt/černá	1 ks	0424637705045
17	Dvířka spodní/černá	1 ks	0424637705920
18	Obklad boční/bílá	2 ks	0424637705101
18	Obklad boční/havana	2 ks	0424637715101
19	Kryt boční pravý/černá	1 ks	0424637705060
20	Kryt boční levý/černá	1 ks	0424637705050
21a	Obklad horní parvý/bílá	1 ks	0434515006200
21a	Obklad horní parvý/havana	1 ks	0434515016200
21b	Obklad horní levý/bílá	1 ks	0434515006201
21b	Obklad horní levý/havana	1 ks	0434515016201
22	Keramické víčko/bílá (zvláštní příslušenství)	1 ks	0435015006100
22	Keramické víčko/havana (zvláštní příslušenství)	1 ks	0435015016100
23	Zadní kryt	1 ks	0424637705903

2.2. Detail A1

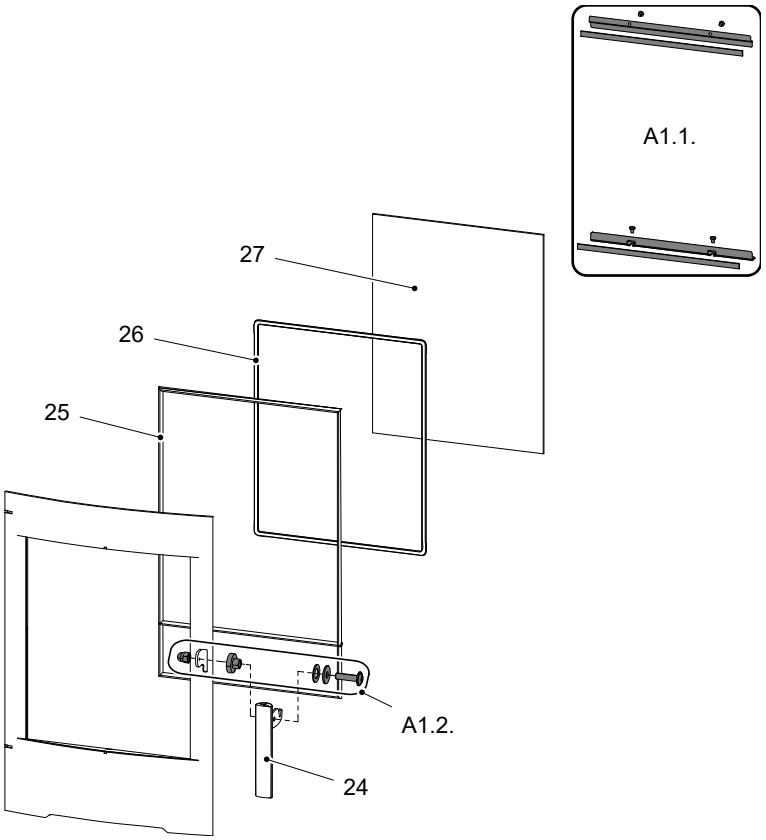

Pozice	Název	Množství	Číslo zboží
	Detail A1		
A1.1.	Držák skla – set/černá	1 ks	0424618005302
A1.2.	Spojovací materiál kliky – set	1 ks	0424637005315
24	Klika	1 ks	0424618005310
25	Těsnící šňůra dveří 10 mm	2210 mm	0040300100005
26	Těsnící šňůra skla 8x2 mm	1500 mm	0040208020006
27	Žáruvzdorné sklo (4x338x431)	1 ks	0424637005301


3. Easy control

Ovládání všech tří přívodů vzduchu-primárního, sekundárního, terciálního-pouze pomocí jednoho regulátoru.

1. Regulátor je v pozici určené pro zátop (obr. A). Jsou otevřeny všechny tři přívody vzduchu (primární, sekundární, terciální).
2. Nastavení regulátoru Easy control v režimu topení (obr. B).
3. Regulátor je v pozici určené pro uzavření přívodů vzduchu (obr. C). Žádný přívod není otevřen (primární, sekundární, terciální). Tato pozice se používá pouze v případě, kdy jsou kamna mimo provoz, po ukončení procesu topení.

VAROVÁNÍ


Během procesu topení nesmí dojít k uzavření přívodů vzduchu (obr. C)! V krajním případě může dojít i k explozi v kamnech a následnému roztříštění skla, rozmetání uhlíků po místnosti a ke vzniku požáru.

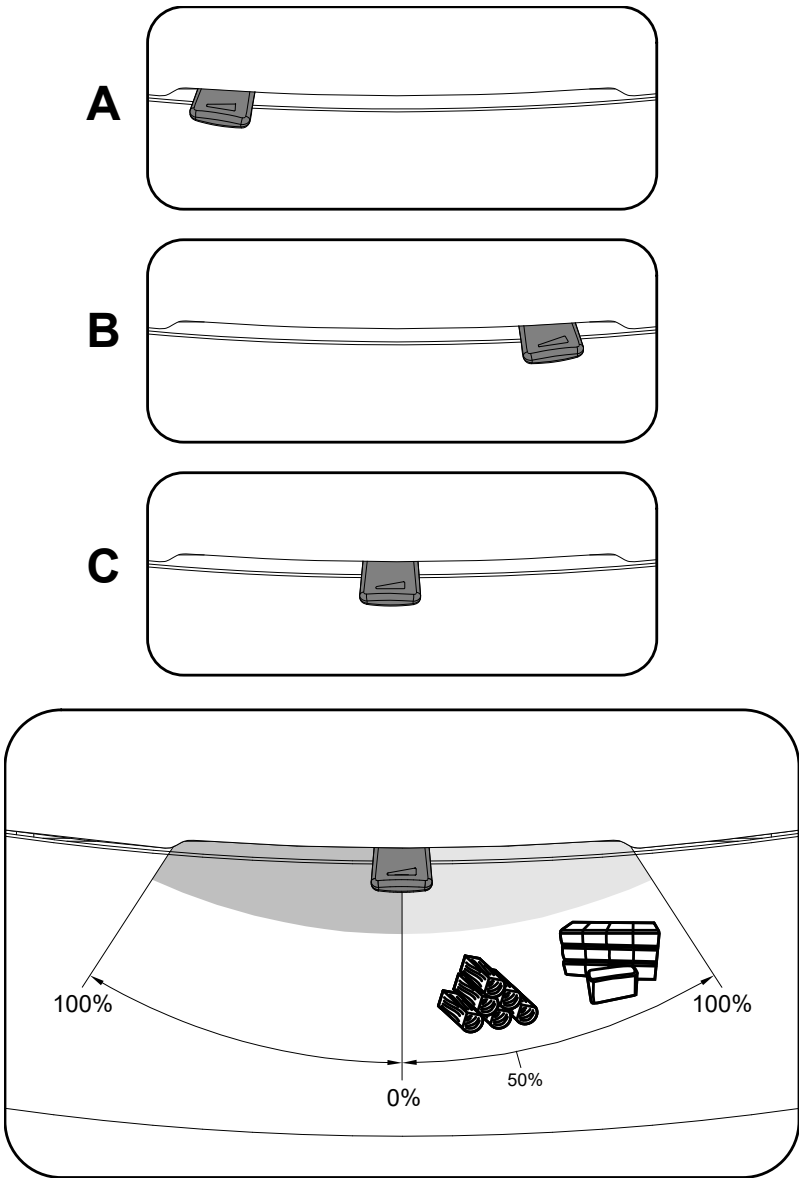

4. Záměna kouřovodu


Poznámka

Keramické víčko poz. 22 není součástí dodávky.

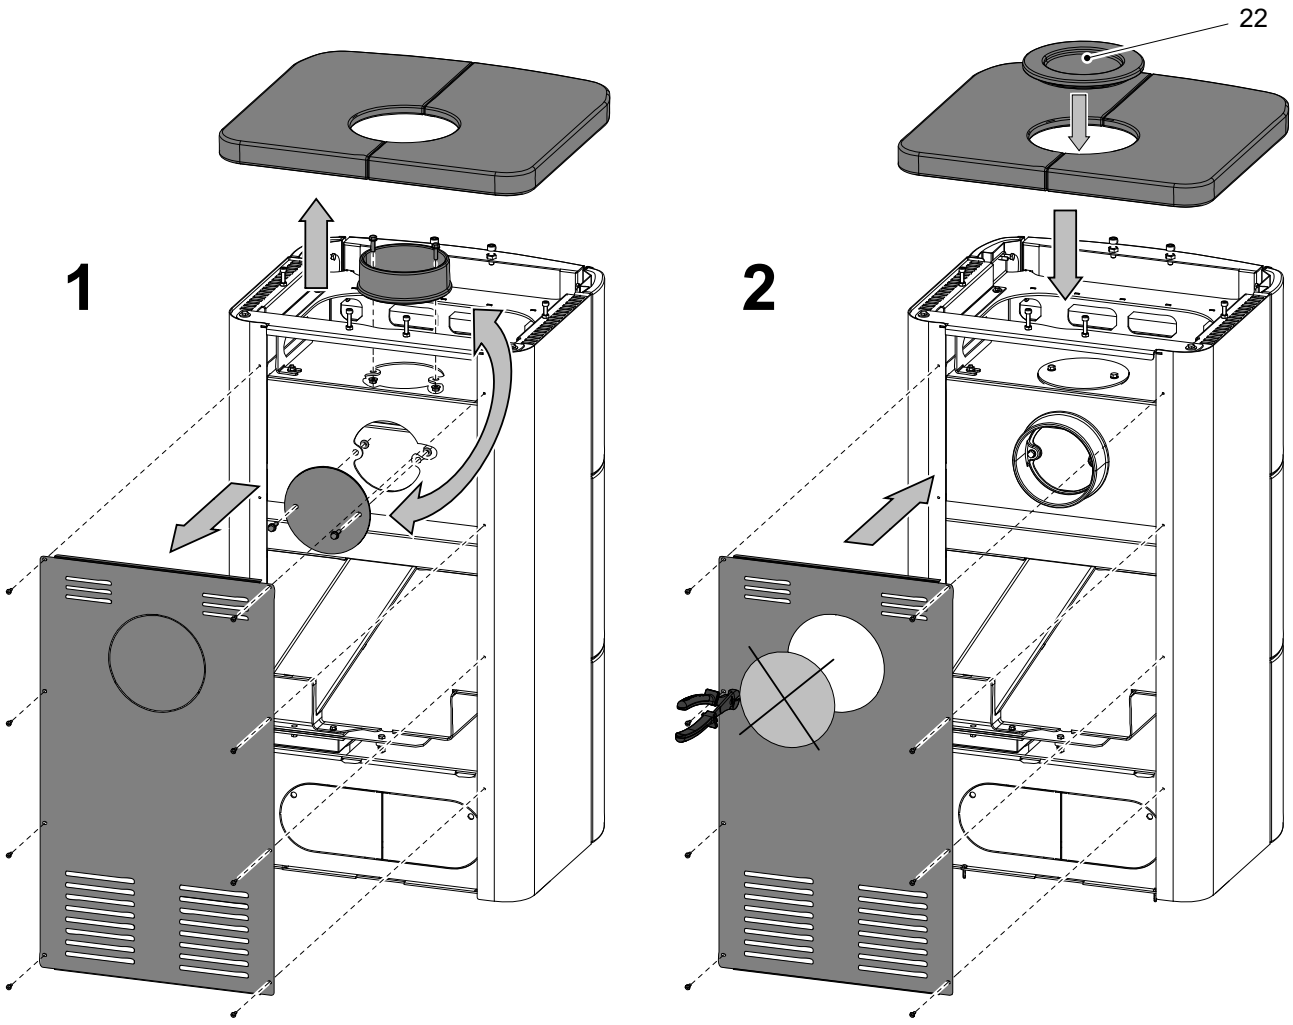


5. Záměna přívodu vzduchu

A

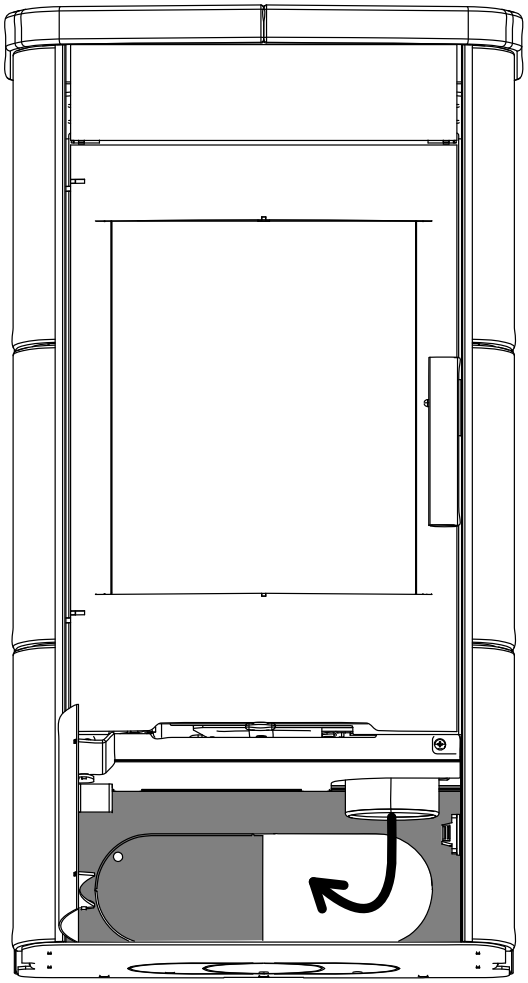

B

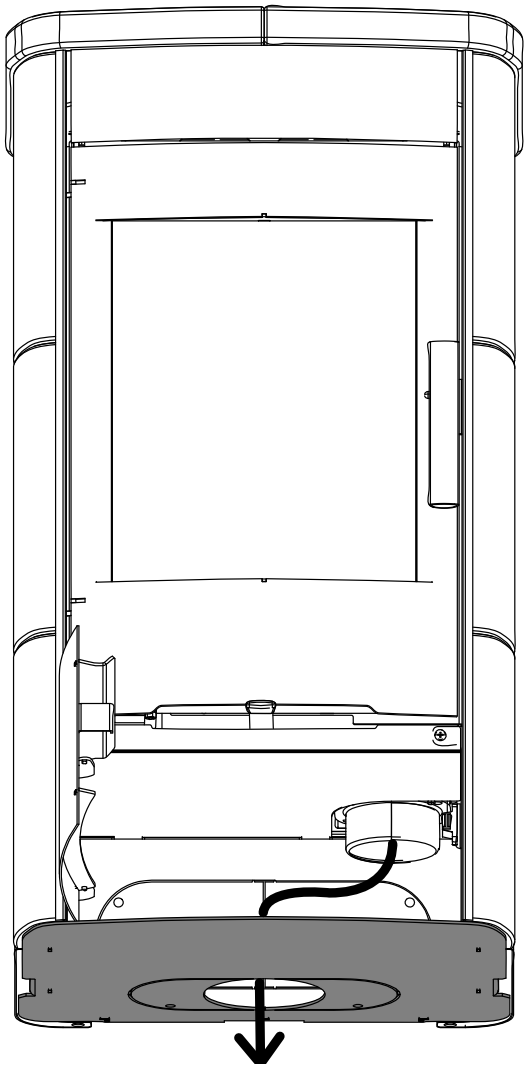

6. Zajištění dvířek v otevřené poloze

Dvířka topeniště můžete zajistit v otevřené poloze, aby bylo čištění pohodlnější. K zajištění dveří použijte západku, viz obrázek níže.

VAROVÁNÍ

Nikdy netopte v kamnech s otevřenými dvířky!

