
Warning!
Handling the insert and its parts requires the cooperation of several people!

Warning!
Handling the insert and its parts requires the cooperation of several people!

Attention!
Manipulowanie za kłobki i jej części wymaga załobrześć dojący liczby osób!

Notice!
For manipulation with insert need more people!

3

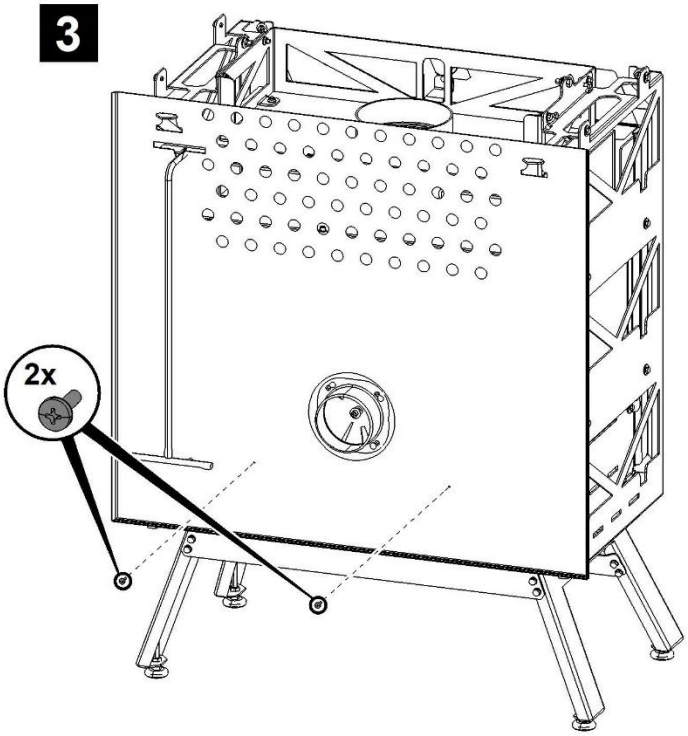


When assembling the tile sides, use mounting plastic pads to define the joints, see the illustration below.

When installing tiled sides, use plastic mounting pads to define the joints, see illustrations below.


Podczas montaż boków kaflowych, podłaży włość montażowych podkładek z twowyrawa do wyznaczenia szczelin, zob. illustration below.

At construction use plastic washer for definition gap. See picture below.


4

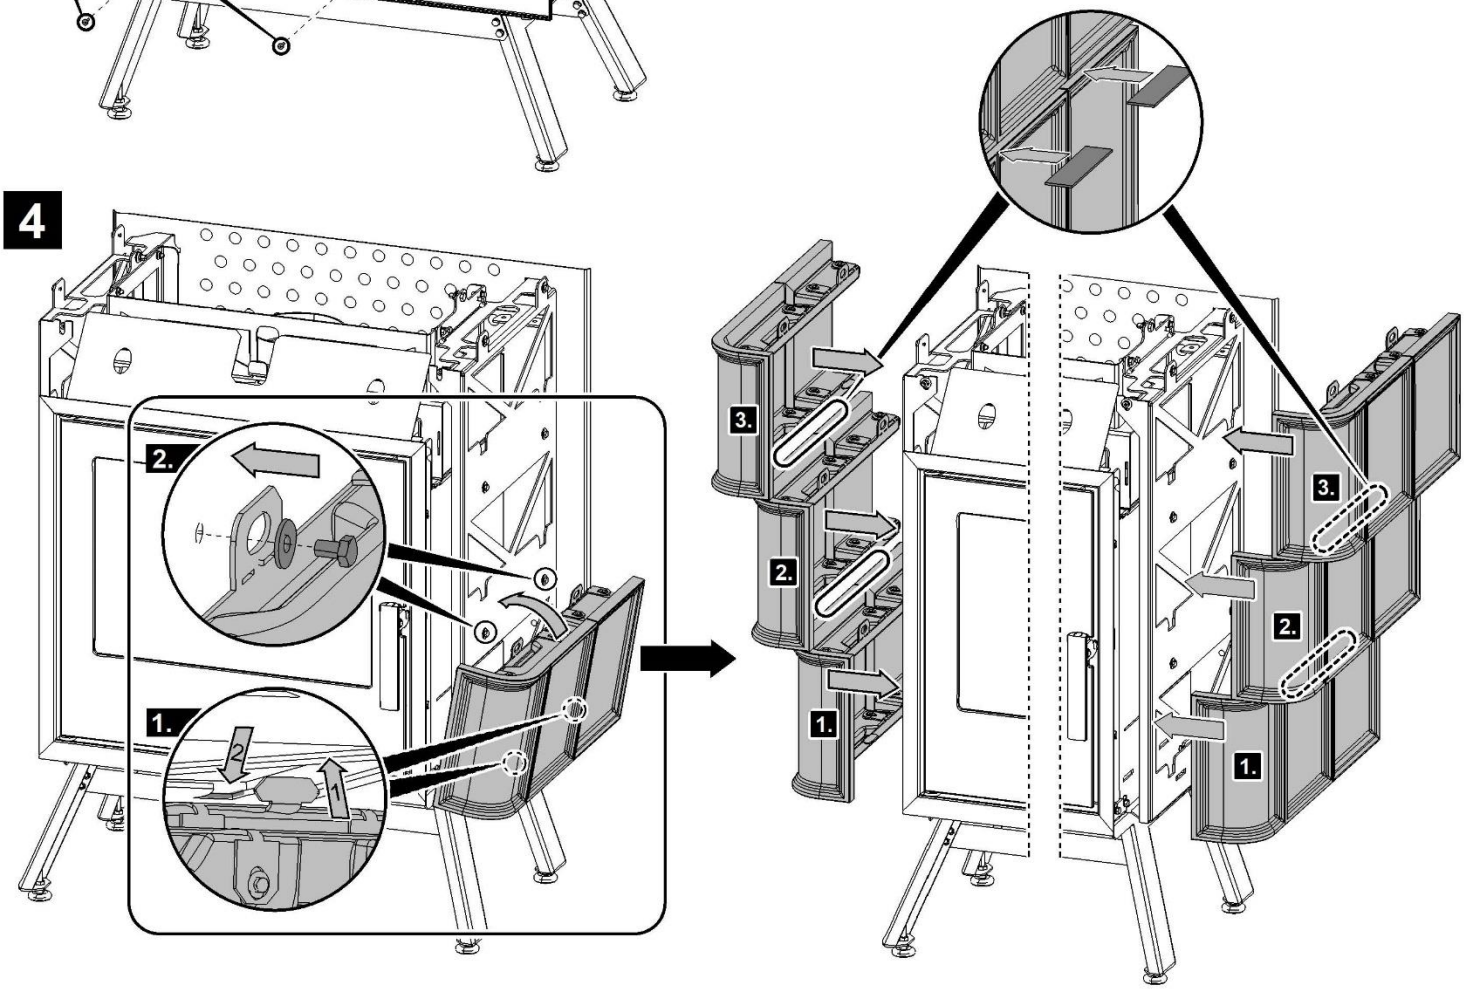

6

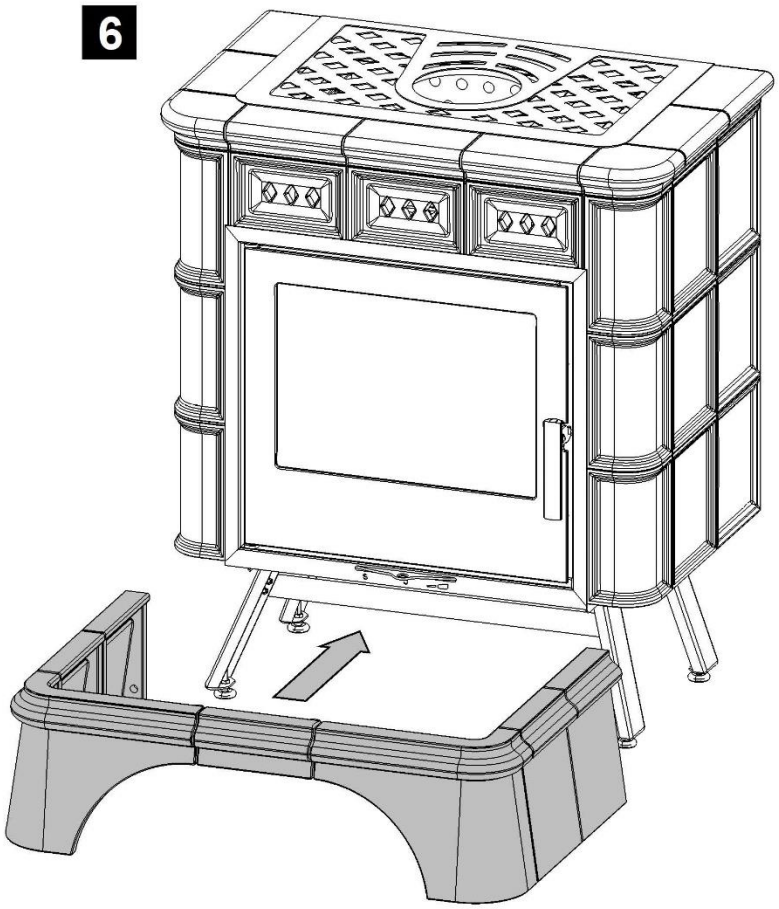

7

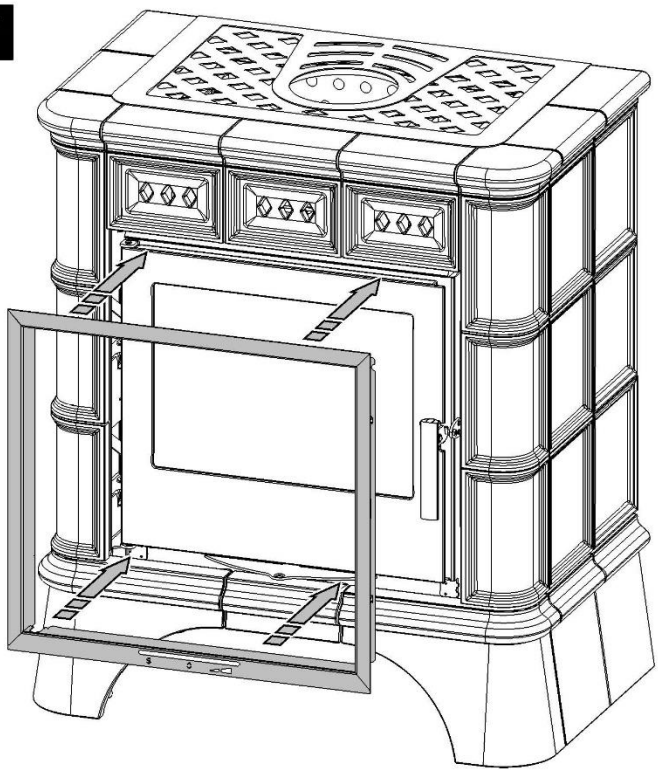

Note

After completing the assembly, silicone the joints of the ceramic sides, cornice, front and plinth (cartridge of white neutral silicone is included in the delivery). Alternatively, use silicone of a similar type at your discretion.

Note

After completing the assembly, silicone the joints of the ceramic sides, cornice, front and plinth (a cartridge of white neutral silicone is included in the delivery). Alternatively, use a similar type of silicone at your discretion.

Attention


After the assembly is finished, the gaps in the ceramic sides, gzymsie, front and plinth should be covered with silicone (cassette with white, neutral silicone is included in the delivery). Or you can use silicone of a similar type at your discretion.


Note


After the installation, fill the joints of the ceramic sides, cornice, front and plinth with silicone (white neutral silicone cartridge included). Alternatively, use silicone of a similar type at your discretion.

HAAS+SOHN

Montážní návod - Montážný návod - Instrukcja montażu - Assembly Instructions
MATERA

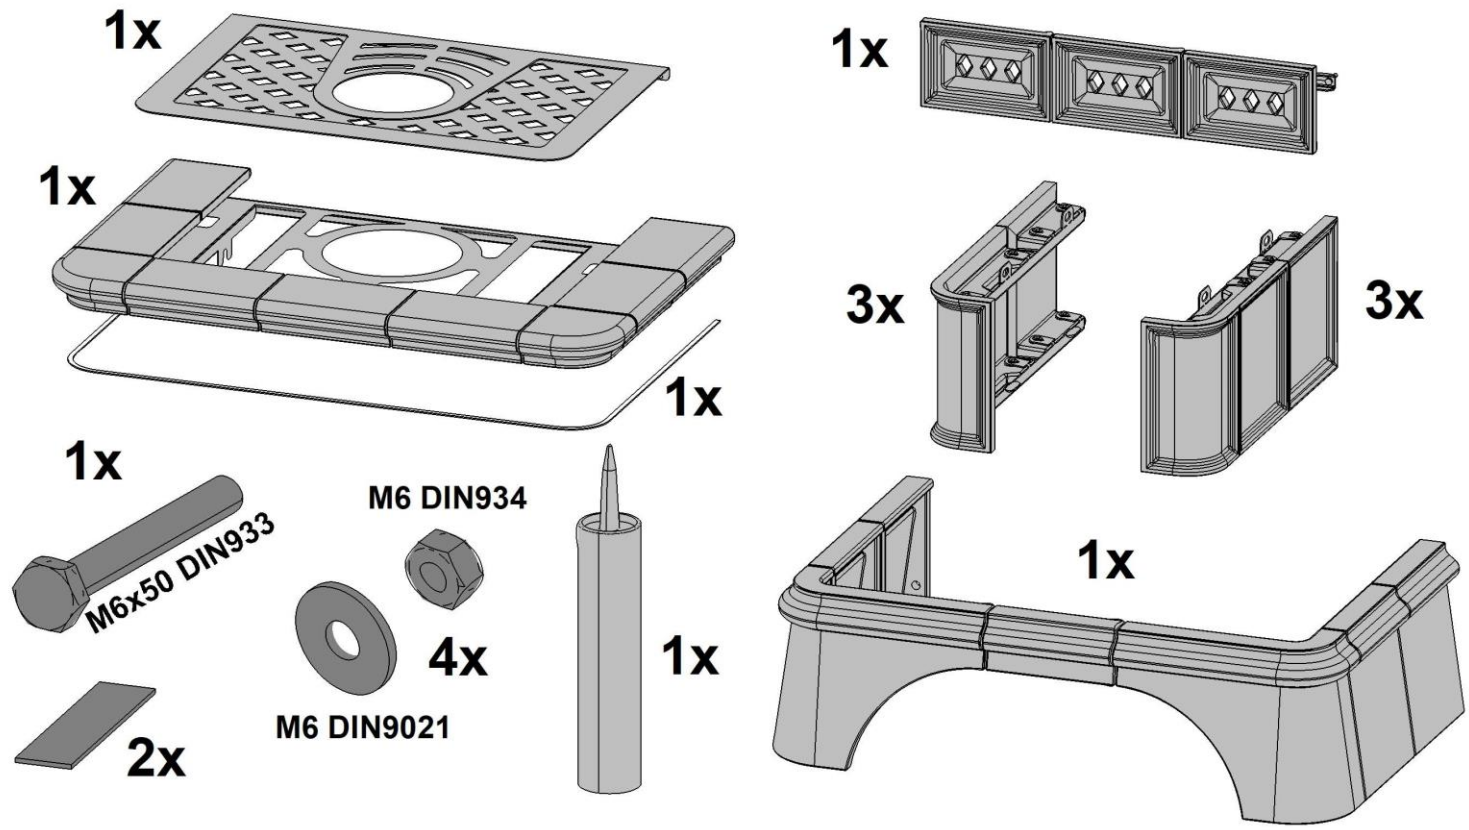

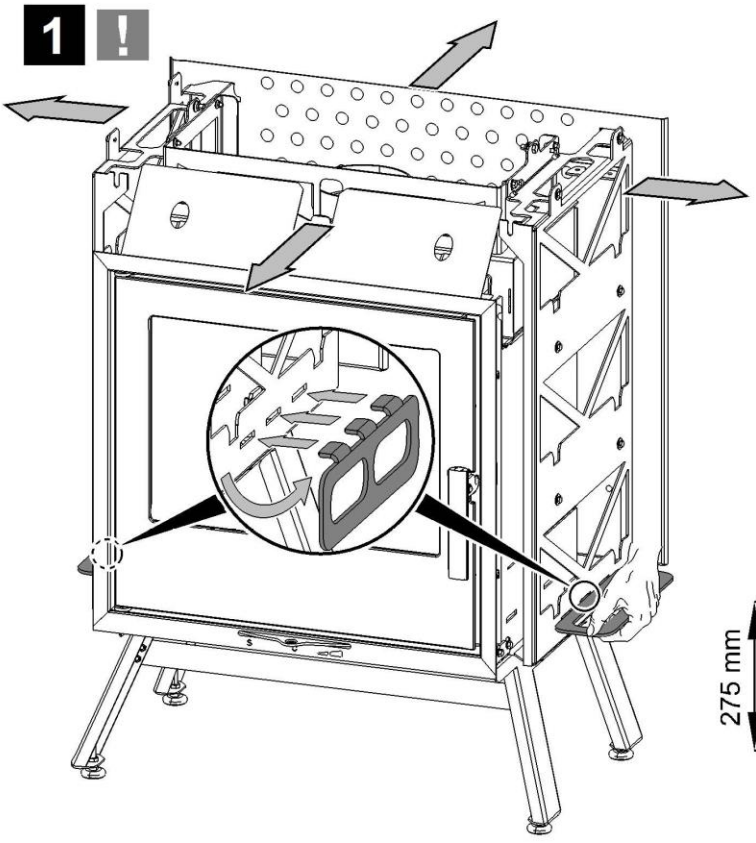

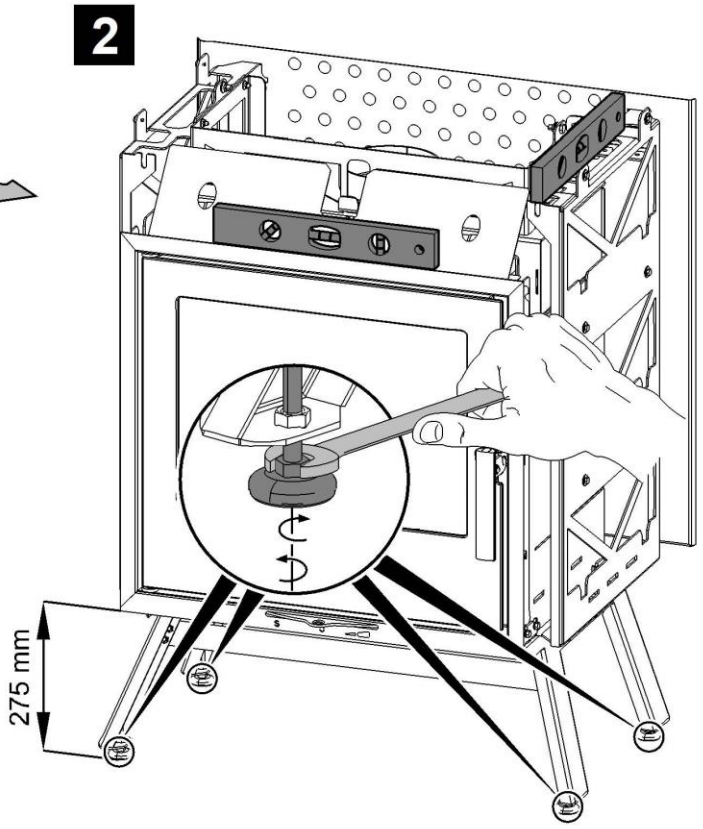


Upozornění!
Manipulaci s vložkou a jejími částmi vyžaduje spolupráci více osob!

Upozornenie!
Manipuláciu s vložkou a jej časťami vyžaduje spoluprácu viacerých osôb!

Uwaga!
Manipulowanie za wkładki i jej części wymaga współpracy większej liczby osób!

Notice!
For manipulation with insert need more people!

3

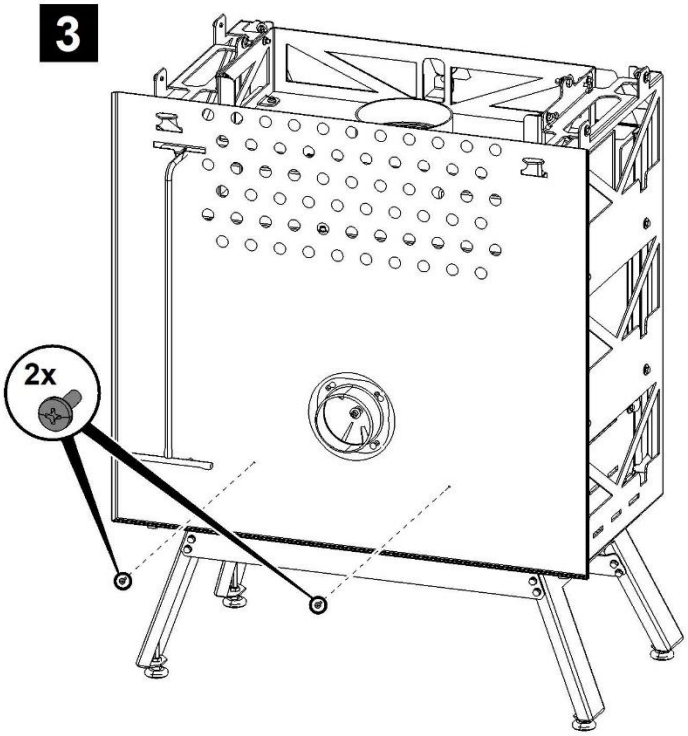


Při montáži kachlových boků použijte montážní plastové podložky pro vymezení spár, viz ilustrace níže.


Pri montáži kachľových bokov použite montážne plastovej podložky pre vymedzenie škár, viď ilustrácie nižšie.


Podczas montażu boków kaflowych, należy użyć montażowych podkładek z tworzywa do wyznaczenia szczelin, zob. ilustrację poniżej.


At construction use plastic washer for definition gap. See picture below.


4

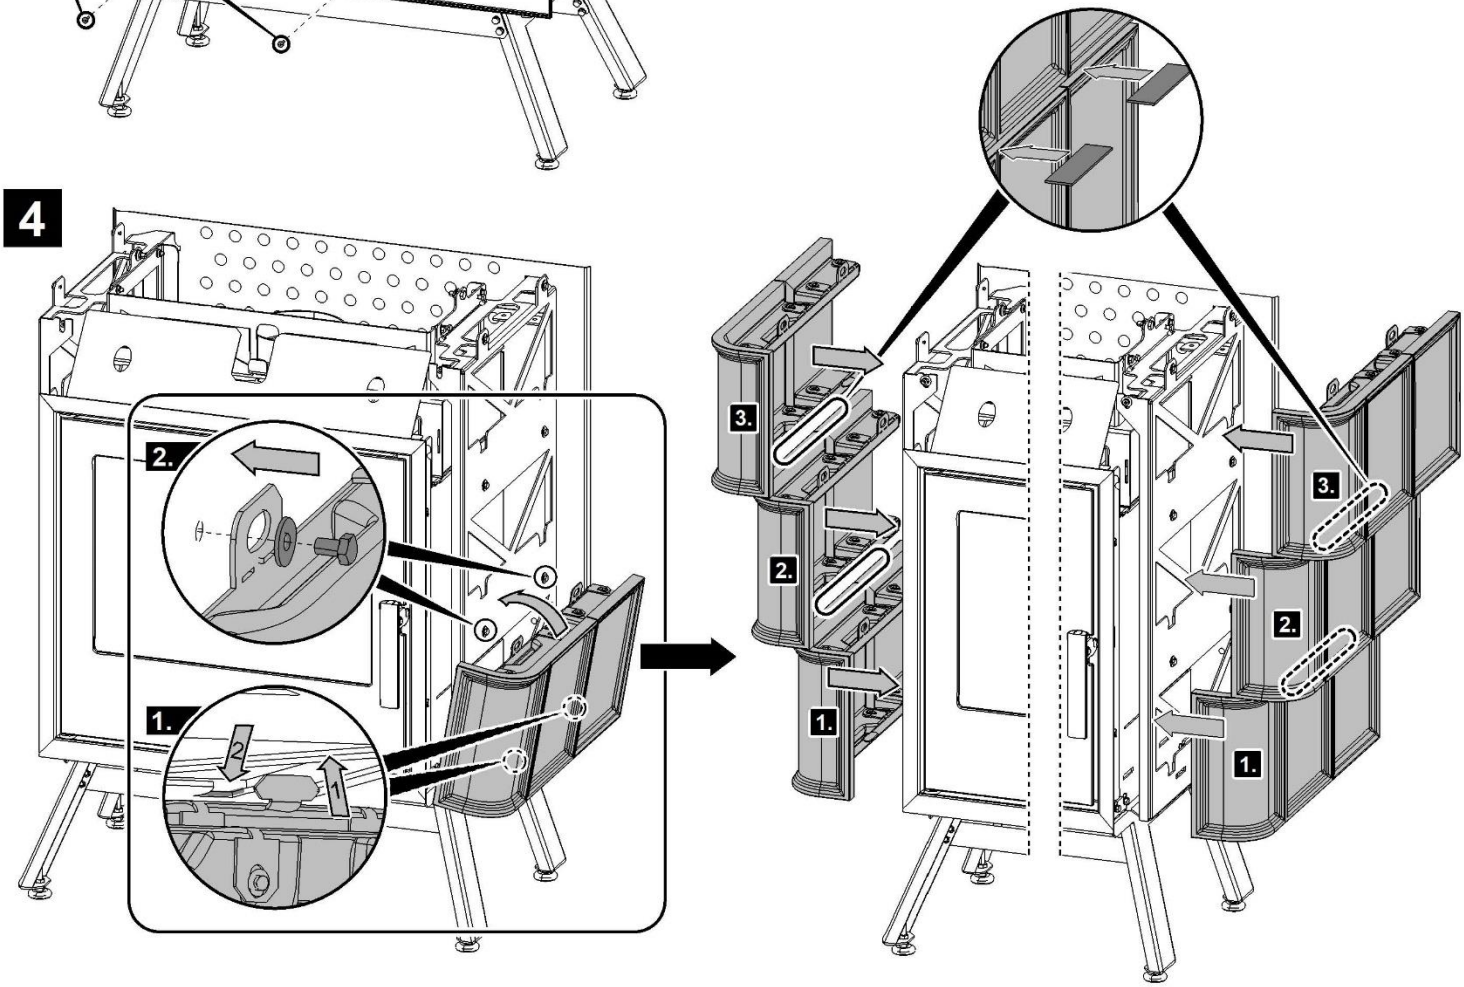

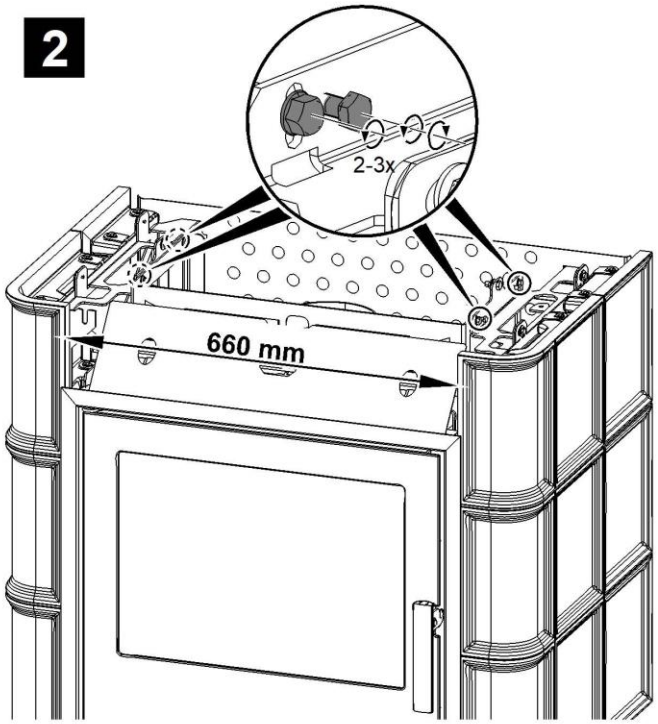

2
2-3x
660 mm

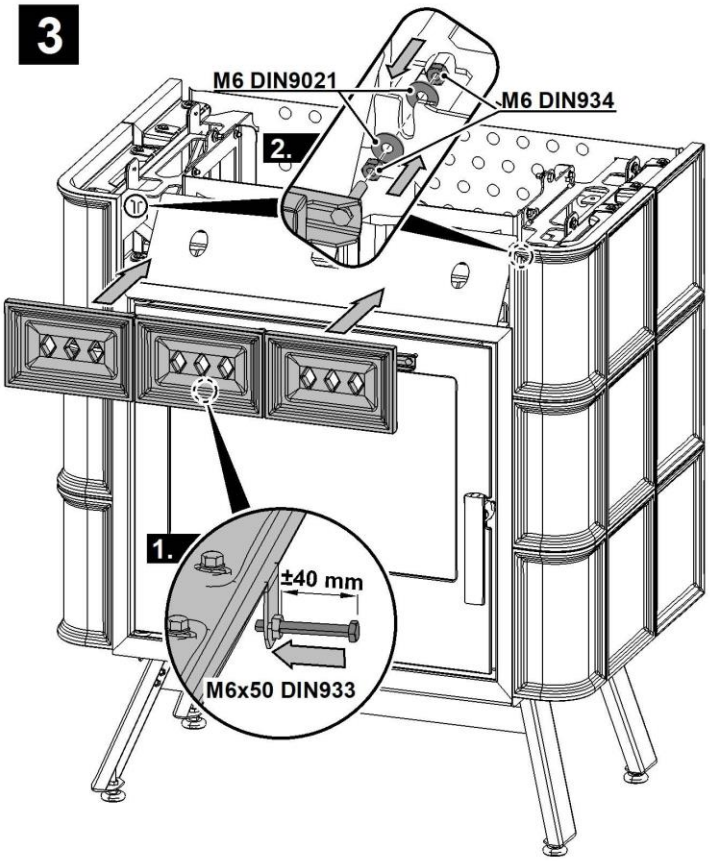
3
M6 DIN9021
M6 DIN934
2.
1.
±40 mm
M6x50 DIN933

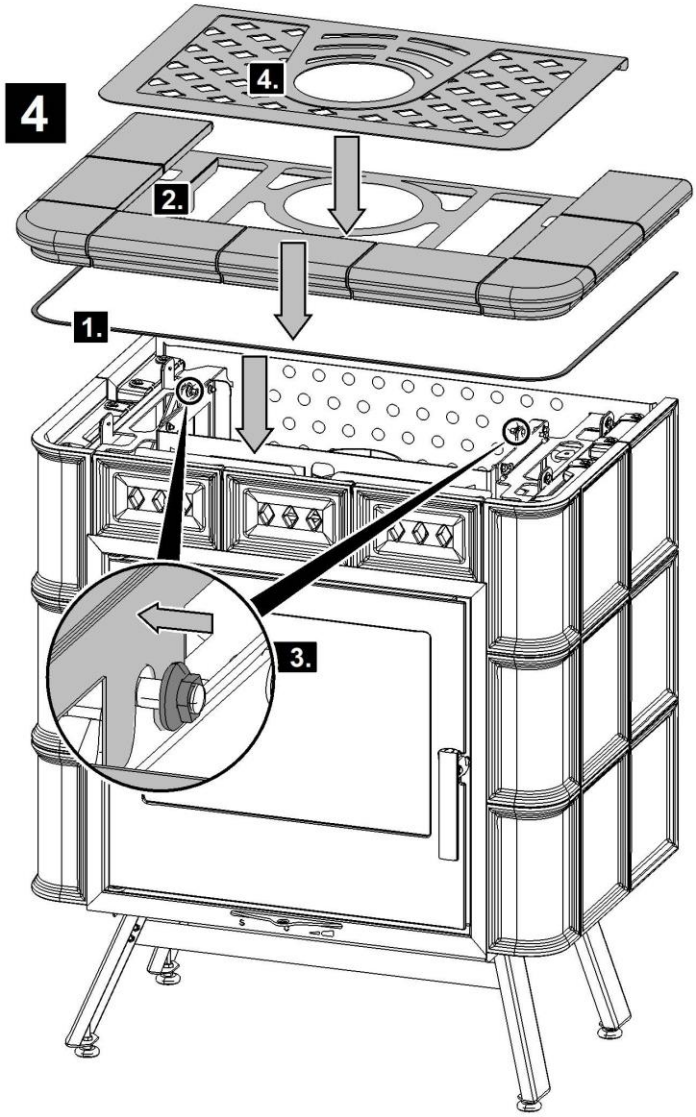

4
4.
2.
1.
3.

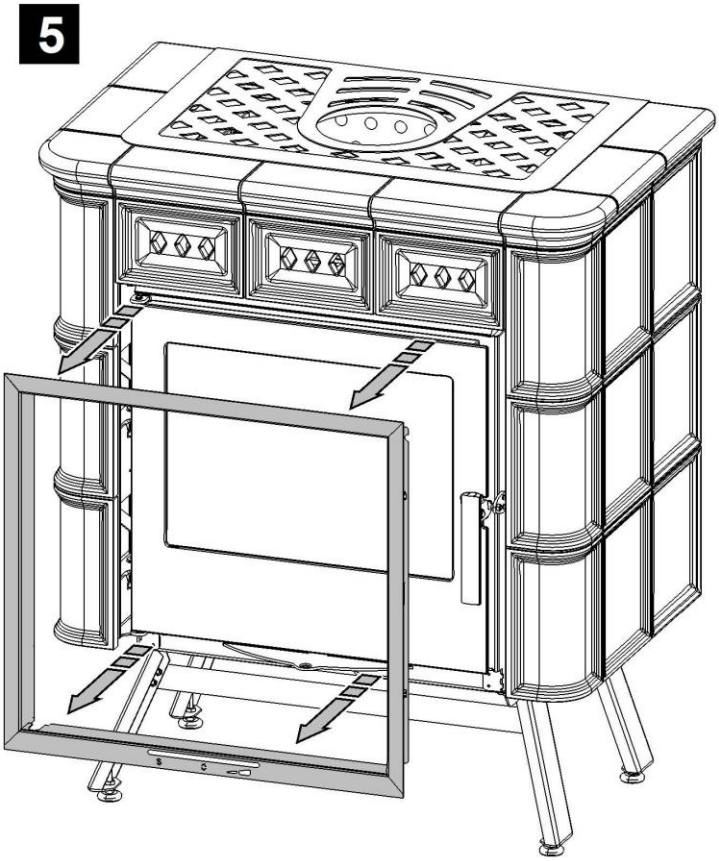
5

6

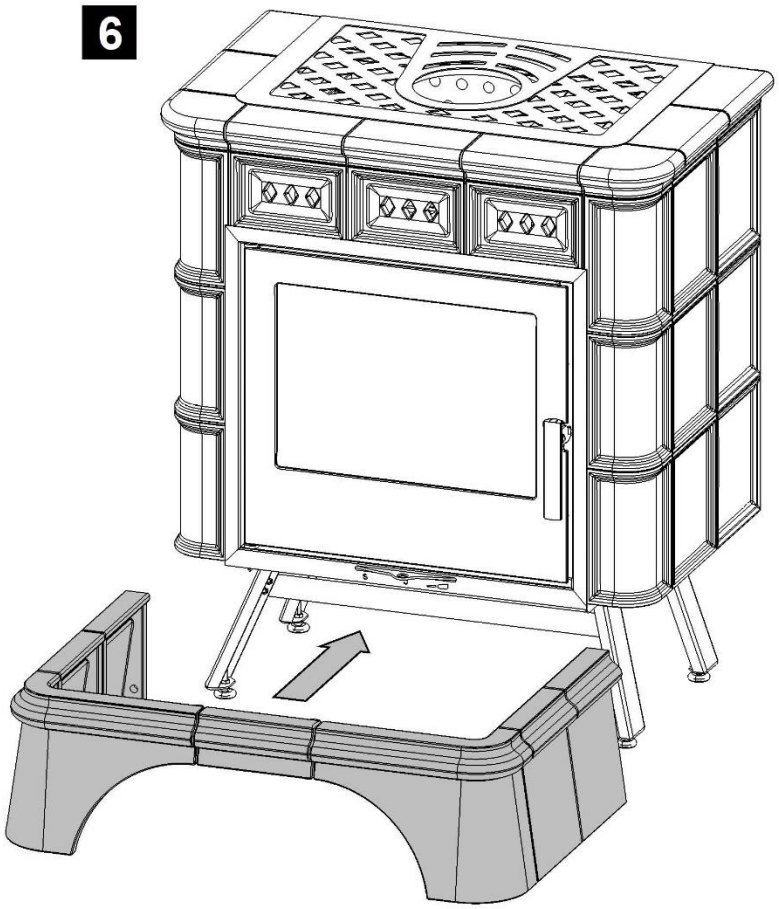

7

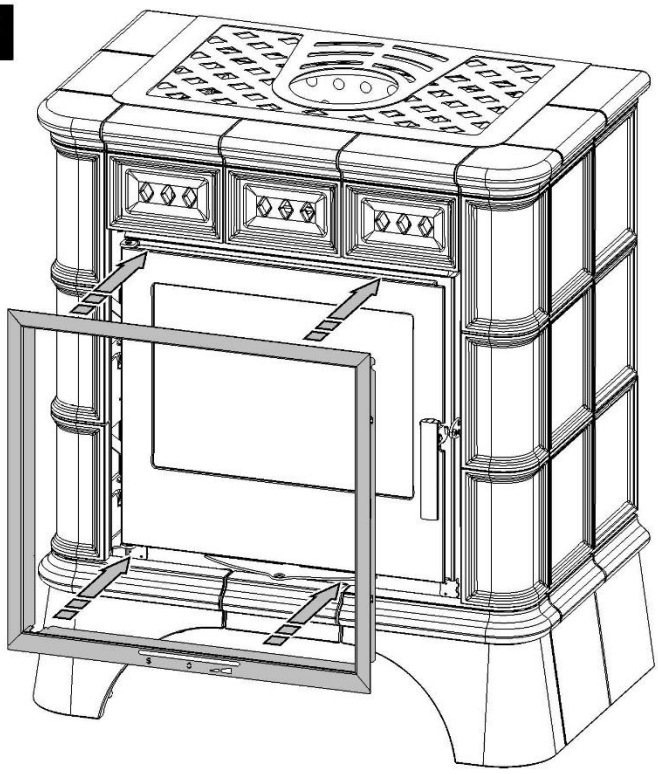

Poznámka

Po dokončení montáže zasilikonujte spáry keramických boků, římsy, čela a soklu (kartuše bílého neutrálního silikonu je součástí dodávky). Případně využijte silikon podobného typu dle Vašeho uvážení.

Poznámka

Po dokončení montáže zasilikónujte škáry keramických bokov, rímsy, čela a sokla (kartuša bieleho neutrálneho silikónu je súčasťou dodávky). Prípadne využite silikón podobného typu podľa vlastného uváženia.

Uwaga

Po zakończeniu montażu należy zakryć silikonem szczeliny w ceramicznych bokach, gzymsie, froncie i cokole (kaseta z białym, neutralnym silikonem wchodzi w skład dostawy). Ewentualnie można użyć silikonu podobnego typu, wg Państwa uznania.

Note

After the installation, fill the joints of the ceramic sides, cornice, front and plinth with silicone (white neutral silicone cartridge included). Alternatively, use silicone of a similar type at your discretion.